 


Technical Description And User Manual

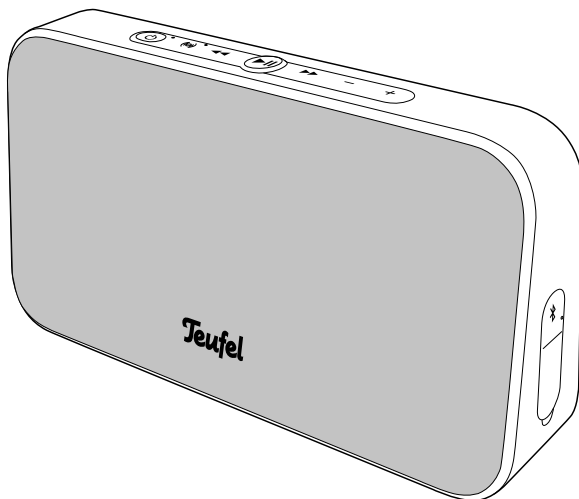

Motiv Go

Portable Bluetooth® speaker

Teufel

Contents

General Information	3	Operation	17
Notice	3	Activating and deactivating.....	18
Trademarks	3	Volume.....	18
Original packaging	3	Dynamore®.....	18
Complaints	4	Bluetooth®	19
Contact	4	AUX playback.....	23
Proper use	5	Care and cleaning	24
For your safety	6	Troubleshooting.....	25
Signal terms	6	Technical data	27
Safety notes	7	Declaration of conformity.....	27
Package contents.....	12		
Controls and connections	12		
The rechargeable battery.....	14		
Charging the battery ...	14		
Charge level.....	15		
Setup.....	16		
Location tips.....	16		

General Information

Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.


© Lautsprecher Teufel GmbH

Version 1.0

February 2020

Trademarks

© All trademarks are the property of their respective owners.

 **Bluetooth®** The Bluetooth® word mark and Bluetooth® symbol are registered trademarks of Bluetooth SIG, Inc. and any use by Lautsprecher Teufel is licensed.

Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of the speakers WITH THE ORIGINAL PACKAGING.

Empty boxes are not available!

Complaints

In case of a complaint we will need the following information to process your enquiry:

1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document.

2. Serial number or batch number

Located in the cover of the connections for AUX and power supply.

Thank you for your support!

Contact

Please contact our customer service department with any questions, suggestions, or complaints:

**Lautsprecher Teufel
GmbH**

**BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)**

Telephone:
00800 200 300 40
(toll- free)

Fax:
+49 30 300 930 930

Online support:
[www.teufelaudio.com/
service](http://www.teufelaudio.com/service)

Contact form:
[www.teufelaudio.com/
contact](http://www.teufelaudio.com/contact)

Proper use

The speaker, which is protected against water jets according to IPX5, is designed for the playback of music and speech from an external player via Bluetooth®.

Only use the speaker as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by improper use.

The speaker is intended for private use.



Before operating the speaker, please read the safety notes and user manual carefully. Only in this way, can you ensure that all functions are used in a safe and reliable manner. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

For your safety

Signal terms

You can find the following signal terms in this user manual:

WARNING

This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.

CAUTION

This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

NOTICE

This signal term warns you of potential damage.

Safety notes

This chapter contains general safety notes which you should always observe to protect yourself and third parties. Also observe the warning notes in each chapter of this user manual.

WARNING

Touching live parts can result in severe injury or death.

- *When connecting the mains adapter, make sure that the correct voltage is present. You can find more information about this on the rating plate.*
- *Check the device regularly for damage. Do not use the device if its housing is defective or exhibits other visible damage.*
- *This device can only be completely disconnected from the grid by pulling the mains adapter. Therefore, make sure that the mains adapter is always easily accessible.*
- *If the device emits smoke, smells burnt or produces unusual sounds, immediately disconnect it from the mains and do not operate it further.*
- *Never open the device housing. Repairs may only be carried out by an authorised specialist workshop. Only parts that match the original specifications may be used.*
- *Only use the accessory products specified by the manufacturer.*
- *Never modify the device. Unauthorised modifications may affect the safety and functionality.*

⚠ WARNING

An unsuitable setup location may result in injury and damage.

- *If the speaker is not securely mounted, do not use it in vehicles, in unstable locations, on wobbly tripods or furniture, on underdimensioned brackets etc. The speaker may tip or fall over and cause injury to persons or be damaged itself.*
- *Position the speaker in such a way that it cannot be knocked over inadvertently and make sure that the cables do not pose a tripping hazard.*
- *Do not use the device in environments where there is a risk of explosion.*
- *Only use the Bluetooth® function in locations where wireless radio transmission is allowed.*

⚠ WARNING

Children can become trapped in the plastic wrapping when playing and suffocate.

- *Do not allow children to play with the device or the plastic wrapping. There is a danger of suffocation.*
- *Never allow children to operate electrical equipment unsupervised.*

⚠ WARNING

Lithium rechargeable batteries can explode if handled improperly.

- *You must not heat or short circuit rechargeable batteries or dispose of them in fire.*
- *Do not expose the rechargeable batteries to direct sunlight.*
- *Do not place the speaker near heat sources (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).*

 **CAUTION**

 **Extended listening at high volumes may lead to hearing loss.**

To avoid damage to health, avoid extended listening at high volumes.

- *When the volume is set high, always keep a certain distance from the device and never place your ears directly on the speaker.*
- *If a speaker is set to full volume, this may produce very high sound pressure. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk. Set your signal source device volume control to a low setting before turning on the power.*

 **CAUTION**

This product contains magnetic material.

- *If necessary, consult your physician and ask for effects on implants such as pacemakers or defibrillators.*

NOTICE

The Motiv Go is protected against water jets (IPX5).

- *The jet water protection according to IPX5 is only effective if the cover cap (15) is firmly closed.*
- *Normal rain and a few splashes from showering won't cause any damage, but you should avoid spraying it directly with a hose.*
- *If the Motiv Go falls into a rain puddle or an other flat water body, nothing will happen if you recover it right away. However, the device is not suitable for a splashdown or diving!*
- *You should generally avoid contact with salt water.*

NOTICE

Gross misuse and incorrect care are the main reasons for damage to high-performance rechargeable batteries.

- *Avoid deep discharge of under 10 % for optimal rechargeable battery power.*
- *Recharge your rechargeable battery frequently.*
- *Store your rechargeable battery in a cool but frost-free area, ideally at 15 °C. Higher temperatures result in a higher rate of self-discharge and shorten the intervals between charges.*
- *Do not expose the rechargeable battery to direct sunlight or other sources of heat. This applies in particular when charging the battery.*

- *A deep discharge damages the rechargeable battery cells. The most frequent cause of deep discharge is prolonged storage or failure to use a partially discharged rechargeable battery. Only store the rechargeable battery once it is fully charged.*



Old devices must not be disposed of with household waste!

If the Motiv Go is no longer operational, every consumer is required by law to dispose of used devices separately from household waste, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.

For this reason, electrical equipment is marked with the adjacent symbol.

 
Package contents

(1) Motiv Go

 
(2) Mains adapter

- Check that all items have been delivered and that nothing is damaged. If you find any damage, do not operate the device; instead contact our customer service department (see „Contact“ on page 4).
- Please keep the packaging for the duration of the warranty period.

 
(1)

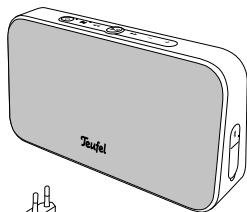



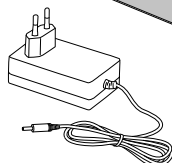



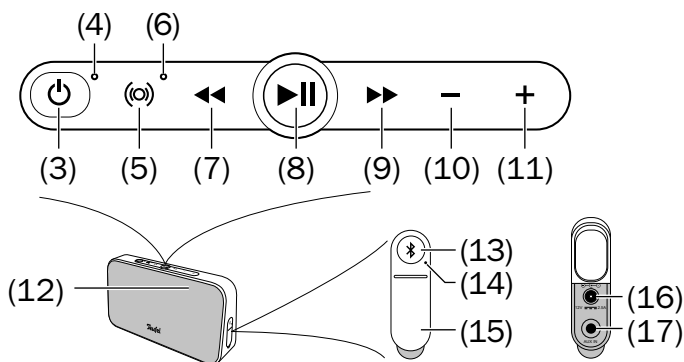


(2)



Controls and connections



- (3)** Push and hold  for 2 seconds: turn the device on and off; tap  during operation: display battery level with LED **(4)**
- (4)** LED indicator for charging and battery charging level
- (5)**  activate/deactivate Dynamore® stereo widening
- (6)** Dynamore® LED
- (7)**  control Bluetooth® device: skip back
- (8)** Tap : playback/pause; long push: activate the smartphone's voice assistant; briefly push in the event of a phone call: accept call/hang up; long push (2 sec.): reject call
- (9)**  control Bluetooth® device: skip forward
- (10)** – decrease the volume
- (11)** + increase the volume
- (12)** Microphone
- (13)** briefly push : select the Bluetooth® source and switch between two BT devices; push and hold  for 2 seconds: start Bluetooth® pairing; push and hold  for 10 seconds: clear all Bluetooth® connections
- (14)** Bluetooth® LED
- (15)** Cover cap
- (16)** Mains adapter connection
- (17)** AUX IN, stereo input with a 3.5 mm jack plug socket

The rechargeable battery

CAUTION

Batteries (particularly lithium batteries) can explode if used improperly.

 
- You must not heat or short circuit rechargeable batteries or dispose of them in fire.
- Do not expose the rechargeable batteries to direct sunlight.
- Before first use, charge the rechargeable battery for approx. 3 to 4 hours.
- Use the enclosed mains adapter **(2)** for charging.
- The fully charged rechargeable battery provides an operating time of approx. 12 hours at medium volume.

Charging the battery

CAUTION

If the device is wet, a short circuit can occur during the charging process.

- Let the device dry completely before charging.

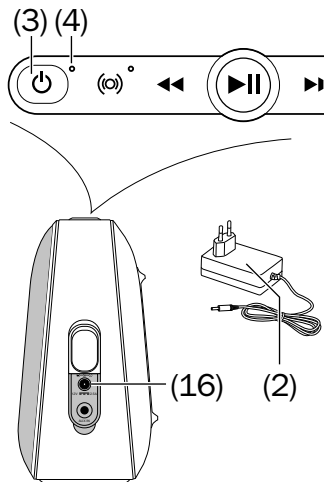

The integrated Li-Ion rechargeable battery is charged as soon as the Motiv Go is supplied with power from the mains adapter **(2)** via the connection **(16)**.

The LED **(4)** signalise the charging process:

If the Motiv Go is switched on during the charging, the LED is pulsing in white.


If the Motiv Go is switched off, the LED shows the charging state in color:

45-99%	LED pulsing green
11-44%	LED pulsing yellow
<11%	LED pulsing red


When the battery is fully charged, the LED lights up green continuously.

Room temperature is ideal for charging the rechargeable battery. In an excessively cold or hot environment, the rechargeable battery doesn't reach its full capacity during charging.

Charge level

You can display the battery charge level by tapping the  button **(3)**:

45-100%	LED (4) lights up green
21-44%	LED (4) lights up yellow
11-20%	Warning tone, LED (4) flashes red slowly (1/second)
<11%	Warning tone, LED (4) flashes red quickly (2/second)

 To protect the rechargeable battery, the Motiv Go has deep discharge protection, which switches the device off once the threshold is reached. In this case, the Motiv Go can not be switched on again.

Setup

NOTICE

In case of very high volumes and bass-accented music, the device may move.

- *Therefore, always make sure that the device is securely positioned. There is no warranty for damages caused by falling or dropping down.*

Location tips

- Select a stable, level base.
- Select a location away from heat sources and direct sunlight.
- If applicable, lay the connector cords so that they do not pose a tripping hazard.
- Do not place any objects on the Motiv Go.

You can simply place the Motiv Go on a stable, level surface.

Operation

CAUTION



Extended listening at high volumes may lead to hearing loss.

- To avoid damage to health, avoid extended listening at high volumes.
- When the volume is set high, always keep a certain distance from the device and never place your ears directly on the speaker.
- If a speaker is set to full volume, this may produce very high sound pressure. Set your signal source device volume control to a


low setting before turning on the power.

NOTICE

 
If the device is subjected to warm temperatures after being cold (e.g. after transport), condensation may occur inside of it.


- In this case, wait at least 2 hours before you connect and activate it.

Activating and deactivating

- To activate the device, push and hold the  button **(3)** for approx. 2 seconds.

The Motiv Go is switched on with a signal tone and the LED **(4)** will briefly illuminate to indicate the battery charge level (see page 15).

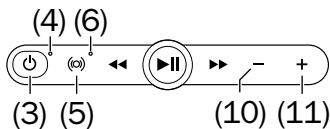


- To deactivate the device, push and hold the  button **(3)** for approx. 2 seconds.

The Motiv Go is switched off with a signal tone and LED **(4)** briefly shows the battery charge level.

Auto off

- In battery mode the device will automatically switch to standby if no input signal is received for 20 minutes.

Volume

 
 The volume setting of the external player affects the volume of the Motiv Go.

- With the buttons **- (10)** and **+ (11)** you can decrease or increase the volume.

You can gradually adjust the volume by tapping. Pushing and holding will change the volume continuously.

Dynamore®

Dynamore® is a technique that makes the distance between the front speakers sound wider. This generates an impressive, spatial and wide-ranging sound.

- Use the button  **(5)** to switch stereo widening on and off. LED **(6)** lights up red, if Dynamore is switched on.

Bluetooth®

Via Bluetooth®, you can connect a compatible external player and the Motiv Go wirelessly. The audio output of your external player is then emitted by the Motiv Go.

You can also register two Bluetooth devices and have them played in alternation.

For smartphones with an Android or IOS operating system, you can also use the voice assistant via the Motiv Go.

NOTICE

Only use the Bluetooth® function in locations where wireless radio transmission is allowed.

Bluetooth® options

Depending on the device type, your external player/ smartphone may also have a number of Bluetooth® options such as media playback and call function.

 
You can find more information about the Bluetooth® options in the user manual for your external player/ smartphone.

Pairing

To play the audio of your external player on your Motiv Go via Bluetooth®, you must first connect the devices with each other. This is called “Pairing”. The Motiv Go can save data from up to seven external players, which can be subsequently connected to without having to repeat the pairing process.

1. Turn on the Bluetooth® function on your external player (e.g. smartphone).

2. Push the **✳** button **(13)** and hold it for approx. 2 seconds.

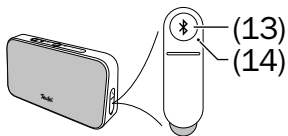

You will hear a connection tone and the Bluetooth® LED **(14)** will flash in blue.

3. Let your external player/smartphone scan for Bluetooth® devices. You will find more information about this in the user manual of your external player.
After the search run, the “Teufel MOTIV GO” should also be present in the list of detected devices.
4. Select “Teufel MOTIV GO” from the list of detected devices.
Pairing is now complete and the Bluetooth® LED **(14)** lights up permanently.

Your Motiv Go will now act as a Bluetooth® playback device and will play back music that would otherwise be played by your external player/smartphone.


5. If you would like to pair a second external player, repeat steps 1 to 4 with the second device. Now you can use both devices in party mode in alternation (see chapter “Party mode” on next page).

Playback

i The volume setting of the external player affects the volume of the Motiv Go.

- Start playback on your external player.
- Pause playback:
Tap the button **▶|| (8)**.
- Continue playback:
Tap the button **▶|| (8)** again.
- Play next track:
Tap the button **▶▶ (9)**.

 - Start the track from the beginning:
Tap the button ◀◀ (7).
- Play previous track:
Tap the button ◀◀ (7) twice.



Party mode


If you are using two external players at the same time, you can look for the next track on one device while the other is playing.

- Once the track is over, tap the ↗ button (13) and then start playback on the other device.

Voice assistants

Prerequisites: Present Bluetooth® connection and voice assistant on the smart-phone is enabled.

To activate the assistant, push the ▶|| button (8) for two seconds and wait until the assistant responds. Then simply speak in the direction of the microphone (12) of the Motiv Go.

 

Call function

You can use the Motiv Go as a hands-free device for your smartphone.


- In the event of an incoming call, your smartphone will ring and the Motiv Go will also emit a ring tone. Any media playback will be paused.

- To reject the call, hold the ►|| button **(8)** for 2 seconds. The call will be ended and the caller will hear the busy signal.
- To take the call, tap the ►|| button **(8)**.
- Now you can answer the call with your Motiv Go via the integrated microphone **(12)**.
- Push the ►|| button **(8)** again to end the call.

Media playback will resume.

Terminating the Bluetooth® connection

 
- To terminate the Bluetooth® connection, switch the Bluetooth® function on your external player/ smartphone off.
- To delete the list of known external players, hold the ✖ button **(13)** down for approx. 10 seconds until two short signal tones can be heard.

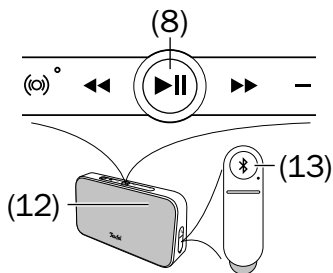

AUX playback

Connection

 The AUX IN jack **(17)** serves to connect an external player using a stereo cable with a 3.5 mm jack plug. You can connect any external players with a line-out jack or headphone jack.

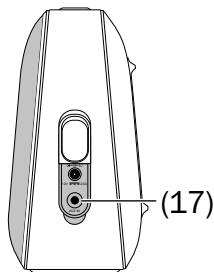

i As soon as you insert a plug into the AUX IN socket, the playback is switched from Bluetooth® to AUX.

To hear again via Bluetooth®, remove the jack plug.

Playback

1. Start playback on your external AUX player.

i The volume setting of the external player affects the volume of the Motif Go.

2. Control all playback functions via the external player.

Care and cleaning

NOTICE

External influences may damage or destroy the device.

- *If the device is unattended for a prolonged period (e.g. when on vacation) or in the event of an incoming storm, disconnect the device from the charger. Otherwise, sudden overvoltage could cause the device to become defective.*
 - *Only use plain water without any additives. In case of stubborn marks, a mild soap solution may be used.*
- *Do not use caustic cleaning products, white spirit, thinners, petrol or similar under any circumstances. Such cleaning agents may damage the delicate surface of the housing.*
 - *Ideally, you should remove dust or small amounts of dirt with a dry, smooth leather cloth.*
 - *Use a damp cloth to rub off stubborn dirt.*
 - *Afterwards, immediately wipe the damp surfaces off with a soft cloth without applying pressure in order to avoid lime spots.*

Troubleshooting

The following advice should help you to solve problems.
If this does not work, our online manual will provide help:

<https://manual.teufelaudio.com>

Problem	Possible cause/solution
No function	The rechargeable battery is empty: Recharge the rechargeable battery.
No sound	The volume has been set too low: Increase the volume.
	The volume of the external player has been set too low: Carefully increase the volume of the external player.
	No Bluetooth® connection: Establish a connection (see „Bluetooth®“ on page 19).
	Motiv Go has not been selected as the output device: On the external player, select “Teufel MOTIV GO” as the Bluetooth® output device.
	Bluetooth® connection impaired by another radio system (e.g. cordless telephone, Wi-Fi): Move the devices causing the disturbance.

Playback of my external player is too quiet	Check the settings of your external player. After applying the latest Android and IOS updates, a limiter may be activated which reduces the output signal. This was implemented by the manufactures as a protective mechanism.
Playback is noisy	Generally speaking, the Motiv Go is a very low-noise system. Poor quality of the signal source or music recording (e.g. MP3 files) can lead to noisy playback. Therefore, please also pay attention to the quality of the titles to be played.
The voice assistant doesn't work	Activate the voice assistant on the smart-phone.

Technical data

Operating voltage of the mains adapter:	100-240 V~, 50/60 Hz
Power consumption of the mains adapter:	max. 30 W
Dimensions (W×H×D):	205 × 112 × 60 mm
Weight:	935 g

The following radio frequency bands and radio transmitting powers are used in this product:

Frequency bands	Max. transmission power
2.4-2.4835 GHz	2.5 mW/4 dBm

You can find further technical data about the product on our website.

Declaration of conformity

CE Lautsprecher Teufel GmbH hereby declares that this product complies with the requirements of the directives 2014/30/EU, 2014/35/EU and 2014/53/EU to the extent they are installed and used in accordance with the instructions of the manufacturer. The full text of the EU declaration of conformity is available at the following Internet address:

www.teufelaudio.com/konformitaetserklaerungen.html

Teufel

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Telephone: 00800 200 300 40 (toll- free)

Fax: +49 30 300 930 930

Online support: www.teufelaudio.com/service

Contact form: www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.

Manual no. 198082_EN_20200212