 


Technical description and user manual

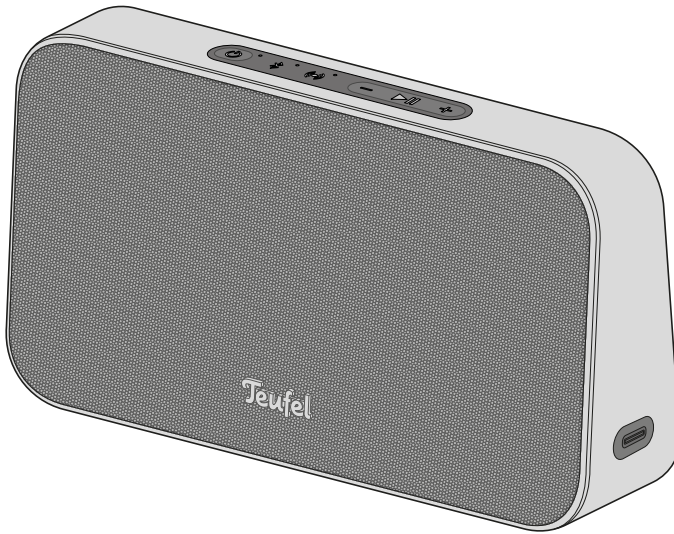

MOTIV®

MOTIV® GO 2

Bluetooth® speaker



Teufel

Table of contents

Basic notes and information.....	4	Teufel Go app	13
For your information	4	Functions of the Teufel Go app.....	13
Applicability of the user manual	4	Setting the playback source.....	14
Trademark	4	Source indicator	14
Data protection and advertising declaration.....	5	Changing the playback source	14
Original packaging	5	Setting Bluetooth® as the playback source	14
Complaint	5	Setting USB as the playback source	14
Contact	5	Operation.....	15
Safety.....	6	Controlling playback	15
Intended use.....	6	Starting playback	15
Explanation of warnings	6	Pausing and restarting/muting playback.....	15
Scope of supply	7	Playing the previous track.....	15
Unpacking the loudspeakers.....	7	Playing the next track	15
Checking the scope of supply	7	Adjusting the volume	15
Operating and display elements	8	Switching Dynamore® on and off	15
Commissioning	10	Power supply (battery).....	16
Setting up	10	Charging the battery	16
Notes on the place of installation....	10	Displaying the charge level.....	17
Switching on and off.....	10	Power saving mode (Eco mode)	18
Auto-off	10	Activating Eco mode	18
Connecting external players	11	Deactivating Eco mode	18
Bluetooth®.....	11	PC sound card function (USB).....	12
Pairing Bluetooth® devices	11		
Disconnecting the Bluetooth® connection	11		
Deleting the Bluetooth® list.....	11		
Changing Bluetooth® devices.....	12		

Other functions.....	19
Party Link.....	19
Activating	
the Party Link function	19
Deactivating	
the Party Link function	19
Party Link Stereo.....	20
Activating	
the Party Link Stereo function	20
Deactivating	
the Party Link Stereo function	20
Cleaning and care.....	21
Troubleshooting.....	22
Resetting to factory settings	22
Technical data	23

Basic notes and information

For your information

The information in this document is subject to change without notice and does not constitute any obligation on the part of Lautsprecher Teufel GmbH.

No part of these user manuals may be reproduced, transmitted in any form or by any means electronically, mechanically, by photocopying or by recording without the prior written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH
Teufel MOTIV® GO 2 UM EN V1.3 PD

Applicability of the user manual

This user manual applies exclusively to the **MOTIV® GO 2** loudspeaker, hereinafter also referred to as the “loudspeaker”.

Trademark

© All trademarks are the property of their respective owners and any use by Lautsprecher Teufel is under licence.



The Bluetooth® trademark and the Bluetooth logo are registered brands of Bluetooth SIG, Inc., and any use of these brands by Lautsprecher Teufel is under licence.

Data protection and advertising declaration

Lautsprecher Teufel GmbH has no connection with the services of the Google Assistant system. We do not store any personal data and are not involved in any promotional mailings.

Original packaging

If you wish to make use of your right of return, we must ask you to keep the packaging.

We can only take back loudspeakers in their original packaging.

Empty cardboard boxes are not available.

Complaint

In the event of a complaint, we absolutely require the following information for processing:

1. Invoice number

- ▶ Please refer to the proof of purchase (enclosed with the loudspeaker), or the order confirmation that you received as a PDF document.

2. Serial number

- ▶ Refer to the underside of the loudspeaker.

Contact

If you have any questions, suggestions or criticisms, please contact us at:

Lautsprecher Teufel GmbH

BIKINI Berlin
Budapester Straße 44
10787 Berlin (Germany)

Tel.:

Germany: +49 (0) 30 217 84 217
Austria: +43 12 05 22 3
Switzerland: +41 43 50 84 08 3
International: 00800 200 300 40 (toll-free)

Online support:

teufelaudio.com/support
teufel.de/support

Contact:

teufelaudio.com/contact
teufel.de/kontakt

Safety

Intended use

The loudspeaker is designed to play music and speech via Bluetooth® or a cable from an external player. Only use the loudspeakers as described in this user manual.

Any other use is deemed to be improper and may result in material damage or even personal injury.

The manufacturer accepts no liability for damage caused by improper use.

The loudspeaker is intended for use in the private sphere.

Before starting up the loudspeaker:

- ▶ Read the user manual and safety booklet carefully.
- ▶ Keep the instructions in a safe place so that they can be passed on to third parties.
 - ▶ When passing on the loudspeaker, also pass on the instructions.

Explanation of warnings

Handling-related warnings precede handling steps that may result in a hazard.

The warnings are grouped into different risk categories depending on the seriousness of the respective hazard.

The hazard levels with the corresponding signal words are explained below.

WARNING

Possible danger to life or serious injury.

ATTENTION

Possible material damage.

NOTE


Additional information and tips.

Scope of supply

Unpacking the loudspeakers

- ▶ Open the box carefully, remove the packaging and carefully lift the loudspeaker out of the box.

Checking the scope of supply

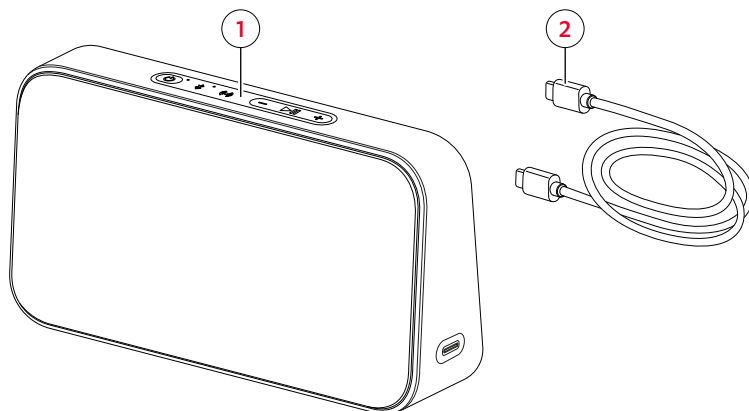

Scope of supply

- (1) MOTIV® GO 2
- (2) USB-C cable


i NOTE



A charging adapter is not included in the delivery scope.

- ▶ Check the scope of supply for completeness.
- ▶ Check the scope of supply for damage.
- ▶ Keep the original packaging during the warranty period.

Operating and display elements

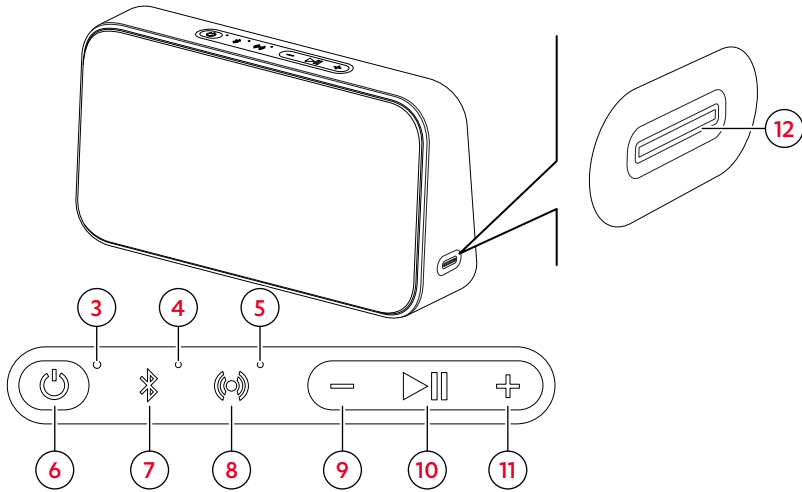





Operating and display elements on the loudspeaker








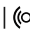 
No.	Screen	
(3)	Battery status LED	→ <i>Displaying the charge level – p. 17</i>
(4)	Source status LED	→ <i>Source indicator – p. 14</i>
(5)	Dynamore® LED	→ <i>Switching Dynamore® on and off – p. 15</i>

Legend (actuation):

- = Press 1×
- ● = Press 2×
- ● ● = Press 3×

- 1.5 s** = Press and hold (1.5 s)
- 8 s** = Press and hold (8 s)
- HOLD** = Press and hold

No.	Button/ connection	Function	Actuation
(6)		→ Switching on and off – p. 10	1.5 s
		→ Displaying the charge level – p. 17	●
(7)		→ Pairing Bluetooth® devices – p. 11	1.5 s
		→ Setting Bluetooth® as the playback source – p. 14	●
		→ Changing Bluetooth® devices – p. 12	●
		→ Changing the playback source – p. 14	●
		→ Deleting the Bluetooth® list – p. 11	8 s
(8)		→ Switching Dynamore® on and off – p. 15	●
(9)	—	Decrease the volume → Adjusting the volume – p. 15	● HOLD
(10)		→ Pausing and restarting/muting playback – p. 15	●
		→ Playing the previous track – p. 15	● ● ●
		→ Playing the next track – p. 15	● ●
(11)	+	Increase the volume → Adjusting the volume – p. 15	● HOLD
(12)	USB	→ Charging the battery – p. 16	Plug-in
		→ Setting USB as the playback source – p. 14	Plug-in

No.	Button combination*	Function	Actuation
(7) (11)	 	→ Activating the Party Link function – p. 19	●
(7) (9)	 —	→ Deactivating the Party Link function – p. 19	●
		→ Deactivating the Party Link Stereo function – p. 20	●
(7) (10)	 	→ Activating the Party Link Stereo function – p. 20	●
(9) (10)	 	→ Resetting to factory settings – p. 22	8 s
(6) (9)	— 	→ Power saving mode (Eco mode) – p. 18	1.5 s

* With button combinations, both buttons must be pressed simultaneously.

Commissioning





Setting up

1. Carry the loudspeaker carefully to the place of installation.
→ *Notes on the place of installation – p. 10*
 2. Place the loudspeaker on a stable, level surface.
 - ▶ Make sure that the loudspeaker is resting firmly in a stable position to prevent vibrations.
- ✓ **The loudspeaker is set up.**

Notes on the place of installation

- Dry, dust-free environment.
- Avoid proximity to heat sources and direct sunlight.
- Connected cables (e.g. charging cables) must not present a trip hazard.

Switching on and off

- ▶ Press and hold the  button (6) for 1.5 seconds.
The loudspeaker turns on with a beep.
The battery status LED  (3) indicates the current charge level.
→ *Displaying the charge level – p. 17*
- ✓ **The loudspeaker is switched on.**
- ▶ Press and hold the  button (6) again for 1.5 seconds.
The loudspeaker turns off with a beep.
The battery status LED  (3) goes out.
- ✓ **The loudspeaker is switched off.**

Auto-off

After 10 minutes without an input signal, the loudspeaker will switch off automatically.

NOTE

The automatic switch-off time (Auto Off) can be adjusted via the Teufel Go app.

Connecting external players

Depending on the respective playback source, a cable connection or wireless connection to the loudspeaker must be established so that the loudspeaker can emit the audio signal from the playback source.

Bluetooth®

A compatible external player is connected wirelessly to the loudspeaker via Bluetooth®.

i NOTE



Only use the Bluetooth® function in places where wireless radio transmission is permitted.


Pairing Bluetooth® devices

Coupling (pairing) connects the external player with the loudspeaker.

i NOTE

Up to 7 external players can be stored and automatically connected without pairing again.



1. Activate the Bluetooth® function on the external player.
 2. Press and hold the  button (7) for 1.5 seconds.
The source status LED  (4) flashes blue.
- Bluetooth® pairing mode is activated.**

3. Search for Bluetooth® devices on the external player.
▶ Follow the user manual of the external player.
 4. Select “MOTIV GO 2” loudspeaker from the list of Bluetooth® devices.
The source status LED  (4) lights up continuously blue.
- The pairing procedure is complete. The Bluetooth® device is connected to the loudspeaker.**
- ▶** Use the loudspeaker as the output device.

Disconnecting the Bluetooth® connection

- ▶** Deactivate the Bluetooth® function on the external player.
- The Bluetooth® connection has been disconnected.**





Deleting the Bluetooth® list

- ▶** Press and hold the  button (7) for 8 seconds.
The source status LED  (4) flashes blue once.
- The Bluetooth® list has been deleted.**

Changing Bluetooth® devices

If two Bluetooth® devices are connected to the loudspeaker at the same time, you can easily switch between playback on either device.


→ *Pairing Bluetooth® devices – p. 11*

1. Stop playback on the first external player.
2. Press the  button (7).
The source status LED  (4) flashes blue once.
 The active Bluetooth® device has changed.
3. Start playback on the second external device.
 Media playback from the second external player is emitted through the loudspeaker.
4. Press the  button (7) again.
The source status LED  (4) flashes blue once.
 The active Bluetooth® device has changed again.
5. Start playback on the first external device.
 Media playback from the first external player is emitted through the loudspeaker.

PC sound card function (USB)

The loudspeaker has an integral USB sound card for audio output. You can connect a compatible external player to the loudspeaker via the USB port (12) using the USB-C cable (2) supplied.

- ▶ Connect the external device to the loudspeaker using the USB-C cable (2) supplied.

The source status LED  (4) lights up continuously white.

- The external USB player is connected to the loudspeaker.**

- ▶ Use the loudspeaker as the output device.

NOTE

Neither Bluetooth® nor Party Link playback is possible during playback via the USB port.

Teufel Go app

The loudspeaker can be set up in the Teufel Go app. The loudspeaker can also be operated via the app.

1. Download the Teufel Go app.



2. Switch on the loudspeakers.
→ *Switching on and off – p. 10*
 3. Follow the instructions in the app.
- The loudspeaker is set up in the app.**

i NOTE

The loudspeaker can also be used independently of the Teufel Go app.

Functions of the Teufel Go app

The Teufel Go app can be used for the following functions:

- ▶ Party Link: Connect the loudspeaker to up to 100 compatible loudspeakers via Bluetooth® to form a loudspeaker chain.
- ▶ Party Link Stereo: Use two loudspeakers of the same model via Bluetooth® in stereo L / R mode.
- ▶ Setting/changing the playback source.
- ▶ Setting the volume.
- ▶ Setting the equalizer.
- ▶ Charging status and charging process indicator.
- ▶ Activating the automatic shutdown function (Auto Off).
- ▶ Switching system sounds on/off.
- ▶ Adjusting the LED brightness.
- ▶ Switching the multipoint connection on/off.
- ▶ Update the firmware.

Setting the playback source

i NOTE



The playback source can also be set/changed via the Teufel Go app.
→ *Teufel Go app – p. 13*

i NOTE


The loudspeaker detects the active source automatically, provided that it was set up earlier and that there is a signal.

Source indicator

When a playback source is connected, the source status LED (4) lights up permanently in the corresponding colour.

Playback source	
Bluetooth® 	USB 
Source status LED (4)	



Changing the playback source

- ▶ Press the  button (7) to toggle between the connected playback sources (> Bluetooth® > USB >).

The source status LED (4) lights up in the respective colour.

- ✓ **The playback source has been set.**

Setting Bluetooth® as the playback source

- ▶ Press the  button (7).
The source status LED  (4) lights up continuously blue.

- ✓ **Bluetooth® has been set as the playback source.**

Setting USB as the playback source

An external USB player is automatically set as the playback source as soon as it is connected.

→ *PC sound card function (USB) – p. 12*

Operation

Controlling playback

Starting playback

- ▶ Start playback via the connected player (Bluetooth® device or USB device).

Pausing and restarting/muting playback

- ▶ Press the ►|| button (10).
- ☑ **Playback is paused/muted (depending on the source).**
- ▶ Press the ►|| button (10) again.
- ☑ **Playback continues/muting is cancelled (depending on the source).**

Playing the previous track

- ▶ Press the ►|| button (10) 3×.
- ☑ **The current track is started from the beginning. (If the track has been played for more than 3 seconds.)**
- ☑ **The previous track is started. (If the track has been played for less than 3 seconds.)**

Playing the next track

- ▶ Press the ►|| button (10) 2×.
- ☑ **The next track is started.**

Adjusting the volume

i NOTE

The volume setting on the external player also affects the loudspeaker's volume.

- ▶ Press the — button (9).
 - ▶ To lower/increase the volume gradually (faster), press and hold the — button (9).
- ☑ **The volume is lowered.**
- ▶ Press the + button (11).
 - ▶ To lower/increase the volume gradually (faster), press and hold the + button (11).
- ☑ **The volume is increased.**

Switching Dynamore® on and off

Dynamore® is a technology developed by Teufel that virtually expands the stereo panorama to create an impressive, wide-ranging sound.

i NOTE

The use of Dynamore® shortens the operating time of the loudspeaker in battery mode.

- ▶ Press the (Ⓞ) button (8).
 - The Dynamore® LED (5) lights up.
- ☑ **Dynamore® has been switched on.**
- ▶ Press the (Ⓞ) button (8) again.
 - The Dynamore® LED (5) goes out.
- ☑ **Dynamore® has been switched off.**

Power supply (battery)

Charging the battery

⚠ WARNING

Risk of injury from exploding batteries!

Batteries (especially lithium batteries) can explode if handled improperly.

- ▶ Do not heat, short-circuit or burn batteries.
- ▶ Protect batteries from direct sunlight.

ATTENTION

Risk of damage due to improper charging!

Improper charging may damage the loudspeaker or battery.

- ▶ Always use the supplied USB-C cable (2).

i NOTE


When the battery is almost discharged, the loudspeaker emits two short warning tones several times and the battery status LED (3) flashes. If this happens, charge the loudspeaker immediately.

i NOTE

To protect the battery, the loudspeaker has a deep discharge protection feature that switches off the device when the threshold is reached.

i NOTE

To charge the loudspeaker, we recommend using the Lautsprecher Teufel Power Adapter 30 W USB-C E030-1P200150VE. With this power adapter, the power consumption in off mode is below the limit of 0.5 W required by the Ecodesign Directive.

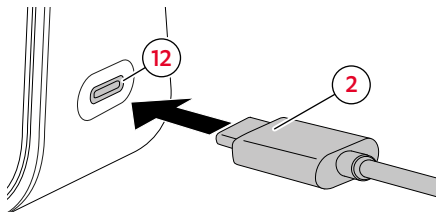

Charging cable connection

1. Insert the USB-C plug on the supplied USB-C cable (2) into the USB port (12) on the loudspeaker.
2. Connect the power supply as follows:
 - ▶ Connect the USB-C cable (2) to the power supply using a suitable power adapter.

or


 - ▶ Connect the USB-C cable (2) to a suitable power supply device.

- ✓ **The battery is charging.**
During charging, the battery status LED (3) flashes to display the current charge level.

→ *Displaying the charge level – p. 17*

Displaying the charge level


The current charge level can be displayed via the battery status LED (3).






- ▶ Press the  button (6) while the loudspeaker is switched on.

The charge level is displayed.

Key:

 = LED flashing

 = LED illuminated

Charge level in %				
1-10 %	11-20 %	21-45 %	46-70 %	71-100 %
				

Battery status LED (3)

i NOTE

The charge level is also displayed in the Teufel Go app.

Power saving mode (Eco mode)



When Eco mode is activated, the loudspeaker's operating time increases by up to 1 hour.

- Maximum achievable volume is reduced.
- Playback of low bass is reduced.
- Equaliser function in the Teufel Go app is deactivated.



NOTE

Eco mode can be activated and deactivated via the Teufel Go app.

Activating Eco mode

- ▶ Press and hold the button combination  (8) |  (9) for 1.5 seconds.
- ✔ **Power saving mode is activated.**
A signal tone sounds and the Dynamore® LED (5) flashes briefly.

Deactivating Eco mode

- ▶ Press and hold the button combination  (8) |  (9) again for 1.5 seconds.
- ✔ **Power saving mode is deactivated.**
Two signal tones sound and the Dynamore® LED (5) flashes twice.

Other functions

Party Link

i NOTE

Party Link is available only via Bluetooth®. USB does not support this feature.

The loudspeaker can be connected to a chain of up to 100 compatible loudspeakers via Bluetooth®, e.g. to provide sound for a larger room.

The first loudspeaker acts as the broadcaster when the Party Link function is used. You can control playback for the entire loudspeaker chain from the broadcaster or make specific adjustments on the connected loudspeaker (e.g. volume settings or Dynamore®).

Activating the Party Link function

1. Connect an external player to the first loudspeaker via Bluetooth®.
→ *Connecting external players – p. 11*
2. Press the button combination **⌘ (7) | + (11)** on the first loudspeaker.
The source status LED **⌘ (4)** flashes purple.
 Pairing mode is activated and the loudspeaker becomes the broadcaster in Party Link mode.
3. Switch on another loudspeaker (receiver).
→ *Switching on and off – p. 10*

4. Press the button combination **⌘ (7) | + (11)** on the loudspeaker that is not yet connected.
The source status LED **⌘ (4)** flashes yellow.

- The loudspeaker (receiver) is connected to the broadcaster. All paired loudspeakers play back the same content.**

i NOTE

To connect additional loudspeakers, repeat steps 3 and 4 for each new loudspeaker (optional).

Deactivating the Party Link function

- ▶ Press the button combination **⌘ (7) | – (9)**.
- Pairing is cancelled and Party Link mode is deactivated on the loudspeaker.**

Party Link Stereo

i NOTE

Party Link Stereo is only available via Bluetooth®. USB does not support this feature.

Two loudspeakers of the same model can be operated using the Party Link Stereo function in Stereo L/R mode. When this function is activated, the loudspeakers are paired via Bluetooth® and each loudspeaker is assigned a position L (left) or R (right).

- Loudspeaker L is positioned to the left of the listener.
- Loudspeaker R is positioned to the right of the listener.

Activating the Party Link Stereo function

1. Connect an external player to the first loudspeaker via Bluetooth®.
→ *Connecting external players – p. 11*
2. Press the button combination **⌘ (7) | ▶ || (10)** on the first loudspeaker.
The source status LED **⌘ (4)** flashes purple.
 Pairing mode is activated and the loudspeaker becomes the broadcaster in Party Link mode.
3. Switch on the second loudspeaker (receiver).
→ *Switching on and off – p. 10*

4. Press the button combination **⌘ (7) | ▶ || (10)** on the loudspeaker that is not yet connected.
The source status LED **⌘ (4)** flashes yellow.

- The loudspeakers are operating in stereo L / R mode and media playback is in stereo sound.**

i NOTE

Exit the active mode before switching between the Party Link and Party Link Stereo functions.

Deactivating the Party Link Stereo function

- ▶ Press the button combination **⌘ (7) | — (9)**.
- Pairing is cancelled and stereo playback stops.**

Cleaning and care

ATTENTION

Material damage due to improper cleaning!

The use of unsuitable cleaning agents can lead to the discolouration and destruction of the surface.

- ▶ Do not allow moisture to get inside.
- ▶ Only clean loudspeakers with a soft, dry cloth.

-
1. Remove dust and light contamination with a dry leather cloth.
 2. Remove stubborn stains with a cloth slightly moistened with mild soapy water.
 3. Then rub damp surfaces dry with a dry, soft cloth without applying pressure.
- The loudspeaker has been cleaned**

Troubleshooting



- ▶ Follow the instructions below to eliminate possible faults:

Malfunction	Possible cause	Remedy
The loudspeaker does not start.	The battery is discharged.	▶ Connect the loudspeaker. → <i>Charging the battery – p. 16</i>
No sound.	The volume is too low.	▶ Increase the volume. → <i>Adjusting the volume – p. 15</i>
	The volume on the external player is too low.	▶ Increase the volume on the external player (e.g. smartphone).
	The loudspeaker is not connected to the external player.	▶ Connect the loudspeaker to the external player. → <i>Connecting external players – p. 11</i>
	The external player has not been selected.	▶ Set the external player as the output device. → <i>Controlling playback – p. 15</i>
	Another radio system is interfering with the Bluetooth® connection.	▶ Move the loudspeaker to another location. → <i>Setting up – p. 10</i>


Resetting to factory settings

i NOTE

All user settings and data are deleted and reset to the factory settings.

- ▶ Press and hold the button combination  (6) |  (8) for 8 seconds.
- ✔ **The loudspeaker has been reset to the factory settings. All personal settings have been deleted.**

 Technical data

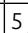General technical data	
Dimensions (W × H × D)	211 mm × 115 mm × 65.8 mm
Weight	935 g
USB charging voltage	5 / 9 / 15 V  max. 3 A
Operating temperature	0°C to +45°C
Storage temperature	-20°C to +60°C
Protection class	IPX5 protection against water jets from all directions



The power delivered by the charger must be between min 7.5 Watts required by the radio equipment, and max 30 Watts in order to achieve the maximum charging speed.

USB PD fast charging

only in specific cases

Radio network	Frequency bands	Transmitting power
Bluetooth®	2400–2483.5 MHz	6.6 mW / 8.192 dBm



Lautsprecher Teufel GmbH hereby declares that the loudspeaker MOTIV® GO 2 complies with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

teufel.de/konformitaetserklaerungen

teufelaudio.com/declaration-of-conformity

Teufel

If you have any questions, suggestions or criticisms, please contact us at:

Lautsprecher Teufel GmbH

BIKINI Berlin
Budapester Straße 44
10787 Berlin (Germany)

teufelaudio.com

teufel.de

teufel.ch

teufelaudio.at

teufelaudio.nl

teufelaudio.be

teufelaudio.fr

teufelaudio.pl

teufelaudio.it

teufelaudio.es

Tel.:

Germany: +49 (0) 30 217 84 217

Austria: +43 12 05 22 3

Switzerland: +41 43 50 84 08 3

International: 00800 200 300 40 (toll-free)

Online support:

teufelaudio.com/support

teufel.de/support

Contact:

teufelaudio.com/contact

teufel.de/kontakt

All information is provided without guarantee.

Subject to technical changes.

Typographical and other errors excepted.