## **User Manual**

# Teufel AIRY SPORTS Bluetooth In-Ear Headphone



## Table of contents

General Information		3	5.	Using the headphones	19
	Notice Right of Return Complaints	3 3 4	6.	<b>Charging</b> 6.1 Charging the headphones	<b>20</b>
For Your Safety		5	7.	Troubleshooting	21
	Proper Use	5	8.	Technical Data	24
Safety notes		6			
	Explanation of terms	6			
Disposal		9			
Trademarks		10			
1.	Introduction	11			
2.	What's in the box	12			
3.	Product overview	13			
4.	Getting started	14			
	<ul><li>4.1 Switching On or Off</li><li>4.2 Choosing the correct eartips</li><li>4.3 Connecting with the headphone</li><li>4.4 Teufel Bluetooth App</li></ul>	14 15 16 18			

### **General Information**

#### **Notice**

The information in this document is subject to change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopying or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH

Version 4.0

February 2020

## **Right of Return**

If you wish to exercise your 8 weeks right of return, we ask that you make sure that you hold onto the original packaging. We can only accept the return of headphones WITH THE ORIGINAL PACKAGING. Headphones returned without the original packaging will not be accepted.

### **Complaints**

In the event of a complaint, the invoice number is required in order for your complaint to be processed. The invoice number can be found on the sales slip (enclosed with the product) or on the order confirmation PDF document.

Thank you for your support!

## For Your Safety

## **Proper Use**

The "Teufel AIRY SPORTS" Headphone designed for the playback of audio signals that can be wirelessly transmitted via Bluetooth\* from the external player. The headphones are also suitable as a headphone for connecting to Bluetooth compatible (mobile) phones. Only use the headphones as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons. The manufacturer accepts no liability for damage caused by improper use. The headphones are intended for private use only.



Before operating the headphones, please first read the safety notes and user manual carefully. This is the only way to use all functions safely and reliably. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

## Safety notes

This chapter contains general safety notices. You should always observe these notices to protect both yourself and third parties. You should also observe the warning notices in each chapter of this user manual.

#### **Explanation of terms**

You can find the following signal terms in this user manual:



#### WARNING

This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.



#### **CAUTION**

This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

#### NOTICE

This signal term warns you of potential damage.



This symbol advises of useful additional information.

## **♠** w

#### WARNING

## Danger of suffocation! Children can become trapped in the packaging film when playing and suffocate.

 Make sure that children do not play with the packaging, and that they do not pull off small parts of the headphones and put them in their mouth.

## Risk in road traffic and at work! Your headphones significantly dampen external noise so that you are not entirely aware of your surroundings.

 Do not in any case wear your headphones while performing activities where you are required to pay attention to your surroundings. This particularly applies to when you are operating machinery or driving on the road. You should also observe the legal guidelines and provisions of the country which you are in when using the headphones.

## Attention! Risk of explosion/fire! Lithium rechargeable batteries can explode if handled improperly.

 Do not heat or burn the rechargeable battery. Only charge the rechargeable battery at ambient temperature of -10-45 °C. Do not use the headphones in environments where there is a risk of explosion. Do not expose batteries and rechargeable batteries to direct sunlight.

## Interference caused by radio waves! Radio waves could affect the function of other sensitive devices that are not protected.

 Only use the headphones in environments where the use of Bluetooth® is permitted.



#### **CAUTION**



## Extended listening at high volumes may lead to hearing loss!

- To avoid damage to your health, avoid extended listening at high volumes.
- If the headphones is set to full volume, it may produce very high sound pressure. This might have psychological consequences and also cause physical injury. Children are especially at risk. Set the volume control of your player to low volume before you turn it on.

#### NOTICE

## Risk of damage! Improper handling of the headphones may result in damage.

 Ensure that the headphones do not become wet, and protect them from moisture, heat (e.g. during the summer in cars) and mechanical influences. (e.g. severe shocks, pressure and falling).

## Disposal

#### Old devices must not be disposed of with house-hold waste!



Electrical equipment contains harmful substances and valuable resources.

Every consumer is required by law to bring all old electrical devices to an authorised collection or return point so that they can be disposed of in a manner that is environmentally friendly and which preserves resources.

You can hand your old electrical devices over to the local reusable materials/ recycling centre.

Please contact your vendor directly for more information about this topic.

## Batteries and rechargeable batteries do not belong in the household garbage!



Every consumer is required by law to bring all batteries and recharge-able batteries, regardless whether they contain harmful substances\* or not, to a collection point run by local authority, borough, or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Please only turn in batteries and rechargeable batteries that are empty!

\* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

#### **Trademarks**

© All trademarks are the property of their respective owners.

Apple, iOS and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.

Android and Google Assistant are trademarks of Google LLC.



The Bluetooth\* word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Lautsprecher Teufel is under license



Qualcomm® aptX™ is a product of Qualcomm Technologies International, Ltd.

### 1. Introduction

The Teufel AIRY SPORTS In-Ear Bluetooth headphones enrich an athletic and active lifestyle. Please read this user manual before using the headphone the first time, it will provide you with useful information and help you getting started.

#### Features:

- Bluetooth 5.0
- IPX7 waterproof
- 24 hours playtime
- Qualcomm aptX support
- Comfortable and secure fit during exercising
- ShareMe allows sharing of audio from two Teufel AIRY Sports
- Multipoint supports simultaneous connection with two smart devices
- Teufel Headphones app

#### 2. What's in the box

Unpack the box carefully and ensure that the following parts are included. If any part is damaged or missing, do not use it and contact your retailer or customer service representative.



## 3. Product overview



The User Interface of the "AIRY SPORTS" consists of the following components:

- 1. Multi-Purpose Button
- 2. Volume Up
- 3. Volume Down

- 4. LED
- 5. Build-in Microphone
- 6. Micro-USB Port

## 4. Getting started

### 4.1 Switching On or Off

- Press and hold the Multi-Purpose Button for 2s, the headphone will turn on and automatically enter pairing.
- Press and hold the Multi-function button for 4 seconds and the headphone will switch off.

## 4.2 Choosing the correct eartips

For optimal audio performance, it is important to choose the correct eartip size. Select the size that gives you the best comfort and fit in each ear. To determine the best fit, you may need to try all three sizes. You may need a different size for each ear.

**Note:** To test the fit, try speaking aloud. Your voice should sound muffled in both ears; if not, select another tip size.


Insert the right headphone into your right ear and the left headphone into your left ear.

Insert the headphones at a slight angle into the ears and twist them slightly into the ear canal so that they sit comfortably and snugly.



## 4.3 Connecting with the headphone

- Press and hold the Multi-Purpose Button for 2s and the headphone will turn on and automatically enter pairing.
- 2) Turn on Bluetooth on your device, and connect to "Teufel AIRY SPORTS".
- Connect to a new device: When in off state, press and hold the Multi-Purpose Button for 4s.

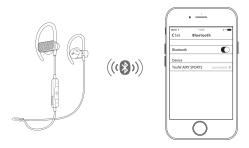

#### ShareMe

Once the Headphone is connected via Bluetooth:

- 1) Press the Multi-Purpose Button and the Volume Up Button at the same time.
- 2) Start ShareMe on the other device you want to connect to.

#### 3) ShareMe should connect automatically.

#### Information on the Bluetooth wireless connection

The headphones are compatible with Bluetooth 5.0.

If your audio source supports high-resolution audio encoding methods SBC, AptX, AAC, it will automatically play high audio quality music.

The paired devices immediately establish the Bluetooth wireless connection after switching on and are ready for use.

When you switch the headphones on, they automatically try to connect to the last connected Bluetooth device.

The headphone can store up to 7 phones that have been paired and support two smart devices connected at the same time.

### 4.4 Teufel Bluetooth App

Download the Teufel Headphones App for IOS and Android and enhance your headphone experience.





## 5. Using the headphones



- Multi-Purpose Button
- Volume Up
- 8 Volume Down

Button Legend		d Meaning		
		Press once to play or pause		
Multi-Purpose Button		Press twice to skip to the next song		
		Press three times to skip to the previous song		
		Press and hold for 2s to activate Voice Assistant		
		Stop the activated Voice Assistant		
		Press and hold for 4 seconds to shut down		
		Answer / End a call		
		Press and hold for 2s to reject the call		
Multi-Purpose Button +Volume Up Button	•	Connect / Disconnect a Share/Me Device		
Multi-Purpose Button +Volume Down Button		Enable / Disable Auto Play Feature		
Volume Down Button		When in off stage, press and hold for 8 seconds to clear Bluetooth device list.		

## 6. Charging

## 6.1 Charging the headphones

The headphones is charged with a USB charging cable.

**Note:** Before charging, be sure that the headphones are at the correct operating temperature of between -10  $^{\circ}$ C and 40  $^{\circ}$ C.

#### 6.1.1 Charging time

Allow up to 2.5 hours to fully charge the headphones.

Note: A full charge of the headphones allows up to 24 hours of use.

#### 6.1.2 Check the headphone battery level

#### While using the headphones

If connected to an Apple or Android device, the device displays the approximate battery level near the upper right corner of the screen and in the notification bar.

This displayed battery level is not accurate. To get the real-time battery level, use a Battery Widget for Android or iOS.

#### While charging the headphones

When an headphone is inserted, its corresponding charging indicator glows according to charging status.

The BT function is also available during charging.

## 7. Troubleshooting

#### **Common solutions**

If you experience problems with your headphones or USB charging cable:

- 1. Check the state of the power indicators.
- Charge the headphones.
- 3. Increase the volume on your mobile device.
- 4. Change the USB charging cable to charge the headphones.
- 5. Try connecting another mobile device.

If you cannot resolve the issue, see the table below to identify symptoms and solutions to common problems. If you are still unable to resolve your issue, contact Teufel customer service.

Symptom	Solution
Headphones don't	Start charging the headphone.
power on	2. Make sure the headphone is not in standby mode and wake it up.
	Make sure your mobile device supports <i>Bluetooth</i> technology.     On your mobile device: Turn the <i>Bluetooth</i> feature off and then on.
Headphones don't connect with mobile device	3. Delete your Teufel Sports In-Ear headphones from the <i>Bluetooth</i> list on your mobile device. Connect again.  4. Move your mobile device closer to the headphones and away
	from any interference or obstructions.  5. Connect a different mobile device.  6. Clear the headphones pairing list and connect again.
Headphones don't charge	Make sure the headphone is properly charged using USB.     Make sure there is no dirt or debris covering the charging conductors within the case or on the headphones.     If your headphones have been exposed to high or low temperatures, let the headphones return to room temperature and then try charging again.



Symptom	Solution
No sound	<ol> <li>Press play on your mobile device to make sure the audio track is playing.</li> <li>Connect the headphone to the USB charging cable to check the charging status of the headphone. If needed, charge the headphone.</li> <li>Increase the volume on the mobile device.</li> <li>Move your mobile device closer to the headphone (10 m) and away from any interference or obstacles.</li> <li>Use other music sources.</li> <li>Connect other mobile devices.</li> </ol>
Poor sound quality	<ol> <li>Make sure that both headphones fit securely in your ear.</li> <li>Use a different music source.</li> <li>Try connecting another mobile device.</li> <li>Move your mobile device closer to the headphones (10 m) and away from any interference or obstructions.</li> <li>Clear any debris or wax buildup from the headphones and headphones nozzles.</li> </ol>
Eartips falling off	Securely attach the tips to the headphones.



#### 8. Technical Data

Driver Size: Ø11mm

Max. Input Power: 5mW

Impedance:  $32\Omega$ 

Sensitivity: 96±3dB@1kHz,1mW
Frequency Response: 20Hz - 22kHz

Frequency Response: 20Hz - 22kH

You can find further technical data on our website.

Technical changes reserved!



Lautsprecher Teufel GmbH hereby declares that this product complies with the requirements of the directives 2014/30/EU, 2014/35/EU and 2014/53/EU to the extent they are installed and used in accordance with the instructions of the manufacturer. The full text of the EU declaration of conformity is available at the following Internet address:

www.teufelaudio.com/konformitaetserklaerungen.html

The following radio frequency bands and radio transmitting powers are used in this product:

Radio network: Bluetooth

Frequency band: 2402–2480 MHz

Transmission power: 5 mW/7 dBM

Please contact our customer service department with any questions, suggestions, or complaints:



#### Lautsprecher Teufel GmbH BIKINI Berlin Budapester Straße 44 10787 Berlin (Germany)

www.teufelaudio.com www.teufel.de www.teufelaudio.at www.teufelaudio.nl www.teufelaudio.pl www.teufelaudio.pl Telephone: 00800 200 300 40 (toll-free)

Fax: +49(0)30 / 300 930 930

Online support:

www.teufelaudio.com/service

Contact form:

www.teufelaudio.com/contact