 


Technical Description And User Manual

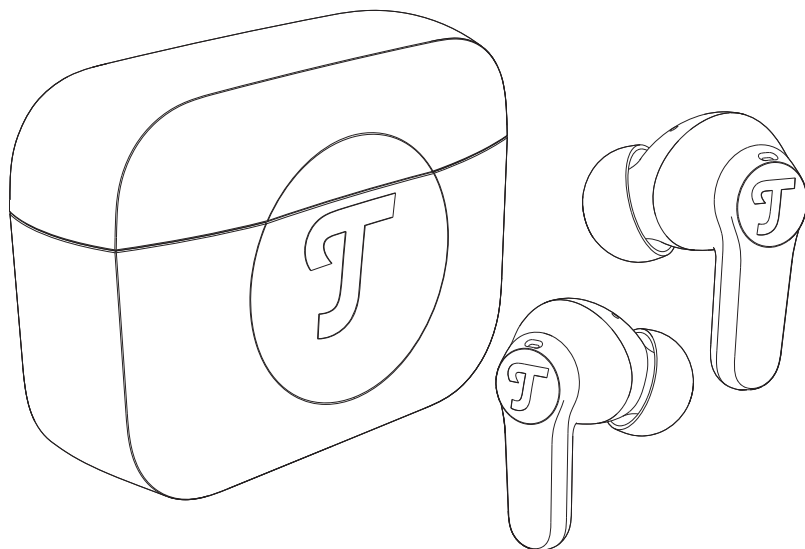

AIRY®
AIRY TWS 2

Teufel

Table of contents

Introduction	3	4. Using the Earphones.....	14
General Information	4	4.1 ANC and Transparency	
Notice	4	Mode.....	14
Right of Return	4	5. Charging	15
Complaints	4	5.1 Charging the earphones.....	15
For Your Safety	5	5.1.1 Charging time	15
Proper Use.....	5	5.1.2 Check the earphone	
Trademarks.....	6	battery level	15
1. What's in the box.....	7	5.2 Charging the charging	
2. Product overview.....	8	case	15
2.1 Earphones.....	8	5.2.1 Charging time	15
2.2 Charging Case	9	5.2.2 Check the case battery	
2.3 Charging case LED		level	16
indications.....	10	6. Care and maintenance	17
3. Getting started	12	6.1 Cleaning the earphones and	
3.1 Powering on & off	12	charging case	17
3.2 Choosing the correct		6.2 Storing the earphones in the	
eartips	12	charging case	17
3.3 Connecting with the		7. Troubleshooting.....	18
earphones	13	8. Technical Data.....	21
3.4 Information on the Bluetooth		9. Declaration Of Conformity	22
wireless connection.....	13		
3.5 Teufel Headphones App	13		

Introduction

Thank you for purchasing the Teufel Airy TWS 2 Bluetooth earphones which are designed to bring an extraordinary sound experience for your entertainment. Please read this user manual before using the earphones for the first time, and it will provide you with useful information and help you get started.

General Information

Notice

The information in this document is subject to change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopying or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH

Version 0.4

December 2023

Right of Return

If you wish to exercise your right of return, we ask that you make sure that you hold onto the original packaging. We can only accept the return of earphones with the original packaging. Earphones returned without the original packaging will not be accepted.

Complaints

In the event of a complaint, the invoice number is required in order for your complaint to be processed. The invoice number can be found on the sales slip (enclosed with the product) or on the order confirmation PDF document.

Thank you for your support!

For Your Safety

Proper Use

The “Teufel AIRY TWS 2” Earphones are designed for the playback of audio signals that can be wirelessly transmitted via Bluetooth® from the external player. The earphones are also suitable as a earphone for connecting to Bluetooth compatible (mobile) phones. Only use the earphones as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons. The manufacturer accepts no liability for damage caused by improper use. The earphones are intended for private use only.



Before operating the earphones, please first read the safety notes and user manual carefully. This is the only way to use all functions safely and reliably. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

Trademarks

© All trademarks are the property of their respective owners.

Apple, iOS and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.

 
Android and Google Assistant are trademarks of Google LLC.




The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Lautsprecher Teufel is under license.

1. What's in the box

Unpack the box carefully and ensure that the following parts are included. If any part is damaged or missing, do not use it and contact your retailer or customer service representative.

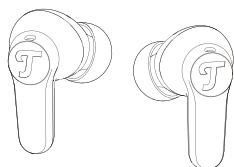

1 x pair of Earphones with eartips

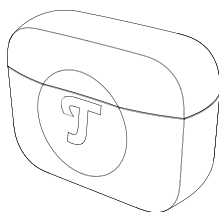 

1x case



5 x pairs of ear tips



 
1x type C to type A cable



1x multi-language quick start guide
1 x multi-language earphone safety booklet

2. Product overview


2.1 Earphones

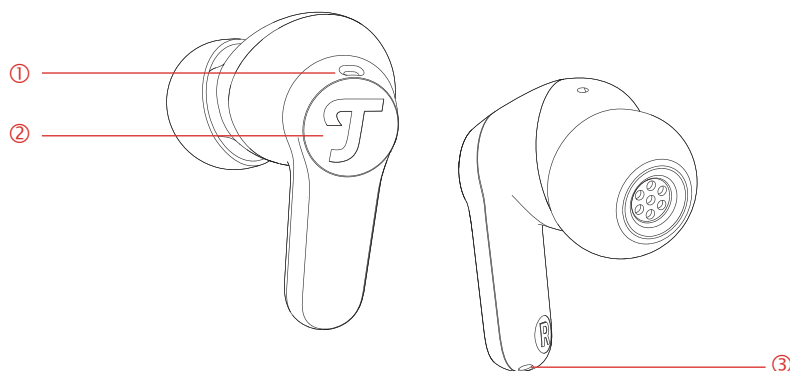

The “AIRY TWS 2” consists of the following elements:


1. Built-in Microphone
2. Multipurpose Area
3. Built-in Microphone and Charging contact

 2.2 Charging Case

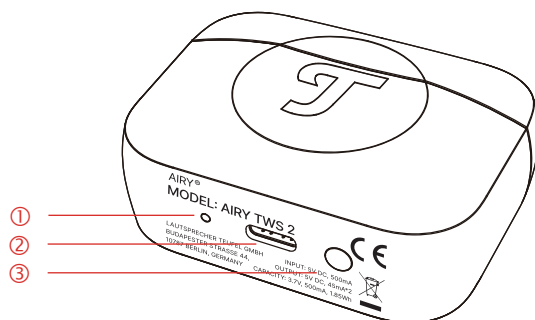

1. Battery indicator
2. USB-C charging port
3. Button

 2.3 Charging case LED indications

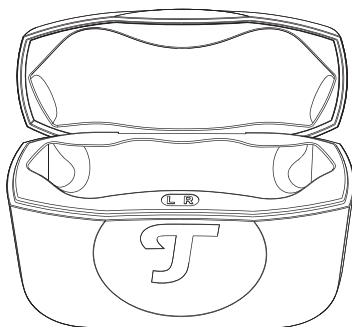

Charging the earphones

1. Put the earphones into the charging case, the LED is in blue for 5 seconds and go out;
2. When fully charged, the charging case battery level is displayed and the LED is solid on green for 5 seconds and go out.

Overview of the LED indications of the charging case.

Charging Case State	Charging Case LED Behavior
Battery level of charging case 71-100%	LED solid on green for 5 seconds, then off.
Battery level of charging case 46-70%	LED solid on yellow for 5 seconds, then off.
Battery level of charging case 21-45%	LED solid on orange for 5 seconds, then off.
Battery level of charging case 0-20%	LED solid on red for 5 seconds, then off.
Charging the case	0-20% power: LED breathes red. 21-45% power: LED breathes orange. 46-70% power: LED breathes yellow. 71-100% power: LED breathes green.
Charging Complete	When charging cable is connected, the LED is solid on green.

Charging Case State	Charging Case LED Behavior
On connecting charging cable	LED displays current battery level for one second and then repeats charging pattern according to charging progress.
On disconnecting charging cable	LED goes off.

3. Getting started

3.1 Powering on & off

 
1. Open the charging case, the earphones will automatically turn on.
2. Place the earphones into the charging case, then close the charging case, the earphones will power off and continue charging.

3.2 Choosing the correct eartips

For optimal audio performance, it is important to choose the correct eartip size. Select the size that gives you the best comfort and fit in each ear. To determine the best fit, you may need to try all five sizes. You may need a different size for each ear.

NOTICE

To test the fit, try speaking aloud. Your voice should sound muffled in both ears; if not, select another tip size.

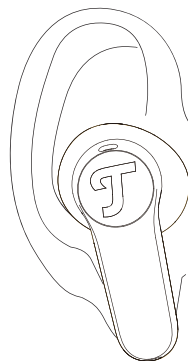


Insert the right earphone into your right ear and the left earphone into your left ear.

Insert the earphones at a slight angle into the ears and twist them slightly into the ear canal, so that they fit comfortably and snugly.

3.3 Connecting with the earphones

 1. Opening the charging case for the first time will automatically start pairing on the earphones.
2. Enable Bluetooth on your device and search for the “Teufel AIRY TWS 2”.
3. If the earphones have been paired with another device before, hold both L and R multipurpose area for 1.5 seconds. The earphones will enter pairing mode and the new device can find and connect to it.
4. If the earphones have already been paired to a device, they will automatically reconnect to that device. If none of these devices are available within 60 seconds, the earphones will enter pairing mode.

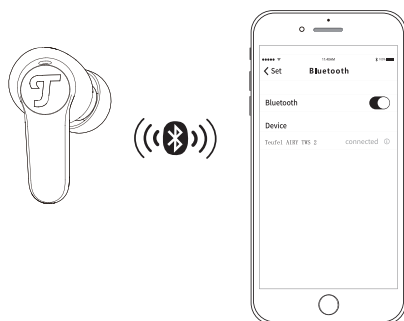

3.4 Information on the Bluetooth wireless connection

The earphones are compatible with Bluetooth 5.2.

If your audio source supports high-resolution audio encoding methods SBC, AAC, it will automatically play high audio quality music.

The paired devices immediately establish the Bluetooth wireless connection after switching on and are ready for use.

When you switch the earphones on, they automatically try to connect to the last connected Bluetooth device.

 
3.5 Teufel Headphones App

The headphone will come with an iOS and Android app that allow for the following functions:

- Battery Status
- Transparency/ANC
- EQ
- Personalized Earpiece Controls
- Headphone Settings



4. Using the Earphones

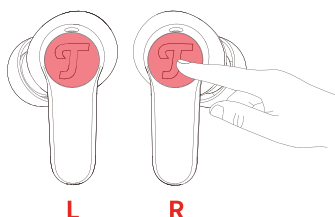

Play music - L/R



Phone Call - L/R



 
 
 
Volume Down - L



Volume Up - R



INTERACTION LEGEND

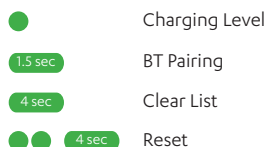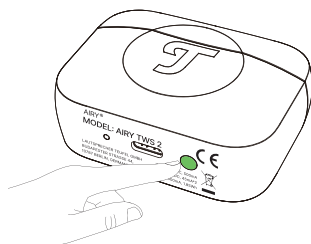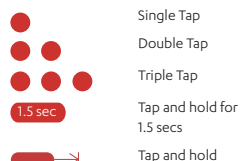

4.1 ANC and Transparency Mode

ANC Mode

Peacefully enjoy your sound in a constantly noisy environment.

You switch ON/Off ANC by triple tap pressing multipurpose area-R

Transparency Mode

Listen to your favourite content while hearing the most relevant sounds from the outside world.

You switch On/Off Transparency Mode by triple tap pressing multipurpose area-L

External sounds are mixed to the music and you can hear conversations or announcements.

5. Charging

5.1 Charging the earphones

The earphones charge while they are in the charging case.

5.1.1 Charging time

Allow up to two hours to fully charge the earphones.

NOTICE

A full charge of the earphones allows up to 6 hours of use.

5.1.2 Check the earphone battery level

While using the earphones

If connected to an Apple or Android device, the device displays the approximate battery level near the upper right corner of the screen and in the notification bar.

This displayed battery level is not accurate. To get the real-time battery level, use a Battery Widget for Android or iOS or the companion app.

While charging the earphones

When an earphone is inserted, its corresponding charging indicator glows according to charging status.

 
5.2 Charging the charging case

The charging case stores and charges the earphones when not in

use.

⚠ CAUTION

Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., CE, CCC).

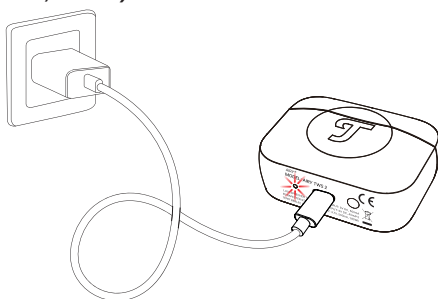

1. Connect the small end of the supplied USB cable into the USB-C port.
2. Connect the other end into a USB wall charger (not provided).

NOTICE

Before charging, be sure that the earphones are at the correct operating temperature of between 0°C and 45°C.

5.2.1 Charging time

 
Allow up to two hours to fully charge the case. When the earphones are inside of the case, charging time varies.

NOTICE



When the case is fully charged, you can charge the earphones up to 4 times.

5.2.2 Check the case battery level


After pressing the button the LED power indicators glow according to the battery level as follows:

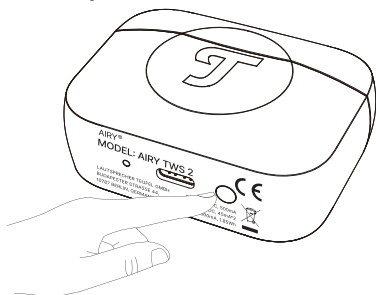


Battery level/Charging the case

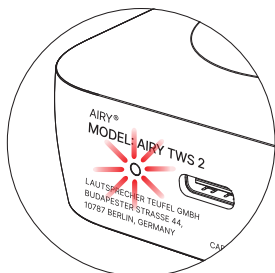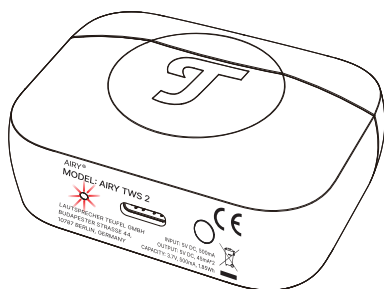  

 
It indicates the battery level is below 20%. When charging, the LED breathes red.

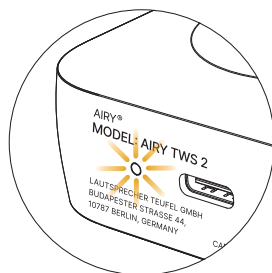

 It indicates the battery level is between 21% to 45%. When charging, the LED breathes orange.

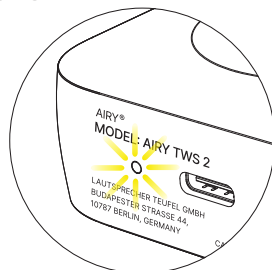

 It indicates the battery level is below 46% to 70%. When charging, the LED breathes yellow.

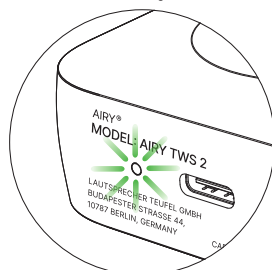

It indicates the battery level is over 71%. When charging, the LED breathes green.

6. Care and maintenance

6.1 Cleaning the earphones and charging case

The earphones and charging case may require periodic cleaning.

Component	Cleaning procedure
Eartips	Remove the tips from the earphones and wash them with a mild detergent and water. Note: Make sure you thoroughly rinse and dry the tips before re-attaching them to the earphones.
Earphone nozzles	Clean only with a dry, soft cotton swab or equivalent. Note: Never insert any cleaning tool into the nozzle.
Charging pins (on earphones and case)	To prevent rusting, regularly clean with a dry, soft cotton swab or equivalent.
Charging Case	Clean only with a dry, soft cotton swab or equivalent.

6.2 Storing the earphones in the charging case

Store the earphones in the charging case to prevent damage to the earphones when you are transporting them. The earphones are automatically charged when in the charging case so that you always have the longest possible battery life.

- Open the charging case, lift the top cover, and insert the left earphone into the left charging compartment and the right earphone into the right charging compartment.

The earphones are magnetically pulled into the charging compartments.

- Close the charging case.

7. Troubleshooting

If you experience problems with your earphones or charging case, see the table below to identify symptoms and solutions to common problems. If you

are still unable to resolve your issue, contact Teufel customer service.

Symptom	Solution
Earphones don't power on	<ol style="list-style-type: none">1. Place the earphones in the charging case to initiate charging.2. Make sure the earphones is not in standby mode and wake it up by pressing the multipurpose area.
Earphones don't connect with mobile device	<ol style="list-style-type: none">1. Make sure your mobile device supports Bluetooth technology.2. On your mobile device: Turn the Bluetooth feature off and then on.3. Delete your Teufel AIRY TWS 2 earphones from the Bluetooth list on your mobile device. Connect again.4. Move your mobile device closer to the earphones and away from any interference or obstructions.5. Connect a different mobile device.6. Clear the earphones pairing list and connect again. To clear the BT device list, put the earphones in the charging case and tap the L and R multipurpose area 5 times.
Earphones don't charge	<ol style="list-style-type: none">1. Make sure the earphones are properly placed in the charging case.2. Make sure the charging case battery is not depleted.3. Make sure there is no dirt or debris covering the charging conductors within the case or on the earphones.4. If your earphones have been exposed to high or low temperatures, let the earphones return to room temperature and then try charging again.

Symptom	Solution
Charging case doesn't charge	<ol style="list-style-type: none"> 1. Check the case battery level by opening the case. If needed, charge the case with the supplied USB-C cable. 2. Make sure, both ends of the USB cable are plugged in correctly and securely. 3. If your charging case has been exposed to high or low temperatures, let the case return to room temperature and then try charging again.
No sound	<ol style="list-style-type: none"> 1. Tap Play on your mobile device to make sure the audio track is playing. 2. Place the earphones in the charging case to check the earphones charging status. If needed, charge the earphones. 3. Increase the volume on the mobile device. 4. Move your mobile device closer to the earphones (10 m) and away from any interference or obstructions. 5. Use a different music source. 6. Connect a different mobile device.
No sound from one earphone	Make sure that both earphones are charged and that the earphones are paired with your Bluetooth device and connected to it. Also make sure that the earphones are inserted into your ears correctly.
Poor sound quality	<ol style="list-style-type: none"> 1. Make sure that both earphones fit securely in your ear. 2. Use a different music source. 3. Try connecting another mobile device. 4. Move your mobile device closer to the earphones (10 m) and away from any interference or obstructions. 5. Clear any debris or wax buildup from the earphones and earphones nozzles.
Eartips falling off	Securely attach the tips to the earphones.


Symptom	Solution
TWS Pairing (for Lost and purchase a new earbud)	<ol style="list-style-type: none"> 1. Make sure, there is no Bluetooth connection enabled in your playback device. 2. Put the two earphones in the charging case. 3. The pairing will be done with 3 short presses on both earphones respectively.

8. Technical Data

Driver Size:	Ø10 mm full range dynamic driver, one for each
Max Level during BT playback:	95 dB SPL (A) (According to EN-50332)
Battery:	Earbuds (x2): Lithium-Ion, 3.7 V, 45 mAh Charging Case (x1): Lithium-Ion, 3.7 V, 500 mAh
Radio network:	Bluetooth® 5.0
Frequency bands in MHz:	2400 – 2483.5
Transmission power in mW/dBm:	< 2.5 mW/< 4 dBm
USB Charging Power:	5V 0.5A

You can find further technical data on our website.

 Technical changes reserved!

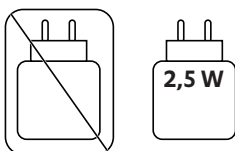

9. Declaration Of Conformity

CE Lautsprecher Teufel GmbH declares that this product complies with Directive 2014/53/EU. The full text of the EU declaration of conformity can be found at these Internet addresses:

www.teufel.de/konformitaetserklaerungen

www.teufelaudio.com/declaration-of-conformity



Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH
Bikini Berlin
Budapester Str. 44
10787 Berlin (Germany)

www.teufelaudio.com
www.teufel.de
www.teufel.ch
www.teufelaudio.at
www.teufelaudio.nl
www.teufelaudio.be
www.teufelaudio.fr
www.teufelaudio.pl
www.teufelaudio.it
www.teufelaudio.es

Telefon:

Deutschland: +49 (0)30 217 84 217
Österreich: +43 12 05 22 3
Schweiz: +41 43 50 84 08 3
International: 0800 400 300 20
Fax: +49 (0) 30 / 300 930 930
Online-Support:
www.teufelaudio.com/service
www.teufel.de/service
Kontaktformular:
www.teufel.de/kontakt
Contact:
www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.