


Technical Description and Operating Instructions

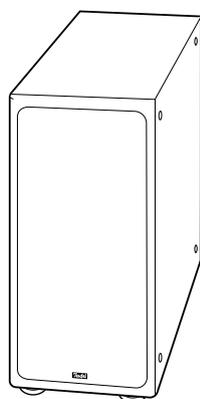

**Active subwoofer
US 5305/6**

Teufel

General notes and information

Proper use

Only use the unit as described in these operating instructions. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons. The manufacturer accepts no liability for damage caused by use not in accordance with the instructions. The unit is intended for private use.



Before operating the speakers please read the safety notes and operating instructions carefully. This is the only way to use all functions safely and reliably. Keep the operating instructions safe and pass them on to anyone who may own the unit after you.

Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH. No part of these instructions may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

Original packaging

If you wish to exercise your right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of a device WITH THE ORIGINAL PACKAGING. Empty boxes are not available!

Complaints

In case of a complaint we implicitly need your invoice number and the serial or lot number for processing. The serial number can be found on the back side of the device.

Many thanks for your support!

Contact

For questions, suggestions or criticism please contact our customer service department:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

Service: www.teufelaudio.com/service

Contact: www.teufelaudio.com/contact

Safety notes

Caution icons

You will find the following caution icons in these instructions:

-  = **High risk!** Failure to observe the warning may result in severe personal injury or death.
-  = **Moderate risk!** Failure to observe the warning may result in property damage.
-  = **Minor risk!** Points which should be observed when handling the unit.

Danger Risk of electric shock!



Faulty installation of electrical equipment or mains voltage which is too high can cause electric shocks.

- The device is only suitable for use with a power supply voltage of 230V ~ / 50Hz. Make sure that the mains voltage is correct. For more information, refer to the nameplate.
- Check the unit regularly for damage. If the unit's case or mains cable is defective or shows other signs of visible damage, disconnect the power plug immediately from the socket and do not operate the device.
- If the unit emits smoke or smells of burning or other unusual odours, disconnect it immediately from the power supply and do not operate it.
- The standby button does not disconnect the unit from the power supply. For this reason, connect it to an easily accessible socket so that you can quickly disconnect it from the power supply in the event of faults.
- Never open the unit's housing. Repairs may only be carried out by an authorised specialist workshop. Only parts which conform with the original unit specifications may be used in this case. There are electrical and mechanical parts in this unit which are necessary in order to avoid exposure to sources of danger.
- Use only accessories specified by the manufacturer.
- Do not insert any objects through the vent slots in the housing.
- Never touch the power plug with damp hands.

Danger Danger to children!



Children can become trapped in the packing film when playing and suffocate.

- Do not allow children to play with the unit or the packing film. Danger of suffocation.
- Ensure that children do not remove small parts from the unit or take them off of the unit (e.g. control knobs or plug adapters). They could swallow the parts and choke. Never allow children to operate electrical devices unsupervised.



Danger to hearing

Loud noise may lead to hearing loss.

Particularly when the subwoofer has been set to maximum volume and the unit is activated, very high noise pressure may suddenly be produced. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk.

- Set your signal source unit volume control to a low setting.
- When the volume is set high, always keep a certain distance from the unit and never place your ear directly on the speaker.
- To avoid damage to health, avoid extended listening at high volume.

Danger Danger of injury/damage!



Incorrect location may result in damage.

- Never use the subwoofer unmounted in vehicles, in unstable locations, on wobbly stands or furniture, on under-dimensioned brackets etc. The subwoofer could tip or fall down and cause injury to persons or be damaged.
- Place the subwoofer on the ground only.
- Place the speaker in such a way that it cannot be knocked over unseen and make sure that the cables do not pose a trip hazard.
- Do not place the unit near sources of heat (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).

Attention Fire hazard!



Improper use may lead to damage or fire.


- Do not place open flames such as burning candles or similar on the unit.
- Ensure sufficient ventilation.
- Do not place the unit in direct sunlight.
- Only use the unit in indoor areas.
- Do not operate the unit in moist areas and protect it from drops of water and splash water. Also take care not to stand vases or other containers filled with liquid on or near the unit in order to avoid liquid getting into the housing. If water or other foreign objects penetrate the case, immediately disconnect the power plug. Send the unit to our service address in this case.

Product contents

- ① 1 x active subwoofer US 5305/6
- ② 1 x power cord
- ③ 4 x stands with screws
- ④ 4 x blind plugs
- ⑤ 3 x stereo cinch cord
- ⑥ speaker cable



Check that all items have been delivered and that nothing is damaged. If you find damage, do not operate the device; instead contact our service department.

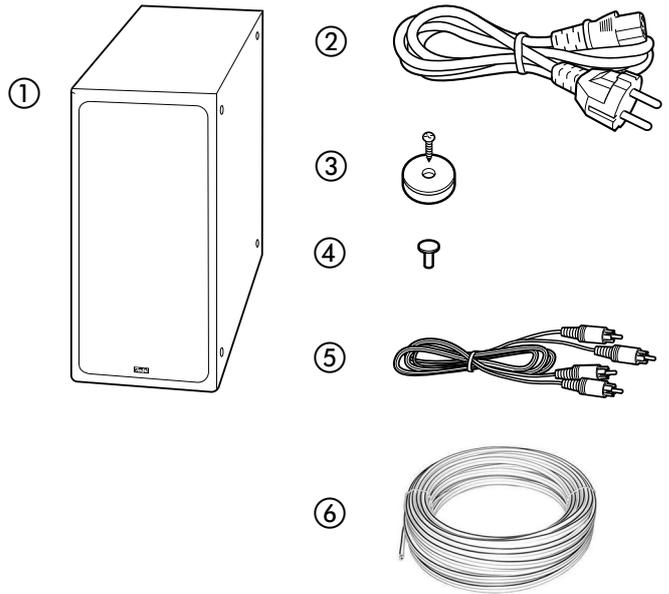

Technical data

Dimensions (WxHxD)	210 x 492 x 500 mm (incl. stands)
Weight	17.6 kg
Operating voltage:	230 V~/50 Hz
Max. power consumption	350 watts


Technical changes reserved!
You can find further technical data on our website.

Preparation


Mounting the speaker stands

The speaker stands ensure a safe stand of the subwoofer, they minimise vibrations and create sufficient distance to the floor.

1. Depending on whether you want to arrange your subwoofer in a horizontal or vertical position, screw-tighten the 4 speaker stands ③ on the bottom side or on the side wall of the subwoofer using the enclosed screws.
2. Insert the 4 blind plugs ④ in the unused holes.
3. When arranging the subwoofer, make sure that it has a stable position to prevent vibrations.
4. The Teufel logo magnetically adheres to the subwoofer and can easily be removed. Reposition it in case of a lying arrangement.

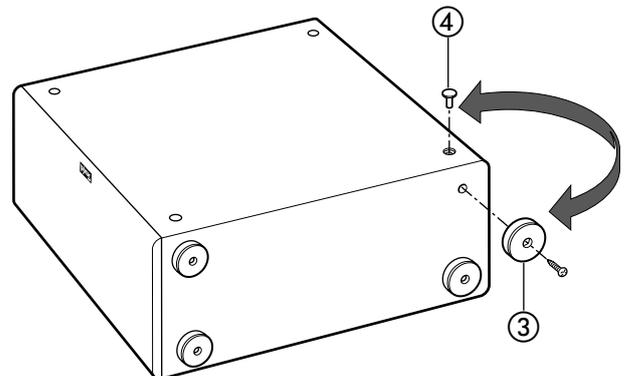

Control elements and connections

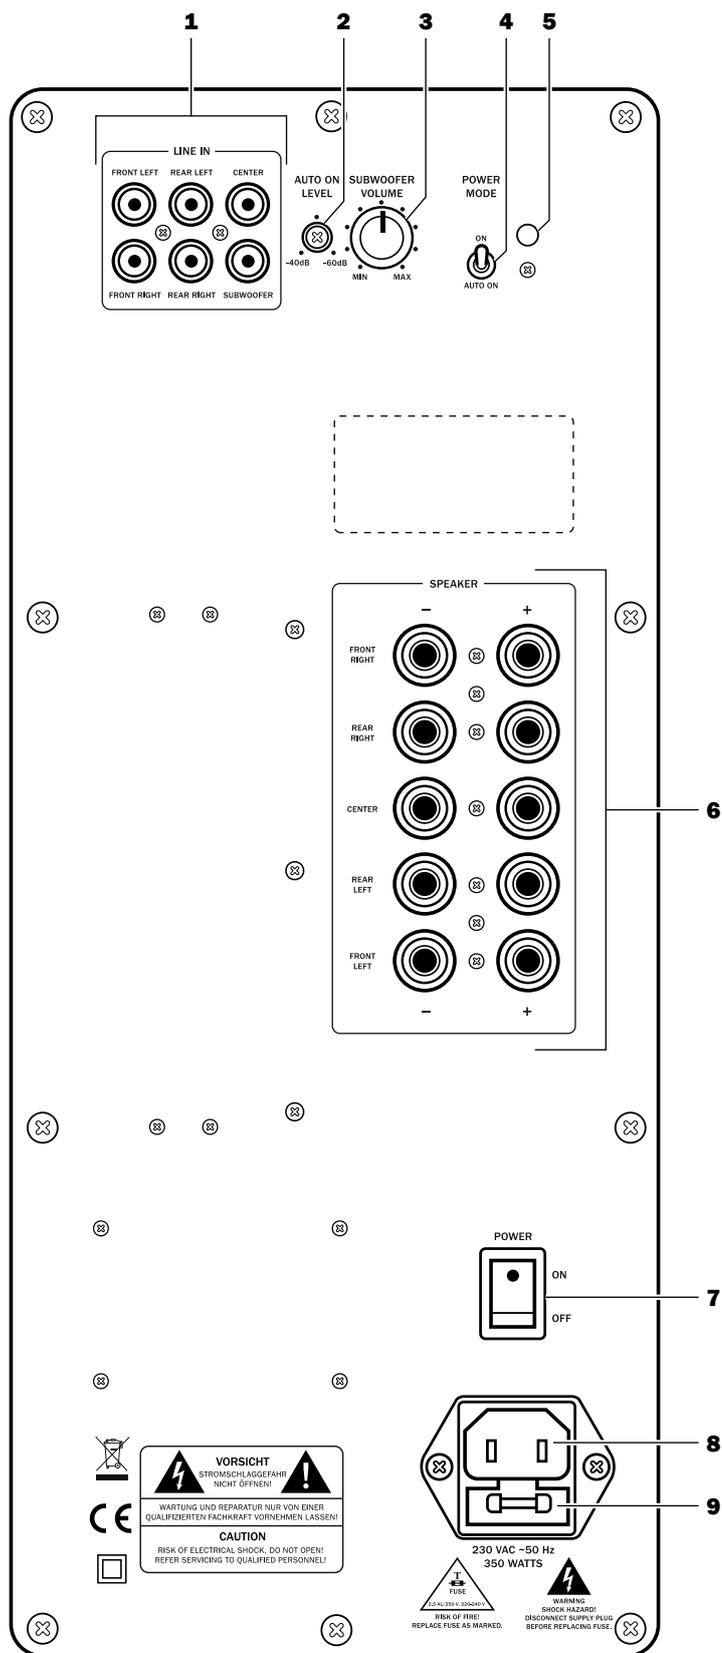

Item	Name	Description
1	Line In	Analogue 5.1 audio input jacks
2	Auto On Level	Set the sensitivity for automatic activation
3	Subwoofer Volume	Volume control for the subwoofer
4	Power Mode	Automatic activation/deactivation or permanently activated
5	-	Power LED
6	Speaker	Output jacks for satellite speakers
7	Power On/Off	Mains switch
8	-	Connection jack for power cord ②
9	-	Fuse holder

Setup notes

- Select a stable, level base.
- Make sure that the environment is clean and free from dust.
- Avoid placing the unit close to sources of heat or in direct sunlight.
- Arrange the connector cables so that they do not pose a trip hazard.
- Do not place any heavy objects on the cables or the speakers.
- The location of the subwoofer can be freely selected and does not influence the other speakers. However, do not place it in the corner of a room as this may cause uncontrollable frequency overloads. A location between the front speakers is often ideal.

Connecting


Danger Danger of injury/damage!



Arrange the cables so that they do not pose a trip hazard.

Subwoofer

1. Pull the power plugs of all devices to be connected out of the socket so that inadvertent switch-on is excluded.

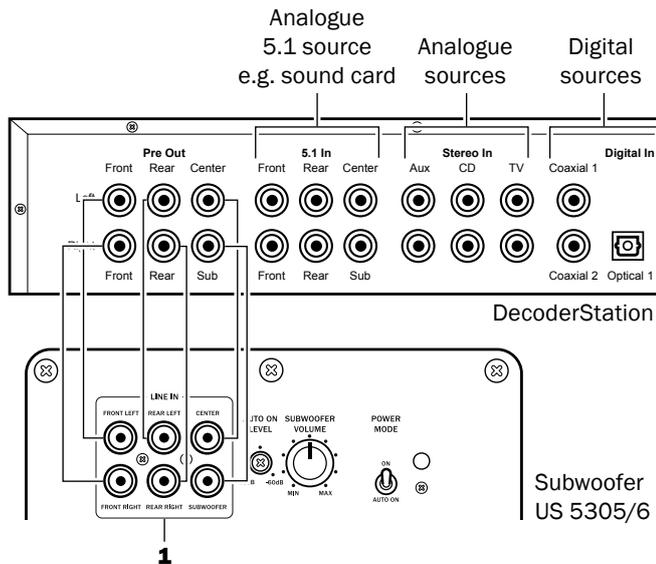

2. Connect the LINE IN jacks **1** of the subwoofer with the 5.1 output jacks of a preamplifier such as a decoder station using the included RCA cable.


Satellite speakers



Make sure the polarity is correct!


Connect the like coloured terminals. Otherwise the sound quality will suffer.

The strands of the speaker cables are marked with different colours or shapes.

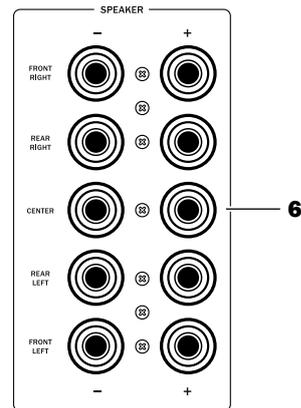



- The terminal **6** for connecting the satellite speakers is located on the back side of the subwoofer.
- Here you can connect the speaker cables directly or with pin plugs. We only describe the direct connection in these instructions.

1. Lay the included speaker cables from your subwoofer to each of the speakers.
Little hint: Label the cables on the subwoofer side – this will help when taking down and setting up your audio equipment.

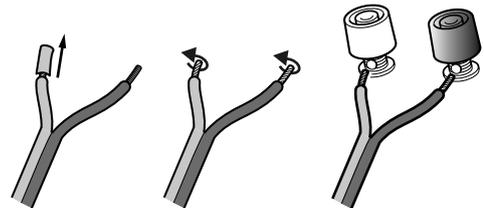

2. Split the single wire down to approx. 30 mm on both ends and strip approx. 10 mm of insulation off of each cord.
3. Twist the stripped single wire ends together so that no wire protrudes. Tin coating is not necessary.
4. Turn the connector terminal counterclockwise until loose. Run the stripped cable end into the now visible hole. Close the terminal by turning it counterclockwise. The cable has now been clamped in place.
5. Connect the other cable ends to your satellite speakers. The operating instructions of the speakers should contain notes on this.


Connection to the grid

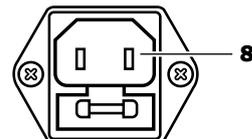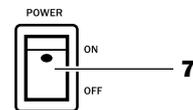

1. Ensure that the mains switch **7** "Power" on the subwoofer is switched off ("OFF" position).
2. Connect the mains connector jack **8** with a mains socket using the power cord **2**.
3. Also plug the mains plug of your AV receiver back into the socket.
4. Turn the mains switch **7** "Power" on the subwoofer to "ON".

Use

Activating and deactivating

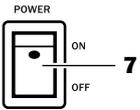

With the switch **7** "Power" you can turn the power supply on or off. If the subwoofer is activated, the power LED **5** is illuminated in green. In standby mode it is illuminated in red.


Auto On Level

You can adjust the sensitivity for the activation of the subwoofer with the allen screw "AUTO ON LEVEL" **2**. Turning the screw in a clockwise direction increases the sensitivity of the auto-on function. This means that the subwoofer will already be activated by a very low audio signal.

Subwoofer volume

With the control "SUBWOOFER VOLUME" **3** you can set the volume of the subwoofer

Automatic activation/deactivation

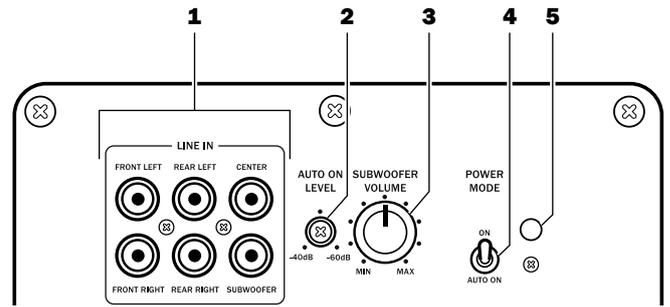

With the switch **4** "POWER MODE" you can switch the operating state:

Auto On: The subwoofer activates as soon as an audio signal is present on the input jack **1** "LINE IN". If there is no audio signal for some period of time, the subwoofer switches to standby.

On: The subwoofer is continually activated.

Cleaning and care

Clean the subwoofer regularly with a soft, damp microfiber cloth. If possible, only use plain water without any additives. In case of stubborn marks, a mild soap solution may be used.

Please be absolutely sure to observe the following notes in the process:

Danger Risk of electric shock!



In contact with live parts, water can lead to electric shock or short circuit.

- Make sure that no liquid penetrates the unit.
- Disconnect the mains plug before cleaning.

Attention Risk of damage!




Using the wrong cleaning materials may damage the delicate surface of the case.

- If possible, only use plain water without any additives. In case of stubborn marks, a mild soap solution may be used.
- In no circumstances should caustic cleaning products, white spirit, thinners, petrol or similar be used for cleaning.

Troubleshooting

The following notes and further detailed **information on our website** should help you to rectify malfunctions. If this does not lead to success, please contact our hotline ☎ 00800 - 200 300 40 (free of charge). Please also observe the warranty notes.

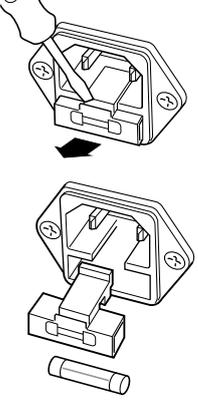Problem	Possible cause	Solution
The subwoofer isn't working.	The subwoofer is off or doesn't have any power.	Activate the switch 7 ("On"). Check the power cord and socket.
	Fuse is defective.	Replace the fuse: <ol style="list-style-type: none"> 1. Disconnect the power cord. 2. Carefully pull the fuse holder 9 on the mains connection jack 8 out. 3. Push the old fuse down and out. Insert a new fuse (2 A time-lag fuse). 4. Close the holder. 
The subwoofer doesn't emit basses.	The switch 4 "AUTO ON LEVEL" is set to Auto On but the input signal is too weak.	Increase the input sensitivity by turning the control 2 "AUTO ON LEVEL" to the right. Alternatively you can set the switch 4 "AUTO ON LEVEL" to "ON".
The subwoofer hums.	The subwoofer is connected to another circuit than the rest of the system.	Connect the subwoofer and the rest of the system to the same circuit.
	The buzzing is caused by problems with the power supply.	Buy a line filter and connect both devices to it.
	The buzzing is caused by a multiple socket.	Use another multi-outlet power strip or connect the subwoofer directly to the wall socket. It may also help to insert the power plug the other way around.

Declaration of Conformity



Lautsprecher Teufel GmbH declares that this product complies with the relevant European and national directives. The full text of the CE Declaration of Conformity can be found at this web address:

www.teufel.de/konformitaetserklaerungen

www.teufelaudio.com/declaration-of-conformity

Disposal

Important information in accordance with the Electrical and Electronic Equipment Act (Germany: ElektroG)

We advise owners of electrical and electronic appliances that old electrical and electronic devices must be handed in separately from municipal waste, in accordance with the applicable regulations. Batteries and rechargeable batteries that are not firmly enclosed in old electrical devices and lamps, and that can be removed from the old device without destroying them, must be separated from them in a non-destructive manner before they are handed to the collection point for their intended disposal. Please take note of our information on the Batteries Act [Germany: BattG] below for disposing of batteries.

You make an important contribution to returning, recycling and further processing of old devices if you separate your old devices into the correct collection groups for recycling.

The symbol below of a crossed-out dustbin, applied to electrical and electronic appliances, also advises of the duty to separate collections:



Consumer electronics stores and supermarkets are obliged, under certain conditions, to take back old electrical and electronic devices, in accordance with section 17 of the Electrical and Electronic Equipment Act. Stationary retailers must take back an old electrical device of the same type when a new electrical device is bought (1:1 return). This also applies to home deliveries. These retailers must also take back up to three small old electrical devices ($\leq 25\text{cm}$) without this being linked to a new purchase (0:1 return).

In accordance with the Electrical and Electronic Equipment Act, as online retailers of electrical devices and due to our product range, our obligation is limited to 1:1 return of large devices of $> 50\text{ cm}$ when selling a new electrical or electronic device of the same type. We comply with the obligation of return of devices other than large devices through our service provider. You can find the exact contact data and collection points on our website www.Teufel.de/entsorgung. It is also possible to return old electrical and electronic appliances free of charge at an official delivery point run by the public waste disposal authorities.

Important: For safety reasons we ask that you refrain from sending lighting fixtures (some lamps). For return of lighting fixtures please use the public waste disposal collection points or contact us directly at www.Teufel.de/entsorgung.

As an end-user, you are responsible for deleting any personal data on old electrical appliances before handing it in.

Important: Our appliances can contain batteries/rechargeable batteries. If this is the case, please refer to its attached product documentation for additional information on the type and chemical make-up of the battery. For products with battery compartments you can directly remove the batteries or rechargeable batteries and dispose of them properly. If the batteries are built in to the product, do not in any case attempt to remove the batteries yourself, instead contact one of our employees or appropriate specialist staff.



Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)
www.teufelaudio.com

Phone.: 00800 200 300 40 (toll-free)
Fax: +49 (0)30 - 300 930 930
Service: www.teufelaudio.com/service
Contact: www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information. Technical changes, typographical errors and other errors reserved.