


Technical Description and Operating Instructions

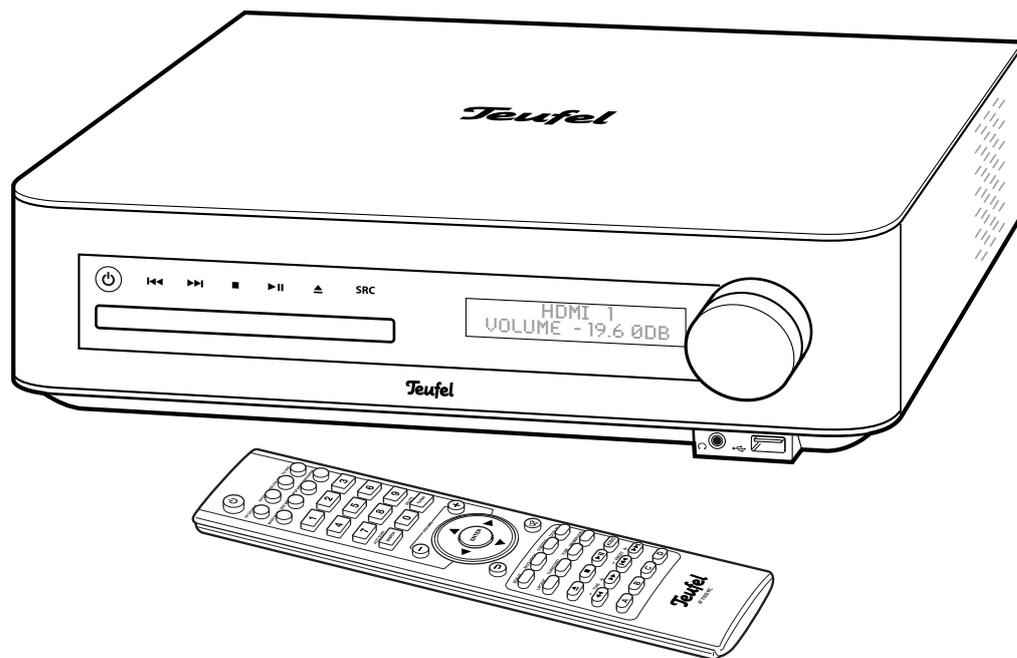

IP 7000 BR

BluRay receiver

Teufel

Contents

General notes and information	3	Audio	15
Notice	3	Source	16
Trademarks	3	Quick setup	16
Original packaging	3	Special function buttons	17
Complaints	3	"RESOLUTION" button	17
Contact	3	"SURROUND" button	17
Safety notes	4	"TONE" button	17
Overview	5	"LIPSYNC" button	17
Control elements and connections	6	"SPEAKER LEVEL" button	17
Setup and connection	8	Buttons "A B C D"	17
Location tips	8	Radio mode	18
Setting up the speakers	8	Setting the radio stations	18
Center speaker	8	Station memory	18
Front speakers	8	Saving stations manually	18
Surround speakers	8	Saving stations automatically	18
Subwoofer	8	Selecting stations from the memory	18
Rear speakers	8	Deleting saved stations	18
Connecting the speakers	8	BD/DVD/CD mode	19
Television/projector	9	USB mode	20
Inputs for source devices	9	DLNA mode	21
FM antenna	10	Playback functions	22
Network/Internet	10	General playback	22
Connection to the grid	10	BD and DVD playback	22
Remote control	10	Displaying information	22
Inserting batteries	10	Video playback menu	23
Functionality	10	Searching	23
First activation	10	Repeat function	23
Basic functions	11	File selection	24
Sensor buttons	11	Video playback	24
Activating and deactivating	11	Music playback	24
Selecting a source	11	Image playback	25
Adjusting the volume	11	AVCHD playback	25
Mute	11	Playlist	25
Main menu	12	Including files in the playlist	25
My Media	12	Playing the playlist	25
Settings	13	Removing files from the playlist	25
"Display" menu	13	Care and cleaning	26
"Audio" menu	13	Troubleshooting	27
"Language" menu	14	Index	29
"Network" menu	14	Protecting the environment	30
"System" menu	14	Technical data	30
"BD-Live Storage"	15		
"DivX® VOD DRM"	15		
"Security" menu	15		

General notes and information

Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of these instructions may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH
Version 1.0, June 2013

Trademarks

© All trademarks are the property of their respective owners.

Dolby

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

DTS

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Patents

Protected by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

ABOUT DIVX VIDEO

DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation.

This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX® VOD section in your device setup menu. Go to www.divx.com for more information on how to complete your registration.

Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of a unit WITH THE ORIGINAL PACKAGING.

Empty boxes are not available!

Complaints

In case of complaint we will need the following information to process your enquiry:

1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543.

2. Serial number or batch number

Located on the back of the unit,
e.g. serial #: IL70009440122A-123

Many thanks for your support!

Contact

For questions, suggestions or any other issues please contact our customer service department:

Lautsprecher Teufel GmbH
Gewerbehof Buelowbogen
Buelowstrasse 66
10783 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

E-Mail: service@teufelaudio.com

www.teufelaudio.com

Safety notes

Caution icons

You will find the following caution icons in these instructions:

Danger High risk!

Failure to observe the warning may result in severe personal injury or death.

Attention Moderate risk!

Failure to observe the warning may result in property damage.

**Minor risk!**

Points which should be observed when handling the unit.

Safety notes

Danger Risk of electric shock!

Faulty installation of electrical equipment or mains voltage which is too high can cause

electric shocks.

- The device is exclusively suitable for mains voltage of 220 V–240 V~ / 50/60 Hz. Make sure that the mains voltage is correct. For more information, refer to the nameplate.
 - Check the unit regularly for damage. If the unit's case or mains cable is defective or shows other signs of visible damage, disconnect the power plug immediately and do not operate the unit.
 - If the unit emits smoke or smells of burning or emits unusual sounds, disconnect it immediately from the power supply and do not operate it anymore.
 - The standby button does not disconnect the unit from the power supply. For this reason, set up the device so that the power plug is easily accessible and the vents are unobstructed.
 - Never open the unit's housing. Repairs may only be carried out by an authorised specialist workshop. Only parts which conform with the original unit specifications may be used in this case. There are electrical and mechanical parts in this unit which are necessary in order to avoid exposure to sources of danger.
 - Do not insert any objects through the vent slots in the housing.
 - Only use the unit in indoor areas.
 - Do not operate the unit in damp areas and protect it from drops of water or splash water. Also take care not to stand vases or other containers filled with liquid on or near the speaker in order to avoid liquid getting into the case. If water or other debris penetrate the unit, immediately disconnect the power plug and, if necessary, remove any batteries. Then send the unit to our service address.
 - Never touch the mains adapter with damp hands.
-

Danger Danger to children!

Children can become trapped in the packing film when playing and suffocate.

- Do not allow children to play with the unit or the packing film. Danger of suffocation.
 - Ensure that children do not remove small parts from the unit or take them off of the unit (e.g. control knobs or plug adapters). They could swallow the parts and choke. Never allow children to operate electrical units unsupervised.
-

Danger Danger to eyes and skin!

Opening the disc compartment with the lock deactivated will cause an invisible or visible laser beam to be emitted.

- Do not look into the beam, even if you are using optical instruments.
-

**Danger to hearing!**

Extended listening at high volumes may lead to hearing loss.

- To avoid damage to health, avoid extended listening at high volumes.
 - When the volume is set high, always keep a certain distance from the unit and never place your ear directly on the speaker.
 - Particularly when the subwoofer has been set to maximum volume and the unit is activated, very high noise pressure may suddenly be produced. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk. Set your signal source unit volume control to a low setting before turning on the power.
-

Danger Danger of chemical burns!

Leaking battery acid may lead to chemical burns.

- Do not allow battery acid to come into contact with skin, eyes or mucus membranes. In case of contact with acid rinse the affected part immediately with plenty of plain water and if necessary see a doctor.
-

Danger Danger of injury/damage!

Incorrect location may result in damage.

- Never use the units unmounted in vehicles, in unstable locations, on wobbly tripods or furniture, on underdimensioned brackets etc. The device could fall down and cause injury to persons or be damaged itself.
 - Place the speakers in such a way that they cannot be knocked over unseen and make sure that the cables do not pose a trip hazard.
 - If mounting the speakers on the wall, make sure that the job is carried out by a professional.
 - Only use suitable wall brackets for mounting. Verify the carrying capacity of the walls.
-

- Only set up the device and the speakers on a stable, level surface.
- Do not place the unit near sources of heat (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).

Danger Danger of explosion!



Batteries and rechargeable batteries may explode if overheated.

- Never attempt to charge normal batteries.
- Do not expose batteries or rechargeable batteries to heat and never throw them in open fire.

Attention Fire hazard!



Improper use may lead to damage or fire.

- Do not place open flames such as burning candles or similar on the unit.
- Ensure sufficient ventilation.
- Do not place the unit in direct sunlight.
- Do not cover the vents with curtains, blankets, newspapers or similar. Heat build-up inside the unit can shorten its lifetime.

Attention Risk of damage!



External influences may damage or destroy the device.

- If the unit is to be left unsupervised for a long period (e.g. during a holiday), or if a thunderstorm is forecast, disconnect the power plug from the mains power supply.

- If the device is subjected to warm temperatures after being cold (e.g. after transport), condensation may occur inside of it.
In this case, wait at least 2 hours before you connect and activate it.
- Old used batteries may leak.
Remove the batteries from the remote control if you do not use them for a prolonged period of time.

Proper use

Only use the unit as described in these operating instructions. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by use not in accordance with the instructions.

The unit is intended for private use.



Before operating the speakers please read the safety notes and operating instructions carefully.

This is the only way to use all functions safely and reliably.


Keep the operating instructions safe and pass them on to anyone who may own the unit after you.

Overview


Product contents

- ① 1 x BluRay receiver IP 7000 BR
- ② 1 x remote control
- ③ 2 x Battery micro/AAA for remote control
- ④ 1 x FM throw-out aerial
- ⑤ 1 x power cord
- ⑥ 6 x speaker cable

- Check that all items have been delivered and that nothing is damaged.
- If the delivery is incomplete or you find damage sustained in transit, do not operate the unit but contact our service department (see page 3).

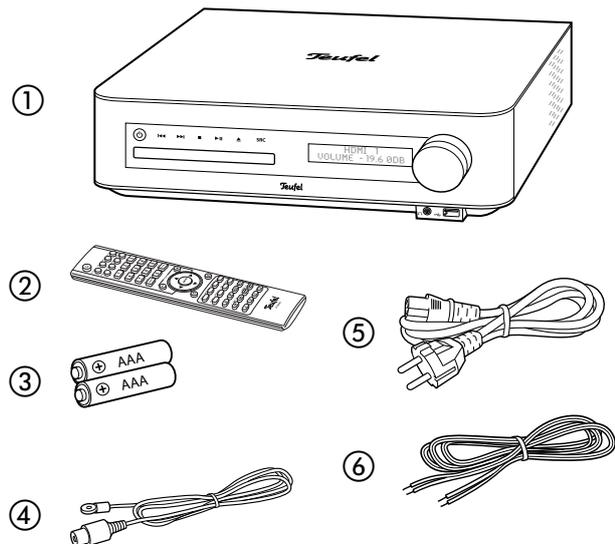

Remote control

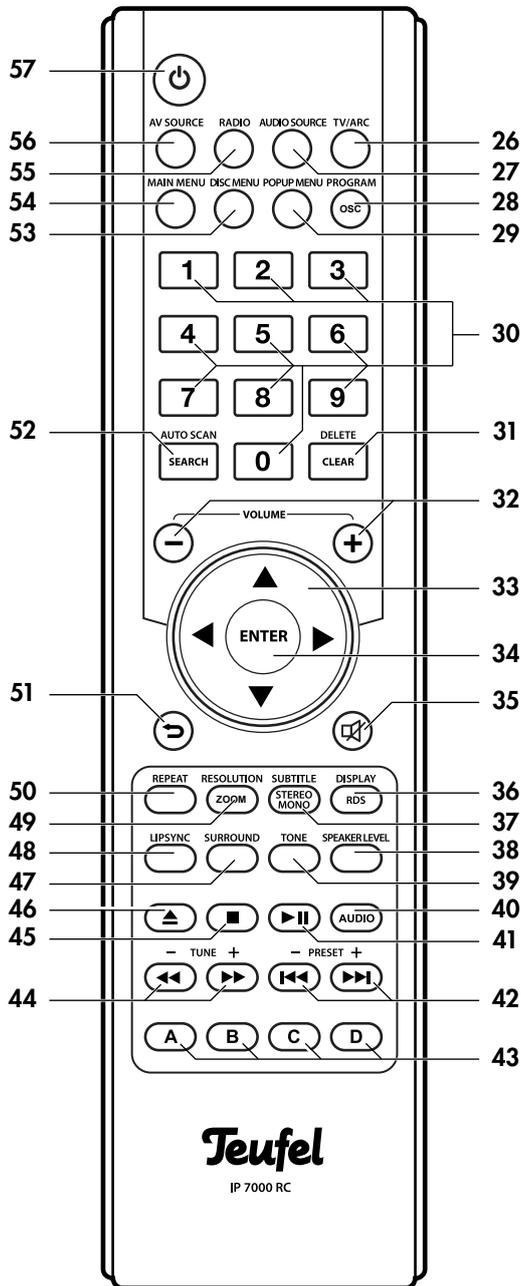


Item	Name	Description
26	TV/ARC	Select TV as audio source
27	AUDIO SOURCE	Select audio input
28	PROGRAM	Player: Display options Radio: Save to station memory slots
29	POPUP MENU	Access the popup menu
30	1...0	Number buttons
31	DELETE/CLEAR	Delete button
32	- VOLUME +	Increase/decrease volume
33	▲▼◀▶	Navigation up, right, down, left
34	ENTER	Select button
35	🔇	Mute speaker
36	DISPLAY/RDS	Additional display/RDS information
37	SUBTITLE STEREO/MONO	Video: Select subtitles Radio: Switch between stereo/mono
38	SPEAKER LEVEL	Adjust the channel volume
39	TONE	Adjust the sound
40	AUDIO	Video: Configure the audio track
41	▶	Playback/pause
42	◀◀/▶▶ - PRESET +	Audio/video: Skip back/forward Radio: Access the station memory
43	A B C D	Control buttons for BD programs
44	◀◀/▶▶ - TUNE +	Fast rewind/forward Radio: Adjust the frequency
45	■	Stop playback
46	▲	Open the disc compartment
47	SURROUND	Surround settings
48	LIPSYNC	Video: Set the audio delay
49	RESOLUTION	Set the image resolution
50	REPEAT	Adjust repeat
51	↶	Skip back/exit the menu
52	AUTO SCAN SEARCH	Player: Select the track, chapter, time Radio: Automatically save the station
53	DISC MENU	Access the BD/DVD menu
54	MAIN MENU	Main menu
55	RADIO	Select "FM" radio (VHF)
56	AV SOURCE	Select the audio/video source
57	🔌	Turn the device on or to standby

Setup and connection

Location tips

- Select a stable, level base or a suitable wall.
- Make sure that the environment is clean and free from dust.
- Avoid placing the unit close to sources of heat or in direct sunlight.
- Do not place any heavy objects on the cables, the speakers or the device.
- The device should have approx. 10 cm of clearance on all sides to ensure adequate circulation of air.

Setting up the speakers

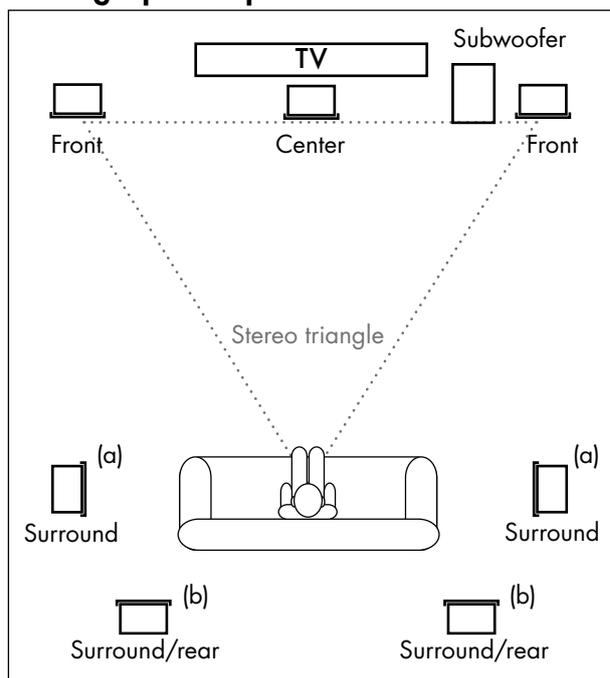

Center speaker

- Place the center speaker in a central position directly under the screen or ideally on a circular arc that is slightly curved towards the screen. You can also mount some speaker models directly on the wall using the keyhole on the rear panel.

Front speakers

- The front speakers are set up or hung to the right and left of the screen.
- The speakers should be in line with the center speaker and form an equilateral triangle with the listener – the so-called stereo triangle (distance from the listener = distance between the speakers).
- The speakers should project sound directly into the room or slightly towards the listener.

Surround speakers

- The surround speakers are setup or hung to the side (a) or back (b) of the listener at a height of 1.20 m to 2.10 m.
- There should be at least 100 cm distance to the listener.

Subwoofer

- The location of the subwoofer can be freely selected and does not influence the other speakers. However, do not place it in the corner of the room as this may result in irregular frequency overloads. A location between the front speakers is often ideal.

Rear speakers

The IP 7000 BR emits the rear channels via the jacks **21** "RC/PRE OUT" to set up a 6.1/7.1 system. You can connect an external stereo amplifier, active speaker or radio system (e.g. the RearStation 4) to it. Then the speakers are mounted behind (b) or above the viewers.


Connecting the speakers

Attention Risk of damage!



Do not connect the unit to the mains yet!

Use the highest quality of speaker cords possible with a cross-section of at least 1.5 mm² to connect to the speakers. You can order this type of cables in our webshop (www.teufelaudio.com) in the "Accessories" area.

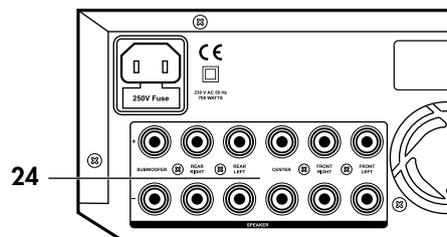


The connector terminals **24** "SPEAKER" for the six speakers are located on the back side of the receiver:

Speaker	Label
Subwoofer	SUBWOOFER
Surround right	SURR RIGHT
Surround left	SURR LEFT
Center	CENTER
Front right	FRONT RIGHT
Front left	FRONT LEFT

The terminals are each marked red (+) and black (-).

! Make sure the polarity is correct!
 Connect the like coloured terminals. Otherwise the sound quality will suffer. The strands of the speaker single wire are marked with different colours or shapes.

Split the single wire down to approx. 30 mm on both ends and strip approx. 10 mm of insulation off of each cord. Twist the single wire so that no strands are protruding.

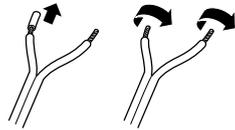


Turn the connector terminal **24** counter-clockwise until loose. Run the stripped cable end into the now visible hole. Close the terminal by turning it counter-clockwise. The cable has now been clamped in place.



Television/projector

You can connect a television set and/or projector to the following outputs:

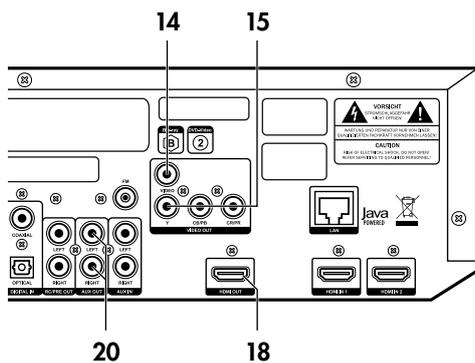

18 HDMI OUT

Digital picture and audio signals via a HDMI cable.

15 Y CB/PB CR/PR

Analogue component picture signal via a triple RCA cable. Pay attention to the colour of the jacks (green, blue and red) when connecting. Audio is emitted via the RCA jacks **20** "AUX OUT" as stereo downmix.

14 VIDEO


Analogue picture signal (FBAS) via an RCA cable. The audio is emitted via the jacks **23** "AUX OUT" in this case as well.

You should preferably use the HDMI output **18** as only the signals of HDMI inputs 1 and 2 are emitted here. The HDMI inputs may not be used when connecting via one of the other outputs.

Inputs for source devices

The receiver offers you two inputs for digital HDMI picture and audio sources (HDMI 1 + 2). An optical and coaxial digital audio input and analogue audio input (AUX IN) are also available.

You can also connect the audio output of your television set to one of these audio inputs in order to listen to audio from the receiver when you watch television shows. See the operating instructions of your television set for more information.

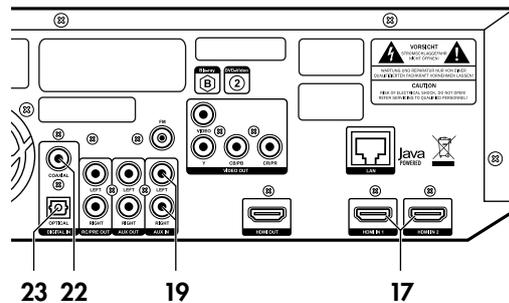

17 HDMI 1 and 2

You can connect a source device with a digital picture and audio signal to each of these inputs. You will need a HDMI cable for this.

! Important
 You can only use these HDMI inputs if the playback device (TV or projector) is connected via HDMI.

22 COAXIAL

You can connect the coaxial digital audio output of a source device here. You will need a coaxial cable with RCA plugs to do so.

23 OPTICAL

You can connect the optical digital audio output of a source device here. You will need an optical cable with a TOSLINK plug for this. Your source device requires either an optical 3.5 mm plug or a TOSLINK plug.

19 AUX IN

You can connect a source device with analogue audio here. You will need a stereo RCA cable for this (L and R).

FM antenna


Danger Risk associated with lightning strike!



If you use a roof or outdoor antenna, ensure that the antenna unit has suitable lightning protection.

To receive FM/VHF stations, connect the antenna to the jack **13** "FM". This may be a roof/outside antenna, but also a cable television connection. You will need a coaxial connector cable for this.

If no antenna connection is available at the installation location, you can use the enclosed throw-out antenna **④**. Connect the antenna to the "FM" jack **13** and adjust the position of the throw-out aerial for optimal reception. Then fix the antenna in place with tape or a nail.

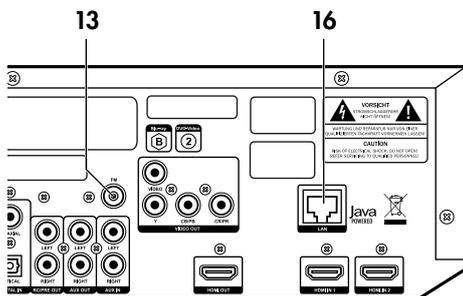

Network/Internet


The receiver requires a network connection for Internet-based functions (BD Live), media streaming (DLNA) and program updates. Connect your network or router to the jack **16** "LAN" using a network cable.



Important

The length of the network cable must not exceed 3 m.

Connection to the grid

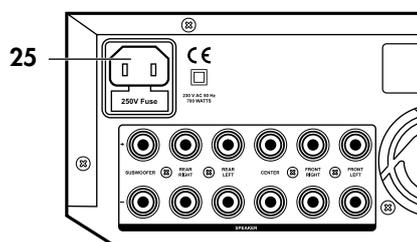


- Connect the network jack **25** to a mains socket using the power cord mains cable **⑤**.

Remote control

In order to operate the remote control, you will need two type AAA 1.5 Volt micro batteries (included in the product contents).

Inserting batteries

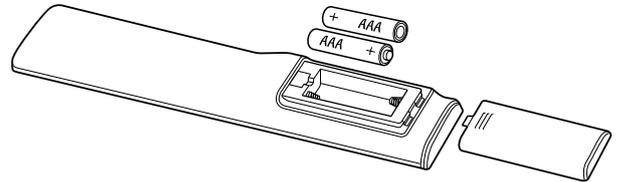

1. Gently push on the ridged surface of the battery compartment cover on the back of the remote control and push the lid down. Remove the cover.
2. If necessary, remove the old batteries (please observe the notes on page <?>).
3. Insert the batteries according to the image on the battery compartment; in the process, make sure the polarity is correct.
4. Place the cover back on the compartment and push it closed.

Functionality

The remote control relays the control signals by means of infrared light. For this, you will have to point the front of the remote control towards the receiver. Make sure that the infrared light is not obstructed by objects.

Fluorescent lamps and energy-saving lamps installed in the direct vicinity may affect the functions of the remote control or impair them.

First activation

The first time you activate the IP 7000 BD, it will request the most important settings in "Quick setup". You can change any of the settings later on.

- Menu language – if applicable, select "English".
- TV resolution – you should select "Autom" when connecting the TV set via HDMI. Please observe the notes in the operating instructions for your TV set and the point "Resolution" on pages 13 and 17.
- Aspect ratio – determines how videos in 4:3 format will be displayed on 16:9 screens and vice-versa (see "Aspect ratio" on page 13 for details).

Basic functions

Sensor buttons

The buttons on the front of the receiver are illuminated sensor buttons: Lightly touching them will cause them to switch.

Activating and deactivating

- With the button **12** or **57** "⏻", you switch your receiver to the operational or standby mode.
- The button **12** is illuminated in red in standby.

Standby does not disconnect the device from the mains. Pull the mains plug out of the socket to completely deactivate it.

Selecting a source

After turning the device on, the last used source device is selected.

- With the "SRC" sensor button **7**, switch the source in the following order:
HDMI 1, HDMI 2, COAXIAL, OPTICAL, AUX, FM (FM radio), MAIN MENU.
- Or switch the source with the direct select buttons:
56 "AV SOURCE" – HDMI 1, HDMI 2, BD
55 "Radio" – FM
27 "AUDIO SOURCE" – COAXIAL, OPTICAL, AUX

The selected source is shown in the display panel **4**.

Playback of BD/DVD/CD, a USB stick or media server (DLNA) is started in the main menu under the item "My media" (see page 12).

If you insert a CD, DVD or BluRay disc, it will start automatically (see page 19).

You can switch to the audio signal of the TV set with the button **26** "TV/ARC". Prerequisite: The receiver is connected to an ARC-capable HDMI input of the TV, the TV's CEC function (that is, "Viera Link", "Anynet+", "Simplink" or "Bravia Synch") is activated just like the CEC function of the receiver (see page 14).




Adjusting the volume

- Increase the volume: Turn the control **1** clockwise or push the "Volume" **32** button.
- Decrease the volume: Turn the control **1** counter-clockwise or push the "Volume" button **32**.

The display panel **4** will show the selected volume in the range from -50 dB (quiet) to 10 dB (loud).

Mute

- You can turn off the audio with the button **35** "⏻". The notice "MUTE ON" will appear on the display panel **4**.
- Turn the sound back on: Push the button **35** "⏻" again or adjust the volume.

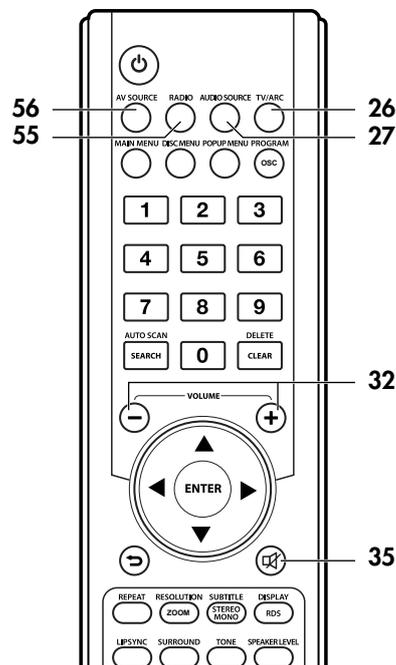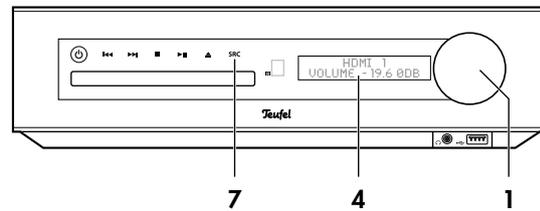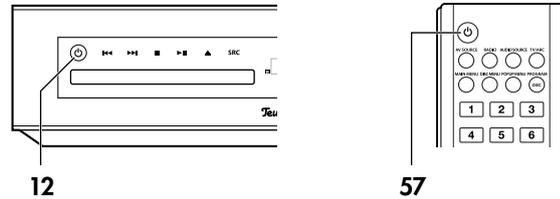

Main menu

Most functions of your receiver are configured via the main menu. You can navigate through the menu with the remote control and it will be shown on the connected television set.

Both devices must be turned on in order to view the picture from the receiver on the television set.

To use the main menu:

1. Push the button **54** "MAIN MENU". The main menu will open.
2. Select the desired menu with the navigation buttons **33** "►" and "◀" and confirm with the select button **34** "ENTER". The sub-menu will open.
3. Select the desired menu item with the navigation buttons **33** "▲▼◀▶" and confirm with the select button **34** "ENTER".
4. You can open other sub-menus in the same manner and make settings.
5. To return to the previous menu, push the button **51** "↶" or the navigation button **33** "◀" several times.




My Media

Select data storage devices, servers and playlists for playback in this menu:

USB1	A USB stick or a USB hard-drive connected to the USB port 2 "USB" (see page 20).
BluRay Disc/ DVD Video/ CDDA/ Data Disc	A BD, DVD or CD – the designation depends on the type and content of the disc (see page 19).
DLNA Server	DLNA media server connected via a network (see page 21).
Playlist	You can add tracks from a USB and BD/DVD/CD to this list in order to play them in a specific order (see page 25).

More information on each menu item is displayed on the right side.

After you select a data carrier or server, the available data and folders are shown in a list and can be selected for playback.

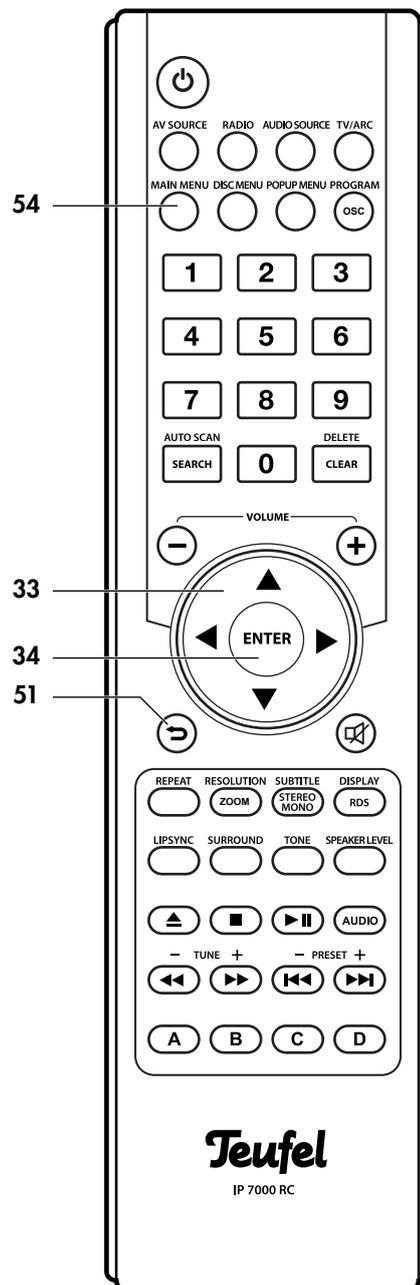



Settings

You can configure the settings of the device here.

“Display” menu

Here you can configure the settings for the connected image playback device (e.g. TV, projector):

“TV Aspect Ratio”

Configuring the display on the TV set:

16:9 Normal – 4:3 movies are displayed with the full height and black bars on the left and right side on a 16:9 TV set, which is optimal as with 16:9 movies. All movies are vertically stretched on a 4:3 device.

16:9 Full – 4:3 movies are displayed with the full height and stretched width on a 16:9 TV set, optimal for 16:9 movies. Both movie types are optimally rendered on a 4:3 TV which can be switched to 16:9 mode.

4:3 Pan&Scan – 16:9 movies are shown on a 4:3 television set in full height, but the sides are cut off. 4:3 movies are optimally rendered.

4:3 Letterbox – 16:9 movies are displayed on a 4:3 TV set with the full width, but black bars on the top and bottom and reduced resolution. 4:3 movies are optimally rendered.

“Resolution”

Set the resolution of the television set for HD playback.

Possible values:

Auto, 1080p, 1080i, 720p, 480p/576p, 480i/576i

With “Auto”, the highest possible resolution is automatically selected.

When the resolution changes, a window where you have to confirm the new resolution with “Yes” appears; otherwise it will switch back to the previous resolution after 15 seconds.

You can also change this setting with the special function button “Resolution” **49** (see “Special function buttons” on page 17).

“TV System”

Set the colour transfer system for the connected television set:

NTSC – American standard, also suitable for playing PAL discs in NTSC – only suitable for NTSC-TVs.

PAL – European standard, also plays NTSC discs in PAL – suitable for TVs without NTSC mode.

Auto – automatic switching

The colour standard is automatically selected corresponding to the inserted disc (DVD/BD).

“HDMI Colour Space”

Adjust colour playback to your TV set. Please closely follow the operating instructions for your TV set for this.

Possible settings:

Auto – automatic compensation.

YCbCr (also referred to as YUV 4:4:4) – should only be used with corresponding suitable TVs.

YCbCr422 (also referred to as YUV 4:2:2) – ideal for conventional HDMI televisions.

Full RGB – 256 values per colour, for PC monitors).

RGB (values per colour from 16 to 235, for HDMI TV sets, which display unclear colours with another setting).

“HDMI Deep Colour”

“Deep Colour” expands the colour range via HDMI; however, this function cannot be used by all TV sets.

Auto – automatic setting.

Off – e.g. for connecting via a video or component cables or if “Auto” displays incorrect colours.

“HDMI 1080p 24Hz”

Movies are saved on BluRay discs with the full resolution and 24 frames/second (1080p24). Not all television sets are capable of rendering such frame rates. Deactivate this option if the picture flickers or stutters excessively. However, BluRay discs will stutter slightly at regular intervals in this case.

Note: 1080p are only emitted via HDMI. A maximum of 1080i is available at the component output regardless of this setting.

“HDMI 3D”

Activate and deactivate transmission of three-dimensional movies.

“Audio” menu

You can make special settings for audio processing here.

“HDMI Out”

Determines the audio output at the HDMI output **18**

“HDMI OUT”. Possible values:

PCM – The audio signal is mixed on 7.1 and transferred as PCM.

Bitstream – Passes the data stream of the BluRay disc on unchanged.

Bitstream Re-encode – Passes the data stream of the BluRay disc mixed and coded in a single data stream. Suitable for Dolby TrueHD and DTS-HD Master Audio.

“Down Sampling”

Determines the sampling rate of the audio signal. Possible values:

48 kHz – corresponds to CD quality

96 kHz – corresponds to DVD quality

192 kHz – no transfer (BluRay quality)

“Dynamic range”

This function is only active with Dolby Digital and increases the volume during excessively quiet passages and decreases it when they are too loud. Possible values: On, Off, Auto

“Audio output”

You should set which speakers are connected here:

2.0 Ch – only the front left and right speakers

5.1 Ch – all speakers are connected

7.1 Ch – additional rear center channels are connected via the jacks **21** “RC/PRE OUT” (see page 8).

“Language” menu

You can set the language for the system menus and for the playback of CD/DVD/BD here.

OSD – language of the system menus

Disc Menu – language of the DVD/BD menus*

Disc Audio – language of the DVD/BD audio tracks*

Disc Subtitles – language of the DVD/BD subtitles*. The setting “None” deactivates the subtitles.

*) if available in the desired language

“Network” menu

Setting the network and Internet options.

“Network Information”

Provides an overview of current settings. The MAC address is the unchangeable identification of the Ethernet interface. All other values can be configured manually under “IP setting” (see below).

“Connection Test”

With this function, the IP 7000 checks whether there is a network connection and whether the Internet is available. “Successful” or “Failed” will appear after completion, then push **34** “ENTER”.

“IP Setting”

Defining the network settings.

Auto – Automatic determination of the required parameters. Prerequisite: An active DHCP server (e.g. a router).

Manual – The IP address and all other values must be configured. Only a qualified professional should configure these settings. Use the number buttons on the remote control to make entries.

- **IP Address:** The network address for the receiver consisting of four numbers each between 0 and 255, e.g. 192.168.001.100.
- **Subnet Mask:** Based on the network mask, the receiver detects which addresses it reaches on its own network and which it only reaches via the gateway (router). Consists of four digits, each between 0 and 255, e.g. 255.255.255.0.
- **Default Gateway:** Network address of the gateway (router), which monitors the connection to the Internet.
- **DNS1:** Network address of the primary domain name server (DNS), which locates the corresponding IP address for domain names (e.g. www.teufelaudio.com). Comparable with a phone book.
- **DNS2:** As before, is used when the primary DNS fails. This specification is optional.

“BD-Live Connection”

With many BluRay discs, you can download and view additional content from the Internet such as trailers, documentation or director's comments regarding the inserted movie via menu click. You can also participate in interactive online games or quizzes.

Note: A USB stick with approx. 1 GB of free memory must be inserted in the USB port 2 “”.

Here, you can specify whether BDs can use Internet access.

Permitted – All BDs allowed.

Partially Permitted – Only BD Live content, which has been certified (approved) by the content owner.

Prohibited – Prevent access for all BDs.

“DLNA”

The IP 7000 BD is a digital media player (DMP) that complies with the specifications of the Digital Living Network Alliance (DLNA). If you operate a digital media server (DMS, also referred to as a DLNA server) on your network, the IP 7000 BD can play movies, music and images from this server (see page 21).

This setting activates or deactivates the DMP.

“System” menu

“Screen Saver”

This darkens the screen after a configurable period of inactivity, e.g. to prevent burn-in on plasma screens.

Possible values: 5, 10, 15, 20 minutes.

“Auto Off”

After the screensaver activates (see above), the receiver waits for the configured period of time to elapse before automatically switching to standby. Possible values: 30 minutes, 60 minutes, never.

“Disc Auto Playback”

With this setting, you determine whether playback will automatically start or not after you insert a CD/DVD/BD. Possible settings: On (playback starts automatically, not possible with some BluRay discs), Off (playback does not start automatically).

“CEC”

If this function is activated, CEC-compatible devices are controlled by a control command via the HDMI connection. As a result, devices connected to the TV set are e.g. automatically activated and deactivated using the remote control for the television set. Possible values: On, Off.

Note: Must be set to “On” to play back television audio using the ARC button (see page 11).

“Firmware Update”

If the receiver is constantly connected to the Internet, it will check every time it turns on whether an updated version of its operating software (“firmware”) is available and will initiate the update process after confirmation.

You can manually load the update for your receiver via the Internet connection with this menu item by selecting “Network” and pushing **34** “ENTER”. Then follow the instructions on the screen.

The update will take several minutes, during which time you may not turn off the device and interrupt the Internet connection. After the update, you reset the receiver to the default settings (see the following section).

“Load Defaults”

Here, you can reset all receiver settings to the default settings. After the reset, you will have to reconfigure your individual settings.

“System Information”

With this menu item, you can access the serial number and the status of your receiver's firmware.

“BD-Live Storage”

The BD Live function creates a folder “BUDA” stick for saving data on the USB. You can delete data here if the memory on your stick runs out.

Information – Displays the available memory on the inserted USB stick or displays “No USB”.

Erase BD-Live data – Clear the memory occupied by BD Live on the USB stick.

“DivX® VOD DRM”

You can find the DivX® VOD registration code for your IP 7000 BD here. You can register your device with this code in order to play DivX® videos protected by copyright or with copy protection. For more information, visit the website “vod.divx.com”.

“Security” menu

This menu time contains a child lock for BD/DVD playback. Some BD/DVDs are labelled for certain age groups and cannot be played back if a corresponding setting has been configured. Unfortunately, many BD/DVDs are not properly protected and even personally burned copies and video movies are not provided with this protection.

You will need a four-digit password to change the setting. **The default is “0000”** (the number zero four times).

“Change Password”

- First enter the current password with the number buttons **33** “1...0”.
- Then enter the new password twice with the number buttons **33** “1...0”.

Be sure to memorise the new password! You can reset the receiver to the default settings in an emergency (see the “System” menu).

“Parental Control”

Setting the protection level. Eight levels are available, which correspond to the recommendations of the MPAA (Motion Picture Association of America) for rating movies. This system only takes effect with American DVDs/BDs. You will be asked for a password in order to open this menu.

Off – This turns protection off. All movies can be played back without restrictions.

KID SAFE, Safe for kids.

G All children and general guidance.

PG Parental guidance.

PG-13 Parents guidance for children under 13.

PGR Parental guidance recommended.

R Restricted viewing

NC-17 No one 17 and under allowed.

ADULTS, Adults only.



Audio

You can activate the sound system of the IP 7000 BD in this menu.

“Level”

You can increase or decrease the relative volume from “+10 dB” to “-10 dB” for each speaker. Select the “dB” value and change it with the navigation buttons **33** “▲▼”.

FL – Front left

Center – Center

FR – Front right

SR – Surround right

RR – Rear right

RL – Rear left

SL – Surround links

Sub – Subwoofer

(also see the special button “SPEAKER LEVEL”, page 17.)

“Test Tone”

Volume adjustment with a test tone. As previously described with “Level”, you can increase or decrease the relative volume for each speaker. In the process, audio playback will be replaced by a test tone (a noise) whose volume can be adjusted using the volume controls **1** and **32** “Volume +/-”. The test tone mutes as soon as you leave the sub-menu.

“Lipsync”

Digital image processing in the television set requires some time. In order to keep the image and sound synchronous, television sets delay the sound by a few milliseconds. To ensure that the sound of your receiver is also synchronous, you can configure the audio delay for certain inputs from 0 to 200 ms here.

(also see special button “LIPSYNC”, page 17.)

“Tone”

Here you can configure the sound within two ranges:

Bass low tones

Treble high tones

You can configure either range from “-10 dB” (lower) to “+10 dB” (increase).

(also see special button “TONE”, page 17.)

“Distance”

The surround sound effect may be corrupted if the speakers are positioned at different distances to the listening position. Set the distances from the listening position to each speaker from 0 to 400 cm in order to compensate these run-time differences.

“Source Level”

Here you can set the relative volume from -10 dB to +10 dB for each source in order to adjust different levels of the connected devices and of the tuner.

"Audio Mapping"

You can assign the audio inputs to the HDMI inputs here: Would you like to connect your PC or a source with DVI picture output via HDMI, but the sound card or the device only emit the sound via an optical output? Your IP 7000 BD is capable of doing this: Select the desired HDMI input and configure the desired audio input on the far right of the menu, which is "Optical" in this case.

"HDMI Audio Out"

This turns audio transmission at the HDMI output **18** "HDMI OUT" on and off.

When playing back movies, you do not need to mute the television in the "Deactivate" position in order to hear sound from the receiver's speakers only.

This setting first takes effect the next time the IP 7000 BD is turned on.



Source

You can configure the player, one of the inputs or the radio receiver as a source here.

Note: You can automatically start a CD, DVD or BluRay disc by selecting "BD"; you can start a data disc or USB playback from the main menu item "My media".



Quick setup

This menu is automatically shown when using the device for the first time, after a firmware update or after a reset to the default settings.

In a few steps, you can configure the default settings for language, display resolution and picture format here. For this, please follow the instructions on the screen (also see "First activation" on page 10).

Special function buttons

“RESOLUTION” button

The “Resolution” button **49** has two functions:

1. Zoom factor

You can change the zoom factor of the picture in this order during video or image playback: **2x, 3x, 4x, 1/2x, 1/3x, 1/4x, 1x**

2. Screen resolution

From the main menu, you can configure the resolution of the television set for HD playback with this button. Possible values:

480/576i, 480/586p, 720p, 1080i, 1080p, HDMI-Auto. HDMI-Auto automatically selects the highest possible resolution for your television set.

Note: Only a resolution of 480/576p is available at the video output **14**.

Note: This function is also helpful if no picture appears after your television set was connected. Then push this button until the main menu becomes visible – always briefly wait until the TV has synchronised. Then you can make additional settings.

“SURROUND” button

Pushing the “Surround” button **47** several times switches surround sound:

- 2.1 stereo** Stereo playback with the subwoofer via the front channels.
- 5.1 Ch** 5.1 channel surround sound.
- 7.1 Ch** 7.1 channel surround sound (rear channels via external amplifier).

- Dolby PLII Movie** Dolby® ProLogic II for movies.
- Dolby PLII Music** Dolby® ProLogic II for music.

Not all melodies are generally available. This depends on the available audio signal. (Also see menu “AUDIO/SURROUND”, page 15.)

“TONE” button


With the button **39** “Tone”, you can access sound control. With the navigation buttons **33** “▲” and “▼” you can select the desired range:

- Bass** low tones
- Treble** high tones

With the navigation buttons **33** “◀” and “▶”, you can configure the selected range from “-10 dB” (lower) to “10 dB” (increase).

“LIPSYNC” button

As with the menu function of the same name, you can configure the audio delay for certain inputs from 0 to 200 ms using the “LIPSYNC” button **48**. (Also see menu “AUDIO/Lipsync”, page 15.)

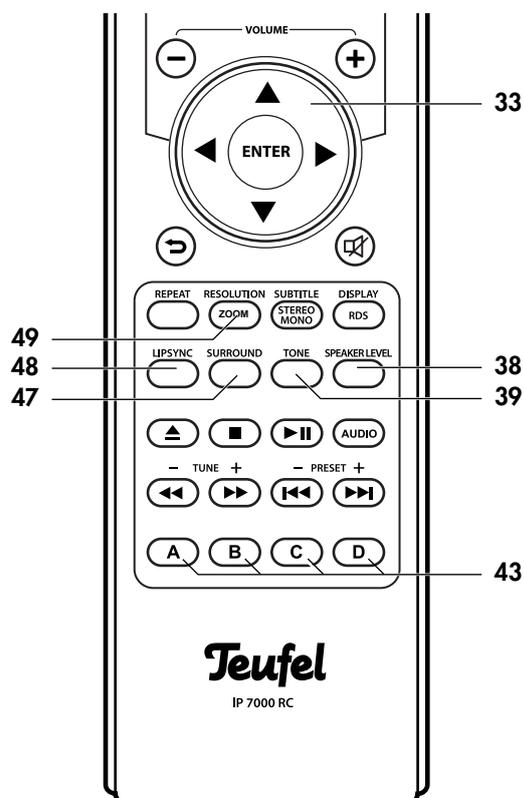

Select the desired input with the navigation buttons **33** “▲” and “▼”: HDMI 1, HDMI 2, BD, other Input (other inputs).

Configure the desired delay with the navigation buttons **33** “◀” and “▶”.

“SPEAKER LEVEL” button

With the “SPEAKER LEVEL” button **38**, you can increase or decrease the relative volume for each speaker from “+10 dB” to “-10 dB”.

With the navigation buttons **33** “▲” and “▼”, you can select the desired speaker channel:

- FL** – Front left
- Center** – Center
- FR** – Front right
- SR** – Surround right
- RR** – Rear right
- RL** – Rear left
- SL** – Surround links
- Sub** – Subwoofer

With the navigation buttons **33** “◀” and “▶”, you can configure the selected speaker level.

Buttons “A B C D”

With the coloured buttons **43** “A B C D”, you can navigate through the menus of interactive BluRay discs.

Radio mode

The radio is capable of receiving mono and stereo stations in a range from 87.5 to 108 MHz; RDS mode is also possible.

Push the "RADIO" button **55** to activate radio as a source (also see page 11).

Setting the radio stations

With the navigation buttons **33** "◀" and "▶", you can set the tuning frequency:

- **Automatically:** Depressing the button for approx. one second initiates station scanning in the desired direction (then release the button) until the radio turns to the next station frequency with adequate transmission power. If you press and hold the button, the search will continue to run through all stations until you release it.
- **Manually:** Each time you tap the button the frequency will be increased or decreased by 0.05 MHz.

The selected frequency will appear on the display panel **4** and on the screen.

If the station transmits an RDS signal, the name of the station and, if applicable, the radio text will appear on the display panel **4** and screen after a few seconds – you may first have to press the "RDS" button **36** for this. The program type will also be displayed on the connected screen. With the "RDS/Display" button **36**, you can activate and deactivate the display of RDS information.

In stereo mode, you may experience faults with weak stations. In this case, you should switch to mono mode by pushing the "Stereo/Mono" button **37**.

Station memory


Your radio can save 30 stations. You can conveniently select the saved stations with the push of a button.

Saving stations manually

- Set the desired station as described above.
- Press the "Program" button **28**.
The number of the first available memory slot will blink on the display panel **4** and on the screen.
- Enter the desired two-digit memory slot number using the number buttons **30** "1...0".
The memory slot number will stop blinking.
The station has now been stored.

Saving stations automatically

- Push the button **52** "Search/Auto Scan". Station scanning will start immediately.
The radio will now search for stations with adequate transmission power and automatically save them. Previously saved stations will be deleted in the process.

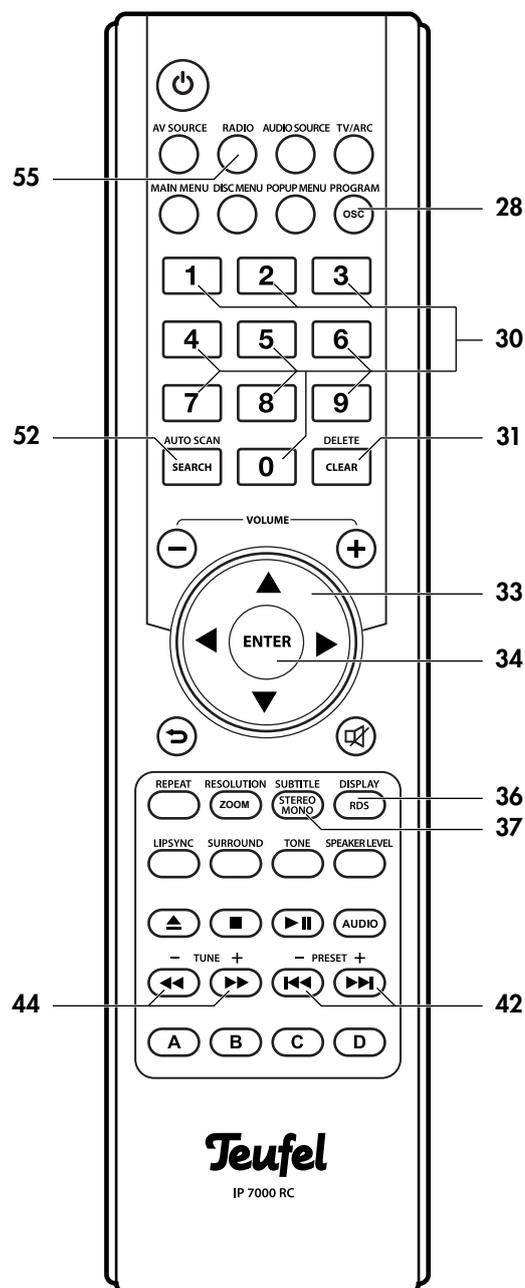

Selecting stations from the memory

You can select the saved stations in sequence using the navigation buttons **33** "▲" and "▼" or the skip buttons **11** or **42** "▶▶" and "◀◀" or directly with the number buttons **30** "1...0".

Deleting saved stations

Press the button **31** "DELETE/CLEAR" to delete the currently set station memory.

BD/DVD/CD mode

Suitable BDs/DVDs/CDs

- Only use commercially-available BDs/DVDs/CDs, which have one of the adjacent symbols.
- BDs/DVDs/CDs containing the files in the following formats are readable: CD audio, VCD, SVCD, DVD video, BD video, MP3 and JPEG.
- The device plays DVDs with the country code "2".
- Normal BDs/DVDs/CDs with a diameter of 80 and 120 mm can be used.
- Individually burned BDs/DVDs/CDs are normally readable, but an excessively high burning speed or "poor" blank-CDs may result in problems. The only solution is trial and error in this case.
- CDs produced for commercial purposes cannot always be read.

Handling BDs/DVDs/CDs

Every BD/DVD/CD has a resistant plastic layer, which protects it against outside influences. However, you must always protect the disc against dirt and scratches.

Your receiver can compensate minor damages to the BD/DVD/CD. Larger scratches or other damages may result in "hanging" or similar errors. Please also observe the notes for proper handling BDs/DVDs/CDs on the CD case!



Playing BDs/DVDs/CDs

Attention Risk of damage!



Do not in any case insert multiple BDs/DVDs/CDs on top of one another. Do not insert any other objects than BDs/DVDs/CDs.

1. Access the main menu by pressing the "MAIN MENU" button **54**.
2. Press the button **8** or **46** "▲". The tray **6** will eject to the front.
3. Carefully insert the BD/DVD/CD with the labelled side up in the tray recess.
4. Press the button **8** or **46** "▲" or the playback button **9** or **41** "▶||". The tray **6** will close and the disc will be read. Depending on the setting and the disc, playback will automatically start after a few seconds or a menu will appear (see "File selection" on page 24). If you load a disc, which was already played, a window will appear where you can select whether you want to continue from the last position viewed or from the beginning.
 - If the main menu appears, select the item "My media" with the navigation buttons **33** "◀" and "▶" and press the select button **34** "ENTER".
 - Now select the item "BluRay disc", "DVD video" or "CD-DA" with the navigation buttons **33** "▲" and "▼" and press the select button **34** "ENTER".

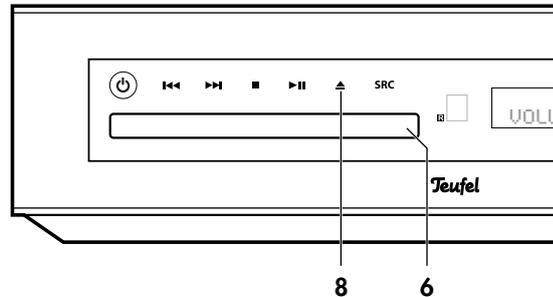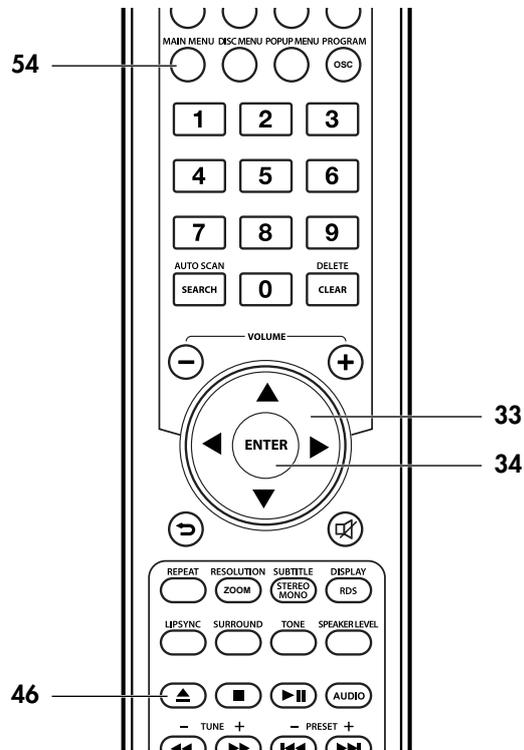

You can navigate through the BD/DVD menus with the navigation buttons **33** "▲▼◀▶" and the select button **34** "ENTER".

The playback functions for disc, USB and DLNA are identical and are described in the section "Playback functions" on page 22.

Ejecting BDs/DVDs/CDs

1. Press the button **8** or **46** "▲". The tray will eject to the front.
2. Remove the BD/DVD/CD from the tray.
3. Press the button **8** or **46** "▲". The tray will close.

USB mode

Your new receiver can read USB memory sticks and USB hard drives with a USB 1.0 and 2.0 specification and play back JPEG and PNG photos, MP3 and WMA music files and videos in the formats MP4, AVI, WMV, Ts/M2TS, DivX/DivXHD, VOB, MPG/MPEG and MKV which were saved there. It is also possible to directly connect various camcorders and play back AVCHD movies saved on them.

Handling mobile storage devices

USB sticks are sensitive electronic devices and must be handled accordingly. If you do not use your memory, you should be absolutely sure to close it with a protective case or cap.



Important

Do not use any storage devices with mechanical **damages** or which have fallen in a liquid. Do not expose such storage devices to direct **sunlight**. Improper handling may result in **data loss**! If possible, create backup copies of your music on your PC.

Connect and play back the USB device

1. Insert the USB stick or the plug of your USB device in the jack **2** "USB". The plug only fits the jack in one position.
2. A USB symbol will briefly appear on the screen.
3. Access the main menu by pressing the button **54** "MAIN MENU".
4. Select the item "My media" with the navigation buttons **33** "◀" and "▶" and press the button **34** "ENTER".
5. Now select the item "USB1" with the navigation buttons **33** "▲" and "▼" and press the button **34** "ENTER". File selection (see page 24) with the items Image, Music, Video and AVCHD will appear shortly thereafter.

The playback functions for disc, USB and DLNA are identical and are described in the section "Playback functions" on page 22.



Removing a USB device

Attention Risk of damage!



Never remove the USB device while the receiver is still accessing it!

1. Press the button **10** or **45** "■".
2. Wait until the playback has stopped.
3. Pull the USB plug out of the jack **2** "USB".

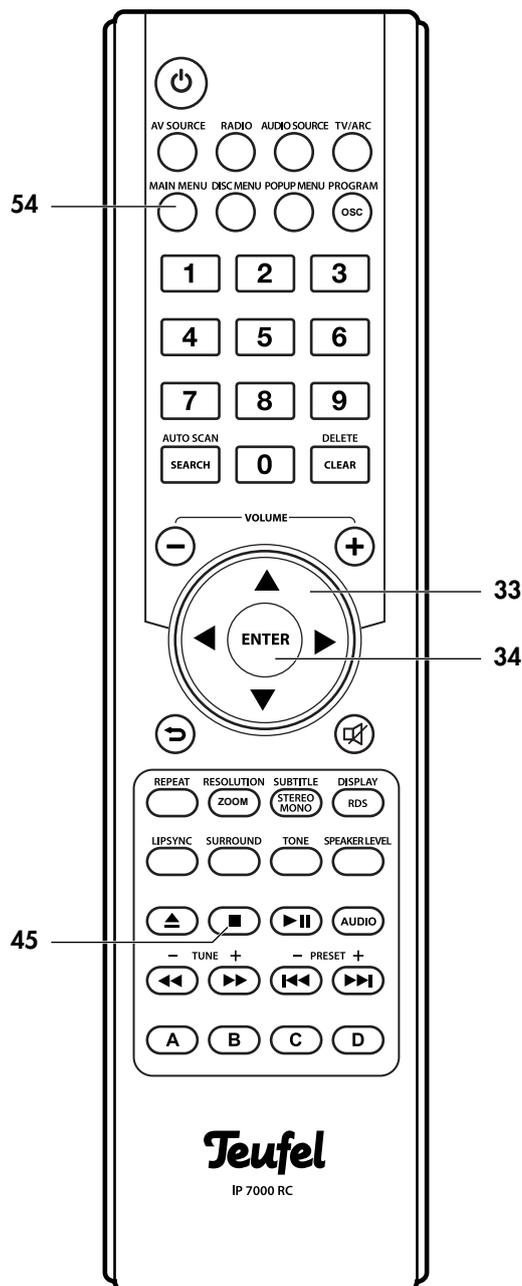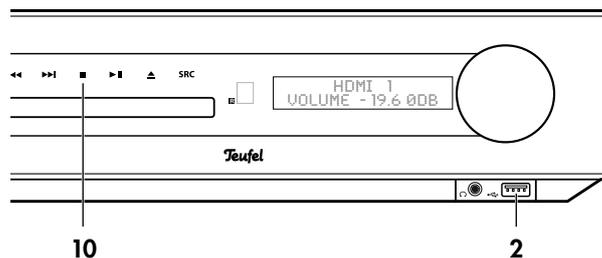

DLNA mode

The Digital Living Network Alliance (DLNA) is a trade organisation formed by companies from the computer and entertainment industry, which develop common standards for connecting these devices. The IP 7000 BD is a "Digital Media Player" (DMP) certified according to DLNA and can connect with any local DLNA Digital Media Server (DMS) via the network and play any media available there.


DMS programs are available for all PC operating systems and certain network hard-drives (NAS) also feature corresponding functions.

You require such a server on your network for DLNA operation and DLNA operation must be activated (see "dlna" in the "Network" menu on page 14).

The IP 7000 BD automatically searches for DLNA servers on the network and displays them in the "My media" menu.

1. Access the main menu by pressing the button **54** "MAIN MENU".
3. With the navigation buttons **33** "◀" and "▶", select the item "My media" and press the "ENTER" button **34**.
 DLNA servers are listed with this symbol and their name.
4. Now select the DLNA server with the navigation buttons **33** "▲" and "▼" and press the "ENTER" button **34**.
Shortly afterwards, the file selection (see page 24) with the items Image, Music, Video and AVCHD will appear.

The playback functions for disc, USB and DLNA are identical and are described in the section "Playback functions" on page 22.

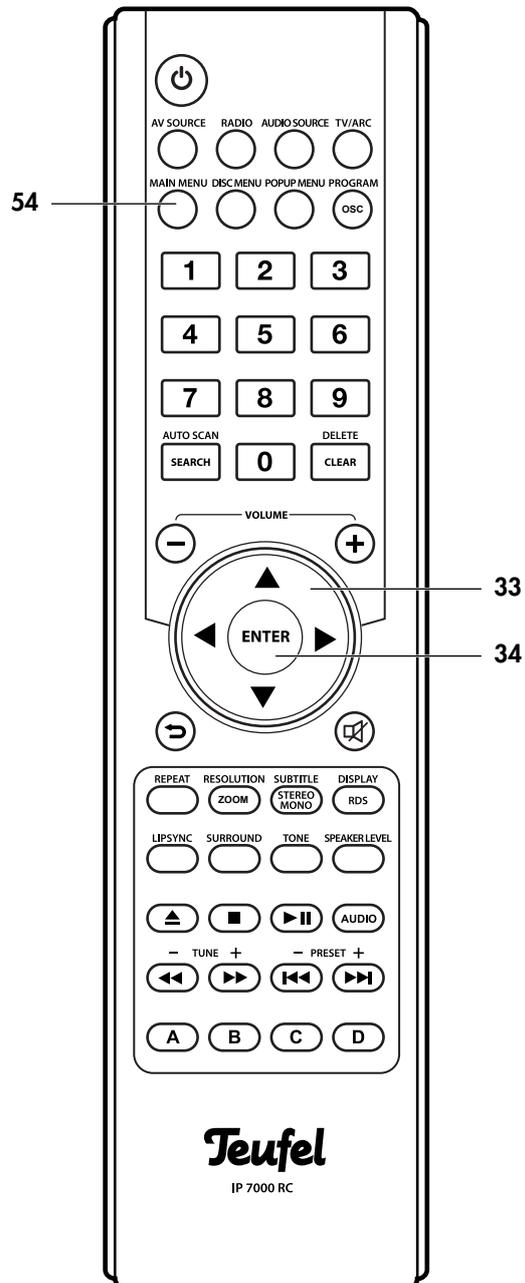

Playback functions

General playback

- Pause playback: Press the button **9** or **41** "▶||".
- Continue playback: Press the button **9** or **41** "▶||" again.
- Play the next track or next chapter: Tap the button **11** or **42** "▶▶".
- Play the track or chapter from the beginning: Briefly tap the button **11** or **42** "▶▶" twice.
- Play the previous track or previous chapter: Briefly tap the button **11** or **42** "◀◀" twice.
- Fast track playback: Tap the button **44** "◀◀" or "▶▶". Each tap will increase the playback speed: 2x, 4x, 8x, 16x, 32x. Playback is without sound; you will see the elapsed time for the track on the display panel 4. Press the button **9** or **41** "▶||" to continue normal playback.
- Stop playback: Press the button **10** or **45** "■".

Only with video playback:

- Switch the audio track (language): Press the button **40** "AUDIO" several times if applicable.
- Switch or deactivate subtitles (if available on the BD/DVD): Tap the button **37** "SUBTITLE".

BD and DVD playback

- Access the BD/DVD menu: Press the button **53** "DISC MENU".
- Access the popup menu (if available on the BD/DVD): Press the button **29** "POPUP MENU". Continue playback: Press the button **29** "POPUP MENU" again.



Displaying information

You can display an info window at the top of the screen with the "DISPLAY" button **36**:



- a** Active function, playback in this case
- b** Media type (BD, DVD, VCD, data disc) and video file format
- c** Current track / number of tracks on the disc
- d** Current chapter / number of chapters in the track
- e** Total elapsed time for the current track (can be switched to the elapsed time for the chapter, see video playback menu, page 23)
- f** Current audio track/number of audio tracks, language, signal type
- g** Subtitles, deactivated in this case

Press the "DISPLAY" button **36** again to hide the info window.

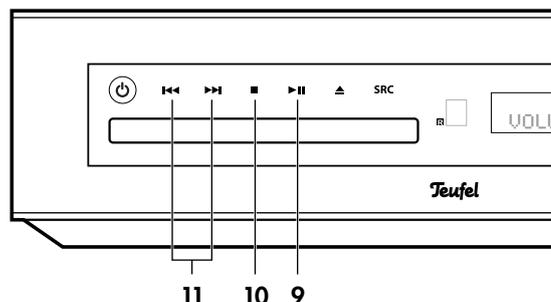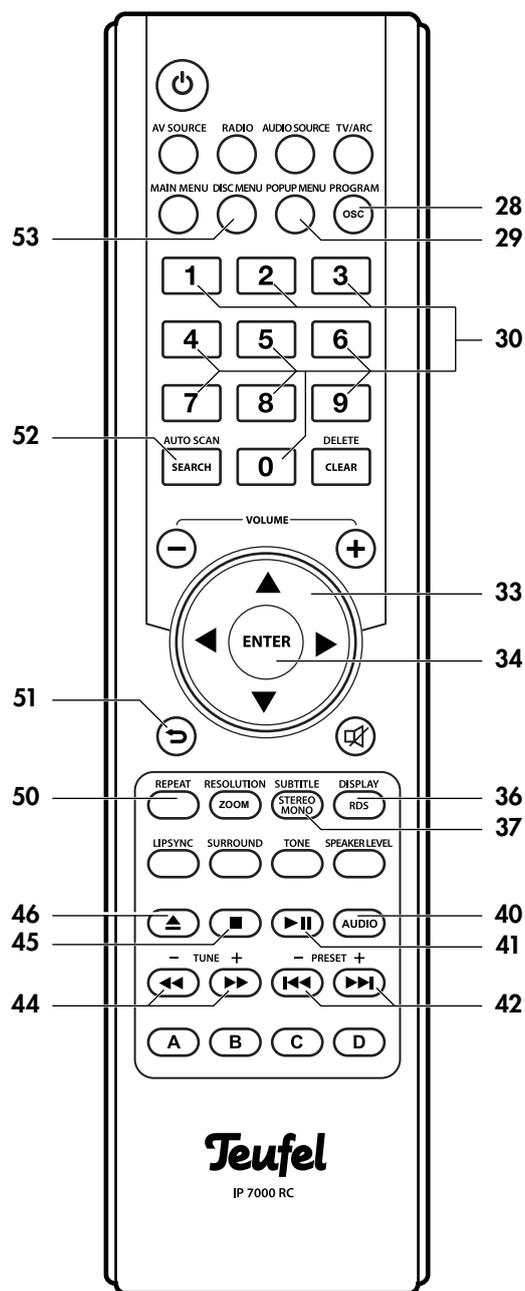

Video playback menu

You can access a menu with the "Program" button **28** during video playback. Depending on the type of video, not all menu items are available.


- With the navigation buttons **33** "▲" and "▼", select the desired item and press the button **34** "ENTER" or the navigation button **33** "▶".
- With the navigation buttons **33** "▲" and "▼", you can now select an option and trigger it with the "ENTER" button **34**.

-  Number of the current file/number of files in this folder – you can select another file for playback.
-  Current track/ number of tracks – you can select another track.
-  Current chapter/total chapters – you can select another chapter.
-  Elapsed time – you can switch between track and chapter time and between elapsed time and remaining playback time.
-  (Playback) mode – select between normal or random playback, for everything, for a chapter ("CH") or for tracks (TT).
-  Audio – you can switch the audio track here (to the extent there are several tracks contained in the video).
-  Angle of view – you can select another angle of view for the camera here (if available in the video).
-  Subtitles – you can switch the subtitles here (if there are multiple subtitles available in the video) or completely deactivate them.
-  Subtitle style – to the extent available on the BD, you can select how the subtitles will appear here.
-  Second video – to the extent available on the BD, you can start a second instance of video playback (picture in picture).
-  Second tone – to the extent available on the BD, you can activate a second audio track (e.g. comments).
-  Bit rate – displays the current transfer rate for the audio and video stream is (switch with the navigation buttons **33** "▲" and "▼").
-  Immediate search – will fast forward 30 seconds without audio.
-  Immediate playback – the movie will be reset by 8 seconds.

Searching

With the search function, you can select a specific time, chapter and/or track (if available on the disc).

- Press the "SEARCH" button **52**. The info window will appear and the area **e** (elapsed time) is indicated by a blue rectangle:

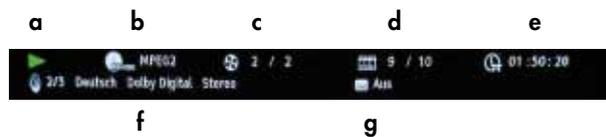

- Select the desired area (**c**, **d** or **e**) with the navigation buttons **33** "◀" and "▶". You can switch between the total elapsed time ("TT" in the clock symbol) and the elapsed chapter time ("CH" in the clock symbol) in the area **e** with the navigation buttons **33** "▲" and "▼".
- Press the button **34** "ENTER". Yellow arrows will appear in the selected area. Switch between hours, minutes and seconds in the **e** area with the navigation buttons **33** "◀" and "▶". Change the value with the navigation buttons **33** "▲" and "▼" or enter a desired value with the number buttons **30** "1...0".
- Finish by pressing the "ENTER" button **34**. Playback will start from the selected position.
- To abort, press the button **51** "⏪" or **52** "Search" several times until the info window disappears. It automatically disappears after you press "ENTER" (in the previous step) or after 10 seconds of inactivity.


Repeat function

Switch the repeat functions by tapping the "REPEAT" button **50**; you will see the selected function on the top left of the screen:

- Off (no symbol) – normal playback, no repeat
-  repeat current file
-  repeat current chapter (only BD/DVD)
-  repeat current track (only BD/DVD)
-  repeat everything

File selection

The content of discs and USB sticks, on which media files are saved, will appear in a browser on the screen.

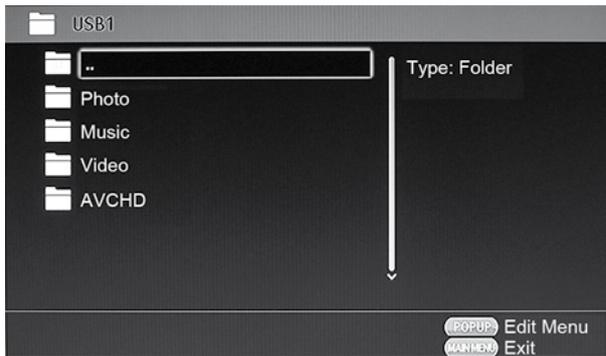

- The left column will display the folders "Images", "Music" and "Videos", also "AVCHD" with USB storage devices.
- Details concerning the selected media file will appear in the right column.

Navigate through the folders with the buttons **33** "▲▼" and open the desired folder or initiate playback of a media file by pressing the "ENTER" button **34**. The highest folder **51** will take you back one folder. You can also use the navigation buttons **33** "◀" or the button **51** "↶" for this.

Video playback

- Open the "Video" folder and the desired sub-folder if necessary.
- Open the desired video file.


Playback will start. The possible functions are described in the section "Playback functions" on page <?>.

Music playback


- Open the "Music" folder and the desired sub-folder if necessary.
- Open the desired music file.

The track and all subsequent music tracks located in the folder will be played.

The following information will appear on the screen during playback:

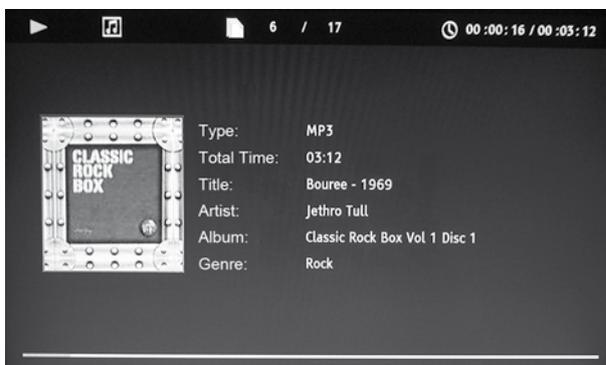

Track number/number of tracks, elapsed time, file type, total time and, to the extent present, track name, artist, album, genre and picture of the album.

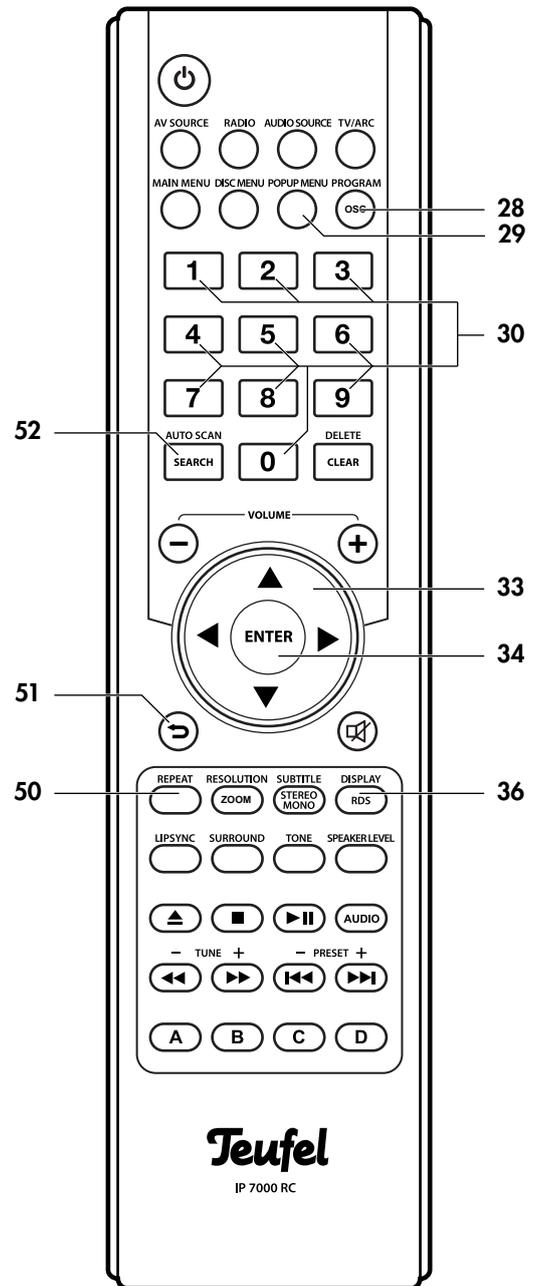

- Using the number buttons **30** "1...0", you can enter the number of a track, which will immediately begin to play then.

The other functions are described in the section "Playback functions" on page 22.

Image playback

- Open the "Image" folder and the desired sub-folder if necessary.
- Open the desired image file.
The image and all following images from the folder will be shown in sequence as a slide show on the TV set.
- With the "RDS/Display" button **36**, you can display an info window:



- Rotate image: Press the buttons **33** "▶" or "◀".
- Flip the image vertically or horizontally: Press the buttons **33** "▲" or "▼".
- With the button **34** "▶||", you start and interrupt automatic playback (slide show).
- With the number buttons **30** "1...0", you can enter the number of an image, which is then immediately shown.

With the "PROGRAM" button **28**, you can access the slide show menu:

- Select the desired item with the navigation buttons **33** "▲" and "▼" and press the "ENTER" button **34**.
- With the buttons **33** "▲" and "▼", you can now select an option and trigger it with the "ENTER" button **34**.

 Number of the current file/number of files in this folder – you can select another file for playback.

 (Playback) mode – choose between normal or random playback.

 Slide show – image display duration: 3, 9, 18 seconds: Select with the "ENTER" button **34**

 Transition (only when the slide show is running): Select with the "ENTER" button **34**

AVCHD playback

The video format AVCHD ("Advanced Video Codec High Definition") is a recording format for digital cameras developed by Sony and Panasonic.

If your camcorder records videos in AVCHD format and has a USB port, you can connect the device directly to the IP 7000 BD (please consult the operating instructions of the device for this). You can also play AVCHD archives on the USB stick or USB hard-drives:

- Open the "AVCHD" folder.
Playback will start. If a menu movie exists, it will be the first to be played, then the saved recordings will play in order.
- You can access the menu movie with the "DISC MENU" button **53**.

The IP 7000 BD is also capable of playing AVCHD folders on discs (CD, DVD), so-called AVCHD discs or mini-BDs. The movie is automatically played after the disc has been inserted. After it stops, a "AVCHD" disc symbol will appear on the main menu under the "My media" item. The other functions are described in the section "Playback functions" on page 22.

Playlist

You can save multiple files from USB and disc media on the playlist, which are played in order. As soon as the USB or disc medium is removed, the corresponding files are deleted from the playlist.

Including files in the playlist

- Select the desired image, music or video file in the file selection (do not start playback yet).
- Press the "POPUP MENU" button **29**.
A small menu will appear. Select the options with the navigation buttons **33** "▲" and "▼".
- Select "Add to playlist" and press the "ENTER" button **34**.
The file has now been added to the playlist.

If you press the "POPUP MENU" button **29** again, you have the following possibilities:

- With "Select all", you select all files in the current folder with a red checkmark.
- You can activate and deactivate the mark for individual files with the navigation button **33** "▶".
- You can remove all marks with "Delete everything".
- You can perform the function "Add to playlist" for all marked files as described above.

In this way, you can add more files to the playlist. Then press the button **51** "↵" several times until the main menu appears on the screen.

Playing the playlist

1. Select "My media" on the main menu and press the "ENTER" button **34**.
2. Select "Playlist" in the file selection and press the "ENTER" button **34**.
3. Select the desired folder "Image", "Music" or "Video" with the navigation buttons **33** "▲" and "▼" and press the "ENTER" button **34**.
4. Select the first file and start playback with the "ENTER" button **34**.
The file and all subsequent files located in the folder will be played back.

Removing files from the playlist

- Select a file in the playlist or mark several files as described above.
- Press the button **29** "POPUP MENU".
- Select the item "Delete from playlist" in the small menu and press the button **34** "ENTER".
The file/files have now been removed from the list. The files are not deleted from the USB stick in the process.

Care and cleaning

Clean your receiver regularly with a soft, damp micro-fiber cloth. Please be absolutely sure to observe the following notes in the process:

Danger Risk of electric shock!

In contact with live parts, water can lead to electric shock or short circuit.

- Make sure that no liquids penetrate the unit.
 - Disconnect the mains plug before cleaning.
-

Attention Risk of damage!

Using the wrong cleaning materials may damage the delicate surface of the case.

- If possible, only use plain water without any additives. In case of stubborn marks, a mild soap solution may be used.
 - In no circumstances should caustic cleaning products, white spirit, thinners, petrol or similar be used for cleaning.
-

To clean your BluRays/DVDs/CDs

Only use cleaners, which have been exclusively approved for CDs, to clean your CDs.



If necessary, carefully wipe off the CD with a soft, lint-free cloth from the center to the edge. In the process, hold the CD between your index finger and thumb of your other hand.

If your hand comes in contact with the playback side of the CD, this may cause playback problems.



Troubleshooting

The following notes and further detailed **information on our website** should help you to rectify malfunctions. If this does not lead to success, please contact our hotline ☎ 00800 - 200 300 40 (toll-free). Please also observe the warranty notes.

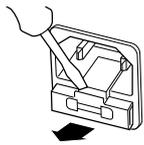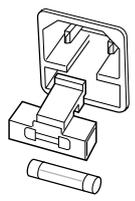Problem	Possible cause	Solution
Device is not working, the display is dark.	No power supply.	Make sure the power plug is properly positioned.
		Check the function of the socket with another device.
	Fuse is defective.	1.  Disconnect the power cord. Carefully pull the fuse holder out of the mains connection.
		2.  Push the old fuse down and out. Insert a new fuse (6.3 A delayed action) and push the holder back.
No playback of CD/DVD/BD.	No disc has been inserted.	Insert a CD/DVD/BD.
	Disc has been inserted upside down.	Insert the disc with the labelled side facing up.
	The region code of the DVD/BD does not correspond to that of the device.	Insert a DVD/BD with a corresponding region code (2).
	The CD/DVD/BD is damaged or dirty.	Clean or change the disc.
	Condensation in the device.	Take out the disc and do not use the device for one to two hours while activated.
No picture.	The television set has not been turned on.	Turn on the television set.
	An incorrect AV input has been selected on the television set.	Select a suitable AV input on the television (e.g. HDMI 1).
	Incorrect HDMI resolution has been configured on the receiver.	Check the settings and change if applicable (see page 19 "Resolution button" and page 13 "Display menu"). To obtain a picture, create a video connection to the TV set with the VIDEO jack 14 (see page 9) if necessary.
	The connector cable is incorrectly wired or loose.	Correct the cable connections.
	Connector cable is damaged.	Replace the connector cable.
Picture is fuzzy/distorted.	CD/DVD/BD is damaged or dirty.	Clean or change the disc.
	The incorrect colour standard (PAL/NTSC) has been set on the television set or receiver.	Reset the colour standard (PAL/NTSC) (page 13). PAL is the correct standard in Germany and Western Europe (except from France).
	Disturbance caused by intermediary devices, e.g. video recorder.	Connect the devices directly.
	The image format of the receiver is incorrectly configured.	Correctly configure the image format (see page 13).
"No disc" on the display.	CD/DVD/BD is damaged, dirty, incompatible or inserted upside down.	Clean or change the disc.
Skipping to the next track or chapter does not work.	Some BD/DVDs do not permit skipping, for example during the initial warning notice.	Continue playback.
	The BD/DVD only has one chapter.	Alternative: Fast playback.

Problem	Possible cause	Solution
No sound or not all audio channels are audible.	Speaker wired incorrectly.	Check the wiring and correct it.
	Audio settings are not correct.	Correctly configure the audio (see page 13 and 16).
	Incorrect disc audio track selected.	Press the button 40 "Audio" and select another audio language.
	Receiver muted ("MUTE").	Press the button 35 "MUTE" to disable the mute function.
	Playback speed has been accelerated or slowed down.	Switch to normal playback with the button 41 "▶ ".
No or disrupted music playback.	Files with a format other than MP3 or WMA are located on the storage device.	Delete or skip the incorrect files.
	File damaged.	
The remote control is not working.	No clear line of sight between the remote control and the device.	Remove the obstacle.
	Remote control not properly aligned.	Point the remote control towards the device.
	Batteries have been inserted in the remote control with improper polarity.	Insert the batteries the right way around (see visual explanation in the battery compartment).
	Batteries in the remote control have been used up.	Insert new batteries.
BD Live function disrupted.	No Internet connection.	Test the network settings and correct them if necessary (page 14).
	No USB stick has been inserted.	BD Live requires a USB stick with 1 GB of capacity.
	BD Live storage full.	Check the storage and clear if necessary (page 14).

There are many parameters in the menu functions, which complicate or even prevent normal operation if the settings are incorrect. If your receiver is acting "unusually", you can restart the device:

1. Press the button **12** "⏻" on the device to turn it off.
2. Wait until the button **12** "⏻" is illuminated in red.
3. Disconnect the power plug.
4. Wait 10 seconds, then insert the mains plug back in the socket.
5. Press the button **12** "⏻" again to turn on the device.

If that doesn't help, you can reset the receiver to the default settings. This will reset all parameters to the default values (see the "System" menu on page 15).

Symbole

16:9/4:3 13

A

Activating 11

Audio

Delay 15, 17

Audio transmission 16

B

Batteries

insert 10

BD 19

BD Live memory 15

BUDA folder 15

C

CD 19

Child lock 15

coaxial 9

Component 9

Connecting 8

Television 9

Connection to the grid 10

Country code 19

D

Deactivating 11

Default settings 15

Digital Media Server 14

Distances 15

DLNA 14

DVD 19

Country code 19

Ejecting 19

E

Enlarge the image 17

Ethernet 14

F

Faults 27

FBAS 9

File selection 24

Firmware 14

H

HDMI 9, 16

HDMI audio output 16

HDMI Out 9

HD resolution 13

I

Images 24

Internet 10

IP address 14

L

Letterbox 13

M

MAC address 14

Media files 24

Media server 14

Music 24

Mute 11

N

Network 10, 14

NTSC 13

O

optical 9

Optical 9

P

PAL 13

Pan Scan 13

Password 15

Pillar box 13

Playback 22

Product contents 5

Q

Quick setup 10

R

Radio 18

RDS 18

Rear center 8

Remote control 7

Inserting batteries 10

Repeat 23

Repeat function 23

Resolution 17

S

Saving stations

automatically 18

manually 18

Selecting a source 11

Sensor buttons 11

Setting the radio stations

automatically 18

manually 18

Slide show 23

Sound control 15, 17

Source devices 9

Speakers 13

Station memory 18

Subnet mask 14

Surround 17

Surround sound 17

synchronous 15

T

Test tone 15

TV aspect ratio 13

TV standard 13

U

Update 14

USB 20

USB stick

Inserting 20

Playing back 20

Removing 20

V

Videos 24

Volume 11

relative 15, 17

W

Wide screen 13

Z

Zoom factor 17

Protecting the environment

Batteries and rechargeable batteries



Batteries and rechargeable batteries must not be disposed of with household waste!

Every consumer is required by law to bring all batteries and rechargeable batteries, whether they contain harmful substances*) or not, to a collection point run by the communal authority or borough or run commercially, so that they can be disposed of in an environmentally friendly manner.

Please only hand in fully discharged batteries and rechargeable batteries!

*) labelled with: Cd = Cadmium, Hg = Mercury, Pb = Lead

Disposal of the unit



Used units must not be disposed of with household waste!

If the unit is no longer operational, every consumer is required by law to dispose of used units separately from household waste, e.g. at a collection point run by the communal authority/borough. In this way it is ensured, that used units are properly recycled and that negative consequences on the environment are avoided.

For this reason, electrical equipment is labelled with the icon shown here.

Technical data

Operating voltage:	220–240 V~, 50/60 Hz
Dimensions (W x H x D):	38.5 x 38.5 x 10.7 cm
Net weight:	4.7 kg

Technical changes reserved!
You can find further technical data on our website.

 This product complies with the directives of the Council of the European Community 2004/108/EC and 2006/95/EC.

Teufel

For questions, suggestions or other issues please contact our customer service department:

Lautsprecher Teufel GmbH
Gewerbehof Buelowbogen - Ausgang D1
10783 Berlin (Germany), Buelowstr. 66

Tel.: 00800 200 300 40 (toll-free)
Fax: +49 (0)30-300 930 930
www.teufelaudio.com

No liability is accepted for the accuracy of this information. Technical changes, typographical errors and other errors reserved.

Instruction No. 92308 GB 20130610