

Technical Description And User Manual



MOVE BT

In-ear stereo earphones with Bluetooth® function

Teufel

Contents

General Notes And Information.....	3
Proper Use	6
Device Overview	7
Safety Notes	9
Preparation	13
Operation	14
Phone Calls With The MOVE BT	19
Listening To Music With The MOVE BT	21
Other Functions And Displays	22
Care And Cleaning.....	24
Troubleshooting.....	25
Technical Data.....	26
Disposal	27

General Notes And Information

Regarding the user manual

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH

Version 1.0

September 2016

Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of the earphones WITH ORIGINAL PACKAGING.

Empty boxes are not available!

Complaints

In the event of a complaint, we require the invoice number in order to process your complaint.

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543

Thank you for your support!

Contact

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

**Telephone: 00800 -
200 300 40 (toll-free)**

**Fax: +49 (0)30 /
300 930 930**

**E-mail:
service@teufelaudio.com
www.teufelaudio.com**

Trademarks

© All trademarks are the property of their respective owners.

Bluetooth® and the Bluetooth symbol are trademarks of Bluetooth SIG, Inc.

Bluetooth® makes it possible for compatible devices to wirelessly link with one another within a range of up to 10 m.

Qualcomm aptX is a product of Qualcomm Technologies International, Ltd.

Qualcomm is a trademark of Qualcomm Incorporated, which is registered in the USA and other countries; its use has been approved. aptX is a trademark of Qualcomm Technologies International, Ltd., which is registered in the USA and other countries; its use has been approved.



Proper Use

The MOVE BT earphones are intended for the playback of audio signals that can be wirelessly transmitted via Bluetooth® from the player. The earphones are also suitable as a headset for connecting to Bluetooth compatible (mobile) phones.

Only use the earphones as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons.

The manufacturer accepts no liability for damage caused by improper use. The earphones are intended for private use only.



Before operating the earphones, please first read the safety notes and user manual carefully. This is the only way to use all functions safely and reliably. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

Device Overview

Pack contents


- ① 1× MOVE BT earphones
- ② 3 pairs of ear pieces in the transport tube and 3 silicon fitting pieces
- ③ 1× clip

Storage case (not shown)


User manual

Checking the pack contents

- Check that all items have been delivered and that nothing is damaged.
- If the delivery is incomplete or the device exhibits damage from transport, please contact our customer service department (see page 4).
- Do not operate the device if it is damaged.

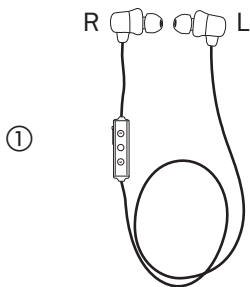

Operational controls

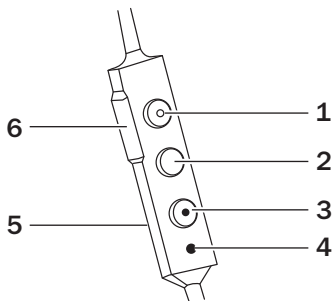

Item	Description
1	Button "Increase volume"
2	Multifunction button / accept or end a call
3	Button "Decrease volume"
4	LED
5	Microphone (back side)
6	USB port with rubber plug

Safety Notes

Signal terms

You can find the following signal terms in this user manual:

WARNING

This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.

CAUTION

This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

NOTICE

This signal term warns you of potential damage.



This symbol advises of useful additional information.

Safety Notes

WARNING

Danger of suffocation for infants!

Infants could pull the ear pieces off of the earphones, put them in their mouth and choke on them.

- *Never allow infants to play with the earphones or the ear pieces.*

CAUTION

Risk in road traffic and at work!

Your earphones significantly dampen external noise so that you are not entirely aware of your surroundings.

- *Do not in any case wear your earphones while performing activities where you are required to pay attention to your surroundings, this particularly applies when operating machinery or driving vehicles on roads. Also observe the legal guidelines and provisions of the country where you are using the earphones.*



Extended listening at high volumes may lead to hearing loss!

- *To avoid damage to health, avoid extended listening at high volumes.*
- *If the amplifier is set to full volume, it may produce very high sound pressure. This may have psychic consequences and also cause physical injury. Children are especially at risk. Set the volume control of your player to low volume before you turn it on.*

Risk of injury!

If you replace the ear pieces, securely attach them to the earphones so that they cannot come loose and get stuck in your ear.

- *Consult an ENT doctor if an ear piece gets stuck in your ear canal and if you are unable to remove it yourself.*

Danger of explosion!

Lithium rechargeable batteries can explode if handled improperly.

- *Do not heat or burn the earphones.*

- *Only charge the rechargeable batteries at ambient temperatures of 10–40 °C.*
- *Do not use your earphones in environments where there is a risk of explosion.*

Interference caused by radio waves!

Radio waves could affect the function of other sensitive devices that are not protected.

- *Only use the earphones in environments where the use of Bluetooth® is permitted.*

NOTICE

Risk of damage!

Improper handling of the earphones may result in damage.

- *Ensure that the earphones do not become wet, protect them from moisture, heat (e.g. during the summer in cars) and mechanical influences (e.g. severe shocks, pressure and falling).*

Preparation

Charging the rechargeable battery


The rechargeable battery in your MOVE BT has a capacitance of up to 20 hours. If the rechargeable battery charge level is low, the LED **4** will turn red and a voice will announce “Battery low” every 5 minutes.

The rechargeable battery in your MOVE BT is charged via USB. The rechargeable battery must be charged before first use.

1. Open the rubber plug on the USB port **6**.
2. To charge the earphones, connect the USB port of the earphones with the USB port of your computer, USB charger etc. Use a suitable USB charging cable for this (type A plug to a type micro B plug).

The LED will illuminate in red during the charging process.

The LED will go out once the rechargeable battery is fully charged.

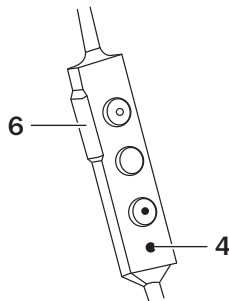


3. Take the USB charging cable out of the USB port of the earphones and put the rubber plug back in place.

Operation

Attaching the ear piece


Ear pieces and silicon fitting pieces for different sizes of ears are included in the pack contents.

- Select the ideal ear pieces and fitting pieces for your ear size and attach them to the earphones.

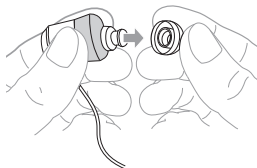

Inserting the earphones in your ears

1. Hold the earphones in your hands as indicated by the right-left label (chapter “Device Overview”).
2. Insert the earphones with the cables pointing down in your ear canals. The earphones must fit snugly and close off your ear.

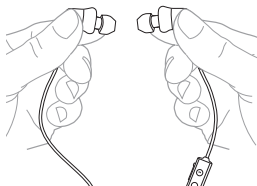

3. If this is not the case and the ear pieces are too large or too small, replace them with one of the other provided pairs of ear pieces.
4. If necessary, secure the cable for the ear-phones on your clothing with the clip.


 **CAUTION**

  ***Extended listening at high volumes may lead to hearing loss!***

– Set the volume control of your player to low volume before you turn it on.

Switching the earphones on/off

- To switch the earphones on, hold the multi-function button **2** down for approx. 3 seconds. The LED **4** will illuminate in blue. You will hear the voice instruction “Power on”. The earphones will automatically switch to pairing mode and the LED will flash blue every 2 seconds.
- To switch the earphones off, hold the multi-function button down for approx. 3 seconds.

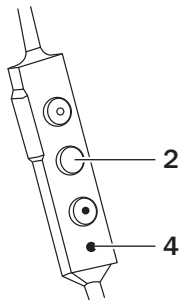

The LED will go out. You will hear the voice instruction “Power off”.

You should always switch the earphones off when they are not in use to save battery power.

Bluetooth® pairing

NOTICE

Interference caused by radio waves!
Radio waves could affect the function of other sensitive devices that are not protected.

– Only use the earphones in environments where the use of Bluetooth® is permitted.


You can connect compatible devices, such as most smartphones, with your MOVE BT earphones via Bluetooth® (pairing). The audio output of your smartphone is then played back by the MOVE BT.


After activation, the earphones are in pairing mode. The LED will flash blue every 2 seconds.

1. If this does not happen, hold the multifunction button **2** down for about 2 seconds. Pairing mode has now been reactivated; the LED **4** will flash blue.
2. Turn on the Bluetooth® function on your player (smartphone).
3. Let your smartphone search for Bluetooth® devices (you can find more information in the user manual of your smartphone). “Teufel MOVE BT” should appear in the list of the detected devices after the search run.
4. Select “Teufel MOVE BT” from the list of detected devices. If your player requires the entry of a PIN code, enter the PIN code “0000” set by factory default.

Once the earphones and your Bluetooth® device are connected, you will hear the voice instruction “Connected” and the LED will flash blue 2× every 5 seconds.

The MOVE BT will now play back all sounds that would otherwise be played by your smartphone.

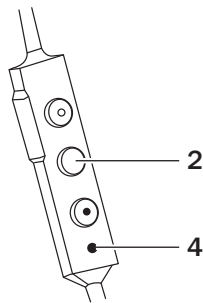

 By factory default, the PIN code is: 0000

5. To terminate the Bluetooth® connection, switch the Bluetooth® function on your player (smartphone) off.

A brief signal tone will sound and the LED will flash every 2 seconds.


Reconnecting to a paired player

If your MOVE BT has been previously connected with your player (smartphone), enabling the Bluetooth® function on your player (smartphone) is all you have to do to connect the two devices.

Resetting the Bluetooth® pairing settings

1. Switch the earphones off to reset the Bluetooth® pairing settings.
2. Hold down the multifunction button **2** and button **3** “Decrease volume” simultaneously for 5 seconds.

The LED **4** will flash red 4× and the Bluetooth® pairing settings will be reset.

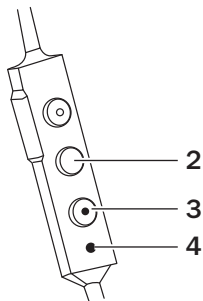


Phone Calls With The MOVE BT

If your MOVE BT is connected with a compatible smartphone or mobile phone, you can make the phone call with the MOVE BT just as with a headset. The earphones have a microphone **5**. Music playback will be interrupted in the event of an incoming call and a ring tone will sound instead.

The following functions are available:

Accept incoming call	Briefly push the multifunction button 2 .
Reject incoming call	Briefly push the multifunction button 2× consecutively.
End the call	Briefly push the multifunction button.
Redirect the current conversation to the smartphone to talk without the earphones	Briefly push the multifunction button 2× consecutively while the smartphone is active.

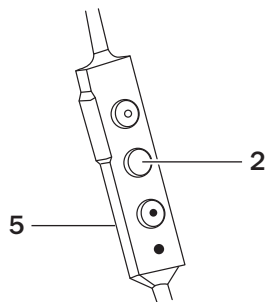


Call the last number back	Hold down button 1 “Increase volume” and button 3 “Decrease volume” for 3 seconds.
End the current call and accept an incoming call	Briefly push the multi-function button 2 during the incoming call.
Voice input of the phone number	Briefly push the multifunction button 2× consecutively while the smartphone is in standby.
Adjusting the volume	Push the button “Increase volume” or the button “Decrease volume”.

Listening To Music With The MOVE BT

If your MOVE BT is connected to a compatible smartphone or mp3 player, you can control music playback with the MOVE BT just as with a headset.

The following functions are available:

Play back/stop music	Briefly push the multifunction button 2
Select the next music track	Push and hold button 1 "Increase volume" for 2 seconds
Select the previous music track	Push and hold button 3 "Decrease volume" for 2 seconds
Adjusting the volume	Push the button "Increase volume" or the button "Decrease volume".

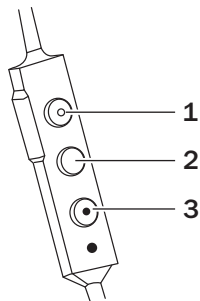

Other Functions And Displays

Pairing mode

Pairing mode will automatically end if the Bluetooth® connection is not established within 3 minutes. Then the LED will stop flashing.


- To switch pairing mode back on, hold the multifunction button **2** down for approx. 2 seconds.

The earphones will automatically switch back to pairing mode and the LED **4** will flash blue every 2 seconds.

Automatic deactivation

If you do not push a button on the MOVE BT after aborting pairing mode, it will turn off completely after an additional 3 minutes.

- To switch the earphones back on, hold the multifunction button **2** down for approx. 2 seconds. You will hear the voice instruction “Power on”. The earphones will automatically switch to pairing mode and the LED **4** will flash blue every 2 seconds.

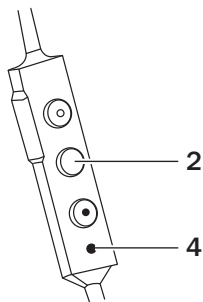


Interruption of connection

If your MOVE BT moves out of the range of your player, the Bluetooth® connection will be interrupted. You will hear 2 hollow beeps every 10 seconds.

The connection will be re-established automatically when you are back within range. You will hear the voice instruction “Connected” and the LED **4** will flash 2× in blue every 5 seconds.

Spoken messages and audio signals

Activating	“Power on”
Deactivating	“Power off”
Pairing established	“Connected”
Pairing disconnected	2× hollow beep
Incoming call	Ring tone
Battery low	“Battery low”

 There are apps and widgets for numerous smartphones that display the charge level of the earphones' rechargeable battery on the display.


Care And Cleaning

- For hygienic reasons, clean the earphones regularly.
- Switch the earphones off.
- Ideally, you can remove any dust or light dirt with a dry microfibre cloth.
- You can wipe off more stubborn dirt with a cloth which has been slightly dampened with water.
- Then immediately wipe the damp surfaces off with a soft cloth without applying pressure.
- Put the ear pieces in the transport tube and fill it half full with water. Shake the transport tube a few times. Then remove the water from the transport tube.

NOTICE

Liquid can destroy the electronics in your earphones.

- *Make sure that no liquids penetrate the earphones.*
- *Do not use caustic cleaning products or solvents.*

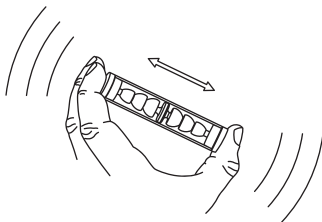

Troubleshooting

The following advice should help you to solve problems. If this does not help, you will find useful information in the detailed FAQs on our website. Otherwise, please contact our hotline (see page 4). Take note of the warranty instructions.

Problem	Possible cause	Solution
The MOVE BT cannot be turned on.	The rechargeable battery is empty.	Charge the rechargeable battery (see page Seite 13).
No audio playback despite Bluetooth® connection.	The MOVE BT is switched off.	Switch the MOVE BT on.
	The MOVE BT is not registered with the player or is not paired with it.	Check all settings as described in the chapter Bluetooth® pairing (see page Seite 16).
	The Bluetooth® function is switched off on the player.	Switch the Bluetooth® function on. If applicable, refer to the user manual for the player.
	Volume has been set too low.	Increase the volume on the player and/or earphones.

Technical Data

Nominal impedance active/passive:	2× 16 Ω
Weight:	23 g
Operating time:	up to 20 hours
Charging time:	up to 3 hours
Operating temperature range:	0 °C to +40 °C
Charging voltage:	5 V DC

You can find further technical data on our website.
Technical changes reserved!



This device fulfils the applicable European and national guidelines. This is confirmed by the CE mark (corresponding declarations are kept with the manufacturer).

Lautsprecher Teufel GmbH hereby declares that the radio equipment “MOVE BT” is in accordance with the 2014/53/EC directive. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.teufel.de/declaration-of-conformity.html

Disposal

Old devices must not be disposed of with household waste!



If the device is no longer operational, every consumer is required by law to dispose of old devices separately from household waste, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.

For this reason, electrical equipment is marked with the adjacent symbol.

Teufel

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)

Phone 00800 - 200 300 40
(toll-free)
Fax +49 (0)30 / 300 930 930
E-mail: service@teufelaudio.com
www.teufelaudio.com

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.