


Technical Description and User Manual

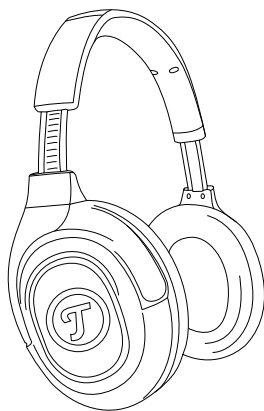

Teufel MUTE

Headphones

Teufel

General Notes and Information

Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcast in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH
Version 1.0, November 2015

Contact

Please contact our customer service with any questions, suggestions or complaints:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax +49 (0)30 / 300 930 930

E-mail: service@teufelaudio.com

teufelaudio.com

Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold on to the packaging. We can only accept product returns with the ORIGINAL PACKAGING.

Empty boxes are not available!

Complaints

In case of a complaint, we will need the following information to process your enquiry:

1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543

2. Serial number or batch number

Located on the back of the device, e.g. serial no.: UL 04007480121A

Thank you for your support!

Protecting the environment



Old devices must not be disposed of with household waste!

If the device is no longer operational, every consumer is required by law to dispose of old devices separately from household waste, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.

For this reason, electrical equipment is labelled with the adjacent symbol.



Batteries and rechargeable batteries do not belong in the household waste!

Every consumer is required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances*) or not, to a collec-

tion point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Please only turn in batteries and rechargeable batteries which are empty!

*) labelled with: Cd = cadmium, Hg = mercury, Pb = lead

Product Contents

- 1× “Teufel MUTE” headphones
- 1× connector cord with two 3.5 mm jack plugs, 1.3 m long
- 1× airplane adapter
- 1× storage box
- 1× AAA battery

For your Safety

Please read



Before you use the headphones, please first carefully read through the safety notes and the user manual. Only in this way, can you ensure that all functions are used in a safe and reliable manner.

Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

Proper use

The “Teufel MUTE” headphones serve to play back audio signals transmitted by an audio system via the enclosed cable.

Only use the headphones as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer cannot be held liable for damages caused by improper use.

The headphones are suitable for use at home, by DJs and professionals.



Safety notes

Danger of suffocation for children!

Make sure that children do not play with the package wrapping and do not pull small parts off of the headphones and put them in their mouth. Danger of suffocation.



Extended listening at high volumes may lead to hearing loss.

To avoid damage to health, avoid extended listening at high volumes.

Only connect headphones to the headphone outputs! Do not connect them to the speaker output of an amplifier.

Set the volume control of your audio source to a low level before you put on the headphones.

Risk in road traffic!

Your headphones significantly dampen external noise. Therefore, for reasons of road safety, do not wear your headphones whilst driving vehicles or cycling.

If you are a pedestrian, pay attention to your surroundings while wearing the headphones, especially when crossing the street.

Risk of injury!

Do not use your headphones in environments where there is a risk of explosion.

Health hazard!

Leaking battery acid may lead to chemical burns. Do not allow battery acid to come into contact with skin, eyes or mucous membranes. In the event of contact with battery acid, immediately flush the applicable areas with plenty of clean water and consult a physician if necessary.

Risk of explosion/fire!

Batteries can explode if handled improperly.

Never attempt to recharge batteries.

Only insert type AAA batteries or rechargeable batteries.

You must not heat or short circuit batteries and rechargeable batteries or dispose of them in fire.

Do not expose batteries and rechargeable batteries to direct sunlight.

Risk of damage!

Ensure that your headphones do not become wet, protect them from moisture, heat (e.g. during the summer in cars) and mechanical influences (e.g. severe shocks, pressure and falling).

Always take hold of the plug when pulling out the connector cord. Do not pull on the cable.


Take the battery out if you do not intend to use the headphones for a prolonged period of time.

Replace the battery after no later than one year to prevent chemicals from leaking and damaging the headphones.

Cleaning

Clean the ear cushions and the headband with a soft dry cloth. Never use aggressive cleaning agents as they may damage the sensitive surface.

Inserting the Battery

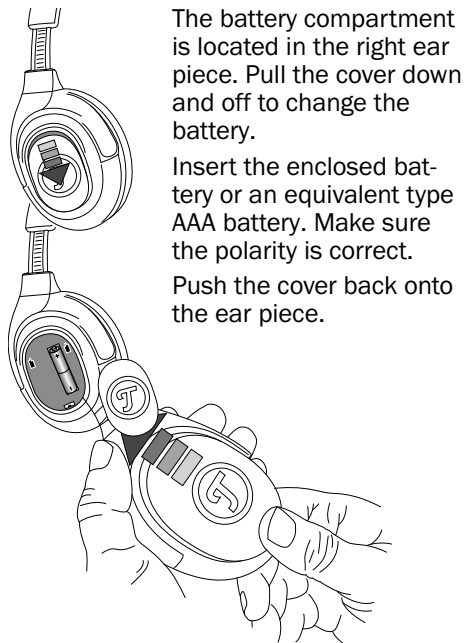

The battery compartment is located in the right ear piece. Pull the cover down and off to change the battery.

Insert the enclosed battery or an equivalent type AAA battery. Make sure the polarity is correct.

Push the cover back onto the ear piece.

Handling

Put your headphones on so that both ears are firmly covered. In the process, take note of the markings on the ear pieces: R=right, L=left.

If necessary, adjust the headband length to your head size.

Operation



Pushing the ANC button on your headphones activates the following functions:

Push 1×: ANC on (red LED illuminates continuously).*

Pushing it again briefly: Muting playback on/off.

Push 1× and hold: ANC off (red LED deactivated).

* A blinking LED indicates that the battery level is critically low

Connecting the Headphones



Connect the headphones to the headphone jack of your audio system using the enclosed cable.

If necessary, use the airplane adapter (included in the product contents) or a 3.5 mm to 6.3 mm adapter (not included in the product contents).

What is ANC?

ANC=**A**ctive **N**oise **C**ancellation is a function for reducing disruptive background noise.

Technical Data

Driver unit:	∅ 40 mm
Max. power:	200 mW
Impedance:	48 Ω
Sensitivity at 1 kHz:	89 ±3 dB (ANC off) 93 ±3 dB (ANC on)
Frequency response:	20 – 20000 Hz

Please contact our customer service with any questions, suggestions or complaints:

Teufel

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str 44
10787 Berlin (Germany)

Phone: 00800 - 200 300 40
(toll-free)
Fax: +49 (0)30 - 300 930 930
www.teufelaudio.com

No responsibility is assumed for the correctness of this information. Technical changes, typographical errors and other errors reserved.

Manual No. 93668 GB 20151117