


## **Technical description and operating instructions**

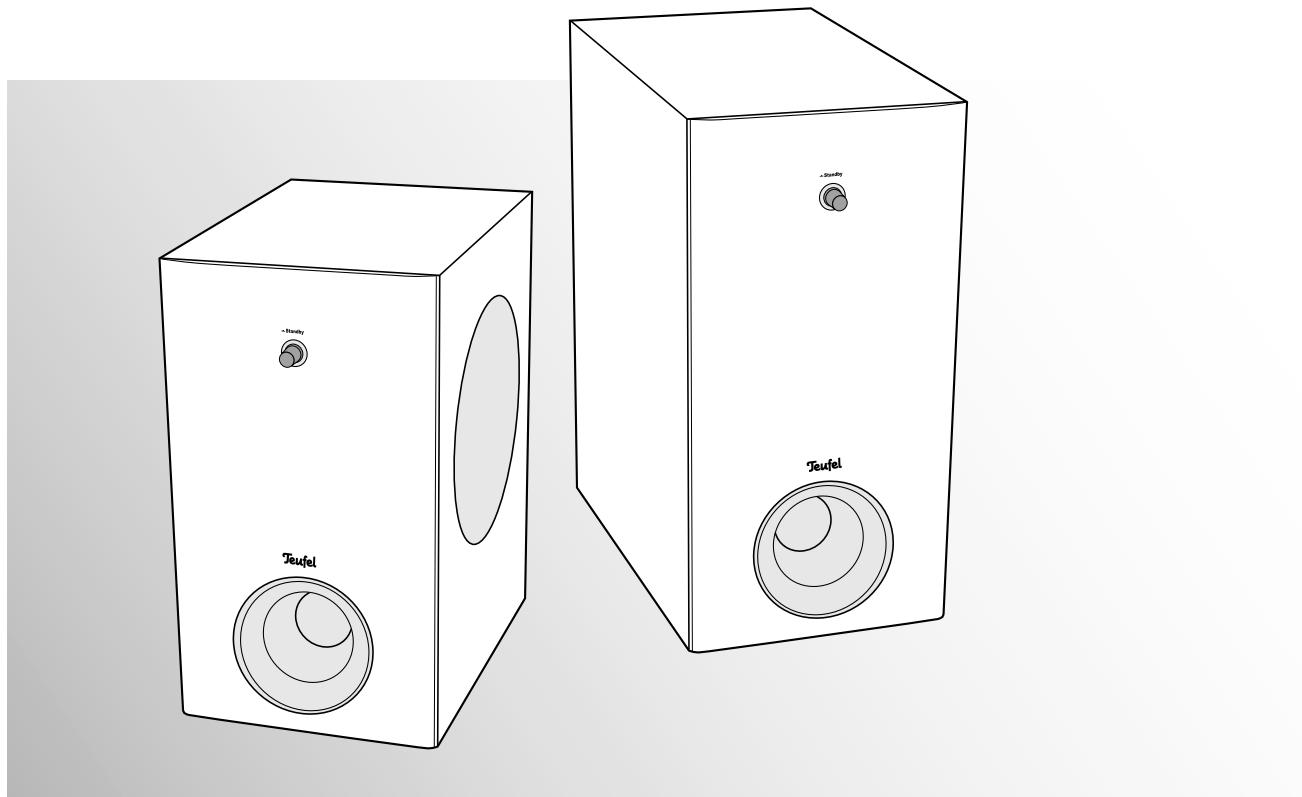

# **Active subwoofer**

**US 5108/1**

**US 5110/1**

**Teufel**

# Contents

---

<b>General notes and information</b>	3
Notice	3
Original packaging	3
Complaints	3
Contact	3
Proper use	3
<b>Safety notes</b>	4
Caution icons	4
Safety notes	4
<b>Product contents, control elements and connections</b>	5
Product contents	5
Control elements and connections	5
Subwoofer back side	5
<b>Connection and operation</b>	6
Signal connection	6
Connecting to a power supply	6
Automatic activation/deactivation	6
Changing the input sensitivity of the automatic activation	6
<b>Troubleshooting</b>	7
<b>Care and cleaning</b>	7
<b>Protecting the environment</b>	8
Disposing of the unit	8
<b>Technical data</b>	8

# General notes and information

## Notice

The information in this document may be changed without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.  
No part of these instructions may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH  
Version 1.0  
Mai 2010

## Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of the speakers WITH THE ORIGINAL PACKAGING.  
Empty boxes are not available!

## Complaints

In case of complaint we will need the following information to process your enquiry:

### 1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543

### 2. Serial number and/or batch number

Can be found on the back of the device,  
e.g. serial number: CL30000240129A-123.

Many thanks for your support!

## Contact

For questions, suggestions or criticism please contact our customer service department:  
Lautsprecher Teufel GmbH  
Gewerbehof Buelowbogen · Buelowstrasse 66  
10783 Berlin (Germany)  
Tel.: 00800 - 200 300 40 (free of charge)  
Fax: +49 (0)30 - 300 930 930  
[www.teufelaudio.com](http://www.teufelaudio.com)

## Proper use

Only use the unit as described in these instructions. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons. The manufacturer accepts no liability for damage caused by use not in accordance with the instructions.

The unit is intended for private use.



Before operating the unit for the first time please read the safety notes and operating instructions carefully. This is the only way to use all functions safely and reliably.

Keep the operating instructions safe and pass them on to anyone who may own the unit after you.

## Safety notes

### Caution icons

You will find the following caution icons used in these instructions:

#### Danger High risk!



Failure to observe the warning may result in severe personal injury or death.

#### Attention Moderate risk!



Failure to observe the warning may result in property damage.

#### Minor risk!



Points which should be observed when handling the unit.

## Safety notes

#### Danger Risk of electric shock!



Faulty installation of electrical equipment or mains voltage which is too high can cause electric shocks.

- The device is only suitable for use with a power supply voltage of 220–240 V~/50 Hz.
- If the unit's case or mains cable is defective or shows other signs of visible damage, disconnect the mains adapter immediately from the socket and do not operate the device.
- If the unit emits smoke or smells of burning or other unusual odours, disconnect it immediately from the power supply and do not operate it.
- Never open the unit case.  
Repairs may only be carried out by an authorised specialist workshop. Only use parts which conform with the original unit specifications. There are electrical and mechanical parts in this unit which are essential in order to avoid exposure to sources of danger.
- Do not insert any object through the vent slots in the case.
- Only use the unit in indoor areas.
- Do not operate the unit in moist areas and protect it from drops of water or splash water.  
Also take care not to stand vases or other containers of liquid on or near the unit in order to avoid liquid getting into the case. If water or other foreign objects should enter the case, disconnect the device immediately from the mains power supply and remove any batteries. Send the unit to our service address.
- Never touch the mains adapter with wet hands.
- Check the unit regularly for damage.

#### Danger Danger to children!



Children can become trapped in the packing film when playing and suffocate.

- Do not allow children to play with the unit or the packing film. Danger of suffocation.
- Ensure that children do not remove small parts from the unit or take them off of the unit (e.g. control knobs or plug adapters). They could swallow the parts and choke. Never allow children to use electrical devices without supervision.

#### Danger Danger to hearing!



Loud noise may lead to hearing loss. There is a potential risk of sudden very high noise pressure especially when activating the subwoofer which is set to full volume. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk.

- Set your signal source unit volume control to a low setting.
- When the volume is set high, always keep a certain distance from the unit and never place your ear directly on the speaker.
- To avoid damage to health, avoid extended listening at high volume.

#### Danger Danger of injury/damage!



Incorrect location may result in damage.

- Never use the unit unmounted in vehicles, in unstable locations, on wobbly tripods or furniture, on underdimensioned brackets etc. The speakers could tip or fall down and cause injury to persons or be damaged.
- Arrange the speakers so that they cannot be knocked over accidentally and make sure that the cables do not pose a trip hazard.
- Ensure that any wall mounting is performed in a professional manner.
- Only use suitable wall brackets for mounting. Check the carrying capacity of the walls.
- Do not place the unit near sources of heat (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).

#### Attention Risk of damage!



Power overload due to lightning strike may damage or destroy the unit.

- If the unit is to be left unsupervised for a long period (e.g. during a holiday), or if a thunderstorm is forecast, disconnect it from the mains power supply.

### Attention Fire hazard!



Improper use may lead to damage or fire.

- Do not place open flames such as burning candles or similar on the unit.
- Ensure sufficient ventilation.
- Do not place the unit in direct sunlight.
- Do not cover the ventilation slots with curtains, cloths, newspapers or similar. Heat build-up inside the unit can shorten the lifetime of the unit.

### Check to be sure!

- !
- Check that all items have been delivered and that nothing is damaged.

- If the delivery is incomplete or you find damage sustained in transit, do not operate the unit but contact our service department (see page 3).

## Product contents, control elements and connections

### Product contents




1 x active subwoofer US 5108/1 or US 5110/1

1 x mains cord

### Control elements and connections

#### Subwoofer back side

Pos	Name	Description
1	Phase	Activate/deactivate phase shift (180°) for the subwoofer
2	On/Auto	Switch for automatic activation
3	Power	Power LED
4	Limiter	The limiter LED illuminates when the amplifier reaches a distortion factor of 3–4% (corresponds to an output of 120 watts at 4 ohm)
5	Auto Level	Set the input sensitivity of the automatic activation
6	Volume	Volume control for subwoofer
7	Line Input	Audio input jack
8	–	Connector jack for mains cord
9	–	Mains fuse
10	Power On/Off	Mains switch
11	Standby	Switch subwoofer on or to standby <b>On:</b> Illumination around the push-button is blue <b>Standby:</b> Illumination around the push-button is orange

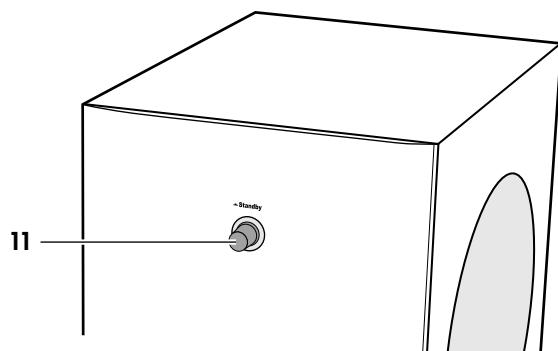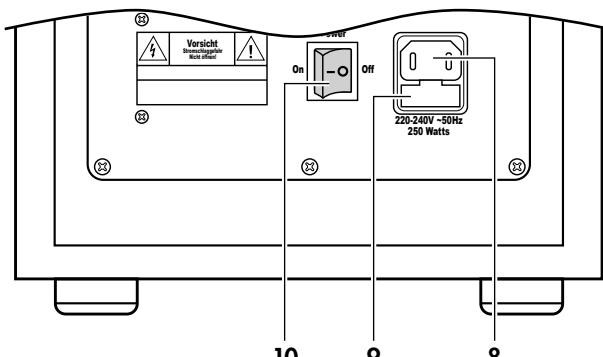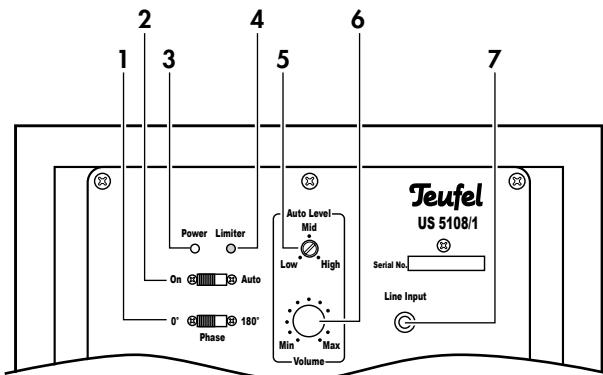

# Connection and operation

## Danger Danger of injury/damage!

Arrange the cables so that they do not pose a trip hazard.

## Subwoofer

### Signal connection

- Connect the RCA jack **7** "Line Input" on the back side of the subwoofer and the RCA jack for the subwoofer on the receiver with a mono RCA connector cable. For more information, please consult the operating instructions for your receiver.

### Connecting to a power supply

- Ensure that the mains switch **10** "Power" on the subwoofer is switched off ("0 OFF" position).
- Connect the mains connector jack **8** with a mains socket using the mains cord.

## Satellite speakers

- Connect the satellite speakers as described in the corresponding operating instructions.

## Activating and deactivating

- With the "Power" switch **10**, you can turn the subwoofer on or off. If the subwoofer is on, the "Power" LED **3** will illuminate.

### Automatic activation/deactivation

- Switch **2**:
  - Auto** position: The subwoofer turns on as soon as an audio signal is present at the line input **7** (LED **3** is blue). If no audio signal is present for 30 minutes, the subwoofer switches to standby (LED **3** is orange).
  - On** position: The subwoofer is always on.

### Changing the input sensitivity of the automatic activation


- With the control **5** "Auto Level", you can change the sensitivity of the automatic activation. This makes sense if the subwoofer doesn't turn on even if an audio signal is present and/or it is activated by a disturbing impulse.
- Use a narrow screwdriver to turn the controller.

## Volume

- Adjust the subwoofer volume with the volume control **6** "Volume".



## Phase

- With the switch **1** "Phase", you activate and deactivate the phase shift (180°) for the subwoofer, which may improve the sound under certain circumstances.

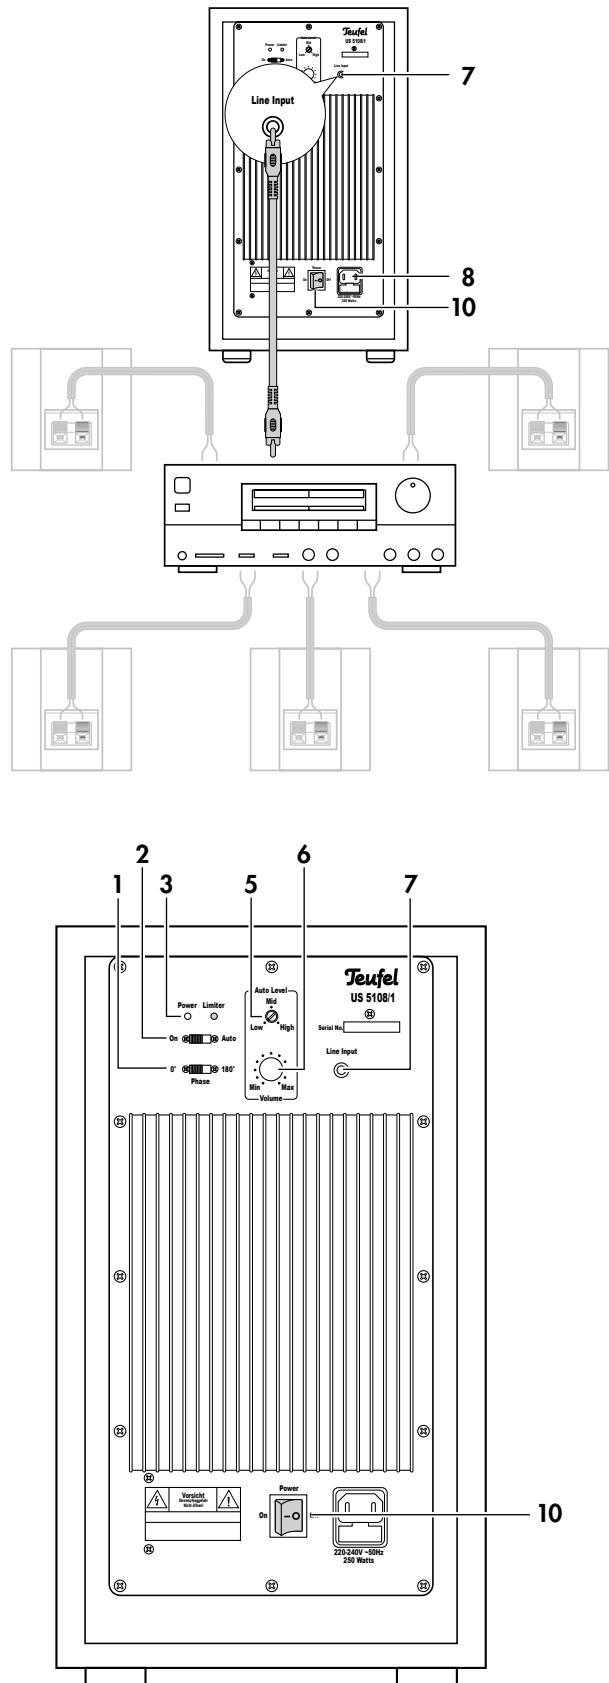

## Troubleshooting

The following instructions should help you to solve problems. If this doesn't work, please contact our hotline (see page 3). Mind the warranty instructions.

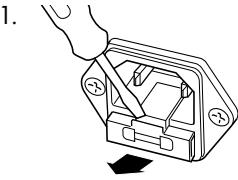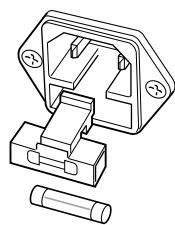Problem	Possible cause	Solution	
The subwoofer doesn't work. The LED <b>3</b> does not illuminate.	The subwoofer is off or doesn't have any power.	Turn on the "Power" switch <b>10</b> ("On I"). Check the mains cord and socket.	
	Fuse is defective.	1.  Remove the mains cable. Carefully pull out the fuse holder on the mains connection jack.	2.  Push the old fuse out downwards. Insert a new fuse (2 A time-lag) and push the holder back.
The subwoofer doesn't work, but the LED <b>3</b> is blue.	The volume has been set too low.	Increase the volume with the "Volume" control <b>6</b> .	
The subwoofer hums.	The subwoofer is connected to another circuit than the rest of the system.	Connect the subwoofer and source device to the same electric circuit.	
	The buzzing is caused by problems with the power supply.	Buy a line filter and connect both devices to it.	
	The buzzing is caused by a multi-way socket.	Use another multi-way socket or plug the subwoofer directly into the wall socket. In the case of two-pin plugs it may help to insert the plug into the socket the other way around.	
The subwoofer doesn't turn on.	The sensitivity of the automatic activation has not been set high enough.	Turn the control <b>5</b> "Auto Level" towards "High".	
The subwoofer turns on when this is unintended.	The automatic activation has been set too high.	Turn the control <b>5</b> "Auto Level" towards "Low".	

## Care and cleaning

Clean the subwoofer regularly with a soft, damp micro-fiber cloth. In the process, be absolutely sure to observe the following notes:

### Danger Risk of electric shock!

 In contact with live parts, water can lead to electric shock or short circuit.

- Make sure that no liquid penetrates the unit.
- Disconnect the mains plug before cleaning.

### Attention Risk of damage!



Using the wrong cleaning materials may damage the delicate surface of the case.

- If possible use only plain water with no cleaning products. In case of stubborn marks, a mild soap solution may be used.
- In no circumstances should caustic cleaning products, white spirit, thinners, petrol or similar be used for cleaning.

## Protecting the environment

### Disposing of the unit



**Used units must not be disposed of with household waste**

If the unit is no longer operational, every consumer is required by law to dispose of used devices separate from household waste, e. g. at a collection point run by the communal authority

borough. In this way, used devices can be recycled and waste materials disposed of in an environmentally friendly manner.

For this reason, electrical equipment is labelled with the displayed symbol

## Technical data

		US 5108/1	US 5110/1
Operating voltage:		220–240 V~, 50/60 Hz	220–240 V~, 50/60 Hz
Power consumption	max.	250 watts	250 watts
	in standby	0.4 watts	0.4 watts
Dimensions (W x D x H):		240 mm x 365 mm x 420 mm	240 mm x 410 mm x 490 mm
Net weight:		12.8 kg	17 kg



This product conforms with Council of the European Union guidelines 2004/108/EC and 2006/95/EC

Technical changes reserved!

# Teufel

For questions, suggestions or criticism please contact our customer service department:

**Lautsprecher Teufel GmbH**  
Gewerbehof Bülowbogen - Aufgang D1  
10783 Berlin (Germany), Bülowstr. 66

Tel.: 00800 200 300 40 (toll-free)  
Fax: +49 (0)30-300 930 930  
[www.teufelaudio.com](http://www.teufelaudio.com)

No liability is accepted for the accuracy of this information. Technical changes, typographical errors and other errors reserved.