



iTeufel® Dock

The docking station for Apple iPod media players*

* Player not included! A complete and up to date list of compatible iPod models can be found on our Website.

Teufel

For your information

The information in this document may be changed without advance notification and does not represent any obligation on behalf of Lautsprecher Teufel GmbH. Lautsprecher Teufel GmbH accepts no responsibility for any errors in this manual.

No part of these instructions for use may be copied in any way, whether electronically, mechanically, using photocopies or recordings, or transferred without the prior written agreement of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH

Version 1.4

June 2009

Trademark

® All trademarks are the property of their respective owners.

Warranty terms

There is a two-year warranty starting from the date of purchase on equipment and work time, with the exception of damage caused by incorrect use or electrical or mechanical overload. An original copy of our invoice is required as the warranty document. This warranty is exclusively valid for iTeufel® Docks that have been purchased from Teufel by end users for their own private use. The warranty is not valid for iTeufel® products that the end user has purchased from a different distributor. If the Teufel product is sold on privately, the warranty may be transferred to the purchaser, providing that the original proof of purchase is also transferred.

Returns policy

For all products purchased directly from Teufel and from www.teufel.de, Teufel provides an eight-week right of return with a money-back guarantee. You will not have to pay any additional shipping costs for returning Teufel goods. Teufel covers the freight for transporting the goods back to the factory, and we will promptly refund the purchase price to your account once we have verified the condition of the goods.

You may only return individual components from a set if Teufel offers these components for sale separately. If you return one or more individual components from a set, this voids the discount that Teufel provides on the sale of components as a set. This means that for individually returned components from a set, you will be refunded the difference between the set price and the sum purchase price of the individual components you decide to keep, i.e., we will deduct the discount that applies to set purchases.

If you decide to return any or all of the purchased goods, please always contact us first.

Note that we can only process and accept returned goods if you have telephoned us in advance and discussed the required returns procedure.

Please contact our service department if you have any questions, suggestions or if there is anything you think we could do better.

Lautsprecher Teufel GmbH
Gewerbehof Bülowbogen - Aufgang D1
Bülowstr. 66
D-10783 Berlin (Germany)
Tel.: +49(30) - 30 09 300
Fax: +49(30) - 30 09 30 30
www.teufel.eu

Contents

Table of contents	Page	3
Introduction to iTeufel® Dock	Page	3
Safety information	Page	4
Unpacking · Contents · Connection	Page	5
Connection	Page	6
Remote control · Use	Page	7

Introduction to iTeufel® Dock

Dear Lautsprecher Teufel customer,

many thanks for buying a product from iTeufel® of Lautsprecher Teufel.

With the iTeufel® Dock you have purchased a high-performance docking station that allows you to connect your iPod for example to an amplifier, an active speaker or a TV.

In order to avoid complications, please read the instructions fully before using the appliance and keep them in a safe place for future reference. If you have any further questions please contact our engineers on + 49 (30) 300 9 300 or send an e-mail using the contact form on our website www.teufel.eu. Please have your invoice number

ready so that we can deal with your query as well and as quickly as possible.

Please refer to our safety information on Page 4 of these instructions for use and only use the Teufel product once you have read the safety information.



Safety information

Please note the following safety information.

Risk of suffocation - keep packaging materials (e.g. the plastic film) out of the reach and sight of children.

Risk of electrocution - do not leave children unsupervised with electrical appliances!

In case of emergency:

If any of the following occur disconnect the appliance from the mains and consult our technicians:

- ▶ If the plug or cable are damaged
- ▶ If foreign bodies or liquid have entered the appliance
- ▶ If the appliance has been in direct contact with rain or other water
- ▶ If the appliance does not play, even if you have followed the instructions for use
- ▶ If the appliance has been dropped or damaged in some other way.

We cannot accept any responsibility for incidences that occur because safety information has not been adhered to.

As a matter of principle, please read these instructions for use very carefully! It is essential that you take note of all of the safety information and instructions for use before starting the appliance. Please keep this user guide in a safe place for future reference.

Important: Please read the user guide. You should also follow all instructions for start-up and ongoing use.

Information on cleaning: Please do not attempt to clean the appliance using household chemicals because this could damage the surface. Simply use a dry cloth. Disconnect the appliance from the mains before cleaning.

Caution - moisture and sunlight: Ensure that the appliance does not come into contact with moisture! You should also protect the device against excessively high air humidity by not using it in damp areas, e.g. in damp cellars; also avoid any use near wet areas such as bathtubs, showers, washbasins, drains or swimming pools etc. Direct sunlight should also be avoided! Do not expose device to dripping or splashing water. Do not place objects filled with liquids, such as vases on the device.

Information on location: Do not use the appliance unsecured in vehicles, in unstable places, on wobbly tripods or furniture or supports that are too small. The speakers could fall and cause damage to people, including yourself. Speakers, particularly if positioned on stands or on the TV/monitor, may fall and cause damage due to their weight, even if they have been positioned securely and basically protected against falling, as a result of external influences (pulling on the cable, tripping over the cable, unintentional physical contact). This also applies to wall supports that have been attached inappropriately or incorrectly to walls that may not be capable of supporting their weight. Only use suitable wall supports for mounting. Make sure that you know how much weight the walls can bear. The appliance must not be placed near sources of heat. This includes radiators and heaters, ovens and other appliances that emit heat (e.g. amplifiers). No sources of heat may be placed on the speakers such as fan heaters or candles.

For ventilation: Slits and openings in the case have been provided for ventilation. Their purpose is to guarantee reliable operation and to prevent the appliance from overheating. These openings must not be blocked or covered, including by placing the appliance on a bed, sofa, carpet or other soft surface. Do not place any newspapers or table cloths etc. on the appliance. The cooling plate of the amplifier electronics must not be covered or exposed to direct sunlight. Additional active cooling of the appliance is generally not permitted.

Electrical supply: The dock must only be supplied from a power source with the correct voltage as specified on the identification label. If you are unsure about the electricity supply in your home, please contact us or your electricity supplier for more information. The appliance does not need to be earthed. Please only use the appropriate mains cable for connecting to the mains socket. This mains cable must not be modified under any circumstances. Regulations on polarity and earth connection must be adhered to.

Information on wiring: Please place the supply cable flat and flush to the wall and floor. Cables that are laid loosely represent a risk of tripping. This could also result in interference and cause the sound to be disrupted. The electricity supply cable should be laid so that it is not likely to be stepped on or squashed from the sides or above by heavy objects. Damaged cables must be replaced. Pay particular attention to the cable/plug connection, the mains socket and the cable output from the dock. The power supply cable and the cables that connect the dock should be checked regularly for insulation faults or breaks. If a fault is discovered, the appliance and the cabling must be disconnected from the

mains immediately and the defective cable must be replaced.

During periods without use: Remove the dock's power supply cable from the socket for longer periods of absence or non-use.

During thunderstorms: In order to avoid damage caused by lightning strikes, the appliance should be switched off and also detached from the mains socket as soon as a thunderstorm is expected.

Risk of overload: You should not overload wall sockets, extension cables or integrated appliance sockets, because this could potentially lead to short circuits and even fires. You should also avoid turning up the volume very high (= approx. three quarters of the control range) on the relevant amplifier, especially if you have increased the bass using the bass control, the loudness button or one of the deep bass boost switches.

Foreign bodies and liquids: Foreign bodies and liquids must not get into the appliance via its openings under any circumstances, because they could come into contact with parts carrying high voltages, which could then cause short circuits and fires. Therefore do not spill any liquids of any kind on the appliance.

Troubleshooting: Do not attempt to repair the appliance yourself. Contact our service department first for authorisation if you think that you can repair the fault yourself. Otherwise the appliance must be sent to our service department's address.

Information on spare parts: Lautsprecher Teufel will provide you with spare parts during the warranty period. Your warranty will not be invalidated if you replace the parts yourself on-site using Lautsprecher Teufel spare parts.

Unusual sounds: If any unusual sounds occur during use or the sound becomes distorted, the speaker output must be reduced immediately so that the system plays an undistorted sound.

Connecting and changing the fuse: Disconnect the mains plug. A faulty fuse may only be changed for one of the same type.

Information on volume: Loud noises can damage hearing. In addition to physical damage, please be aware of possible psychological consequences. Children and pets require particular care. If necessary, set the volume control of your signal source appliance to the lowest level. When the volume is high always keep a certain distance from the appliance and never have your ears right next to the speaker.

Unpacking · Contents · Connection

Contents

The iTeufel® Dock is supplied as a complete system:

- ▶ 1 x iTeufel® Dock
- ▶ 1 x iTeufel® Dock remote control
- ▶ 1 x battery

- ▶ 1 x iTeufel® Dock supply unit
- ▶ 5 x iPod inserts in different shapes (1 insert is placed in the dock)

Before use please check if the system is complete.

Please note:
Empty boxes are not available!

Completely remove the items from the packaging materials and place all of the parts in front of you to check them.

Do not use any sharp or pointed objects to remove the packaging materials. These objects could damage the surfaces and cables of the products supplied.

Please keep the boxes for the eight-week return period because we can only repay the full purchase price if the products are returned in the ORIGINAL PACKAGING in which they were supplied.


Warning:
Explosion hazard with inappropriate replacement of the battery. Replacement only by the same or an equivalent type. Not expose batteries to excessively warm as sunshine, fire or like.

Attention:
The separating equipment of this equipment is the mains plug, this separating equipment must be usable without difficulties.


* Due to changes to the operating software on the part of the manufacturer apple your iPod may not work properly with the video outputs.
For detailed and up to date information please visit our website.



iTeufel® Dock front

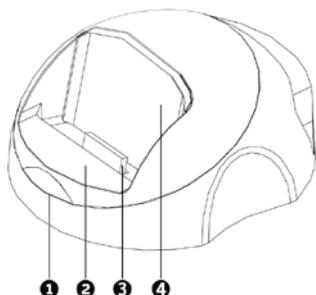

- ❶ Remote control receiver
- ❷ ON indicator
- ❸ Electrical connection to the iPod
- ❹ iPod socket

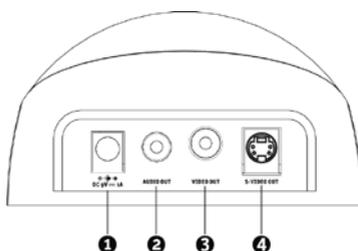

- ❶ Mains plug connection jack
- ❷ Stereo audio output
- ❸ Video output*
- ❹ S-video output*

Connection

1. Using the correct docking adaptor.

Select the docking adaptor that fits your iPod from the five docking adaptors supplied (Fig. A) and place it in the dock's support shell as shown in Fig. B.

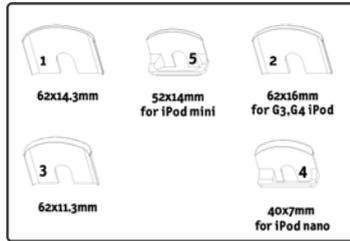


Fig. A

2. Connecting the iPod and the dock.

Place your iPod in the dock socket and carefully allow it to snap gently into the embedded connection jack as shown in Figure C.

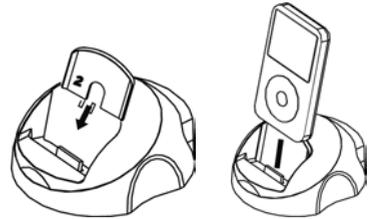



Fig. B

Fig. C

3. Connecting the dock and the amplifier/television

Information


Fully active subwoofers, e.g. A 200/3 SW (Motiv 2), have a stereo input pair with cinch jacks just like a conventional stereo amplifier. The iTeufel® Dock connects to these.

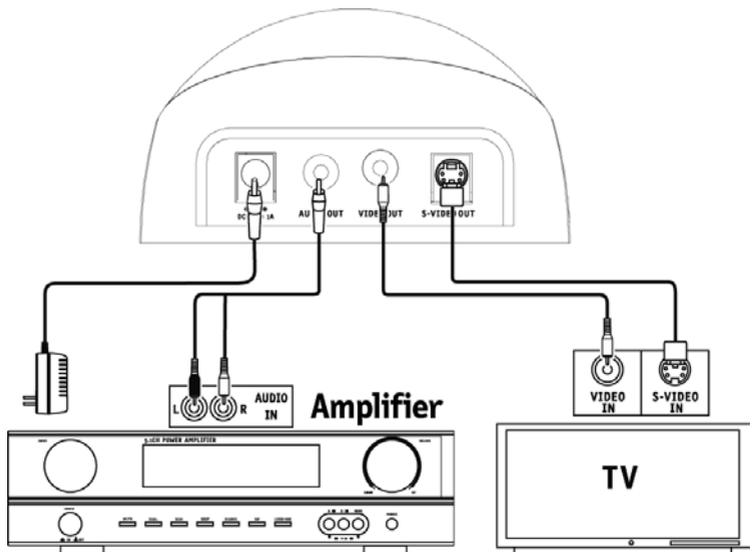

Connect the cable as shown in the diagram.

Remote control • Use

You can comfortably control the functions of your iPod using the remote control supplied. The drive functions are related to those of an iPod.

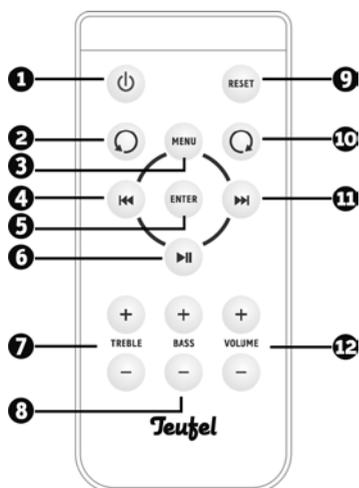

1. ON/Standby
2. Menu scroll up
3. Menu
4. Previous track
5. Enter
6. Play/pause
7. Treble control
8. Bass control
9. Reset
10. Menu scroll down
11. Next track
12. Volume

Changing the batteries



When inserting batteries, ensure that the “+” and “-” poles exactly match the “+” and “-” positions of the battery compartment.

1. Start

Switch on the appliance using the standby button on the remote control. A LED will first flash then light up continuously. The iPod is only charged when the Start button has been pressed once. Pressing the button again starts playback mode.



Information

Do not drop the remote control or step on it. This could result in damage that could cause the remote control to stop working.

If the remote control is going to be out of use for a longer period, please remove the batteries to prevent leakage.

 
Do not expose the remote control to unnecessary extra light. Do not use the iTeufel® Dock remote control at the same time as other remote controls.

Technical data

You can find the technical data on our website.


2. iPod control

Using the remote control corresponds to the normal iPod control.




3. Volume

 The “+” and “-” buttons increase and decrease the volume. During the change the LED will flash. If the maximum or minimum level is reached the LED will light up continuously.




4. Treble control

 The “+” and “-” buttons increase or reduce the amount of treble. During the change the LED will flash. If the maximum or minimum value is reached the LED will light up continuously.



5. Bass control

 The “+” and “-” buttons increase or reduce the amount of bass. During the change the LED will flash. If the maximum or minimum value is reached the LED will light up continuously.



6. Reset

This button returns the appliance to its original state.



Teufel

Lautsprecher Teufel GmbH
Gewerbehof Bülowbogen - Ausgang D1
Bülowstr. 66
D-10783 Berlin (Germany)
Tel.: +49(30) - 30 09 300
Fax: +49(30) - 30 09 30 30
www.teufel.eu