

## Technical Description and Operating Instructions



Made for



iPod



iPhone

# iTeufel® Dock v3

Docking station for iPod and iPhone

# Teufel

# Contents

---

<b>General notes and information</b> .....	<b>3</b>
<b>Safety notes</b> .....	<b>4</b>
<b>Explanation of symbols</b> .....	<b>6</b>
<b>Product contents</b> .....	<b>6</b>
<b>Control elements</b> .....	<b>7</b>
<b>Remote control</b> .....	<b>8</b>
The battery .....	8
Changing the batteries .....	8
<b>Connecting</b> .....	<b>9</b>
<b>Operation</b> .....	<b>10</b>
Connecting an iPod/iPhone .....	10
iPod/iPhone playback .....	10
Adjusting the volume .....	11
Adjusting the sound.....	11
Removing the iPod/iPhone .....	11
<b>Care and cleaning</b> .....	<b>12</b>
<b>Troubleshooting</b> .....	<b>13</b>
<b>Protecting the environment</b> .....	<b>14</b>
Batteries and rechargeable batteries.....	14
Disposal of the unit.....	14
<b>Technical data</b> .....	<b>15</b>

# General notes and information

## Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of these instructions may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH  
Version 1.0  
December 2011

## Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold onto the packaging.

We can only accept the return of the speakers **WITH THE ORIGINAL PACKAGING**.

Empty boxes are not available!

## Complaints

In case of complaint we will need the following information to process your enquiry:

### 1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543

### 2. Serial number or batch number

Located on the bottom side of the unit, e.g. serial number: IT04....

Many thanks for your support!

## Contact

For questions, suggestions or criticism please contact our customer service department:

Lautsprecher Teufel GmbH  
Gewerbehof Buelowbogen  
Buelowstrasse 66  
10783 Berlin (Germany)

**Phone 00800 - 200 300 40**

**(free of charge)**

**Fax: +49 (0)30 / 300 930 930**

**E-mail: [servcie@teufelaudio.com](mailto:servcie@teufelaudio.com)**

**[www.teufelaudio.com](http://www.teufelaudio.com)**

## Proper use

Only use the product as described in these operating instructions. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons.

The manufacturer accepts no liability for damage caused by use not in accordance with the instructions.

The product is intended for private use.



Before operating the unit for the first time please read the safety notes and operating instructions carefully. This is the only way to use all functions safely and reliably.

Keep the operating instructions safe and pass them on to anyone who may own the unit after you.

## Safety notes

### Caution icons

You will find the following caution icons in these instructions:

---

**Danger****High risk!**

Failure to observe the warning may result in severe personal injury or death.

---

**Attention****Moderate risk!**

Failure to observe the warning may result in property damage.

---

**Minor risk!**

Points which should be observed when handling the unit.

---

### Safety notes

---

**Danger****Risk of electric shock!**

Faulty installation of electrical equipment or mains voltage which is too high can cause electric shocks.

- The AC adapter plug is suitable for use with a power supply voltage of 100–240 V ~ / 50/60 Hz.
- Only use the enclosed mains adapter. When connecting the unit, make sure that the correct voltage is present. You will find detailed information directly on your mains adapter.
- Immediately disconnect the AD adapter plug and discontinue using the device if its case or the connection line is defective or exhibits other visible damages.
- The AC adapter plug is the separator of this device. This separator must be readily accessible.

- If the unit emits smoke or smells of burning or other unusual odours, disconnect it immediately from the power supply and do not operate it.
- Never open the housing of the mains adapter. Its overhaul must be performed by an authorised specialist company only.
- Only use the accessory products specified by the manufacturer.
- Only use the unit in indoor areas.
- Do not operate the unit in damp areas and protect it from drops of water or splash water.

Make sure that no vases or other containers filled with liquid are located near the device so that no liquid may penetrate the housing. If water or other foreign objects penetrate the housing, immediately disconnect the AC adapter plug. Send the unit to our service address in this case.

- Never touch the mains adapter with wet hands.
  - Check the unit regularly for damage.
- 

**Danger****Danger to children!**

Children may put small parts in their mouth at play and suffocate.

- Ensure that children do not remove small parts from the unit or take them off of the unit (e.g. batteries from the remote control, knobs etc.). They could swallow the parts and choke.
  - If a battery is swallowed, immediately consult a physician with the child.
  - Never allow children to operate electrical devices unsupervised.
-

---

**Danger****Danger of chemical burns!**

Leaking battery acid may lead to chemical burns.

- Do not allow battery acid to come into contact with skin, eyes and mucus membranes. In case of contact with acid rinse the affected location immediately with plenty of plain water and if necessary see a doctor.
- 

**Danger****Danger of explosion!**

Batteries (particularly lithium batteries) can explode if used improperly.

- Never attempt to recharge batteries.
  - Only use batteries of the same or equivalent type.
  - Do not heat or short circuit batteries or rechargeable batteries and do not dispose them in fire.
  - Do not expose batteries and storage batteries to direct sunlight.
- 

**Danger****Danger of injury/damage!**

Setting up the device in a location that is not suitable may cause injury to persons and/or damage to property.

- Arrange the unit so that cables do not pose a tripping hazard.
  - Do not place the unit near sources of heat (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).
- 

**Danger to hearing!**

Loud noise may lead to hearing loss.

Very high noise pressure may suddenly be emitted, especially if a subwoofer is activated and set to full volume. This may have psychological consequences

and also cause physical injury. Children and pets are particularly at risk.

- Set the volume control of your amplifier/TV set to a low setting.
  - Always maintain a certain distance to the speaker at high volumes.
  - To avoid damage to health, avoid extended listening at high volume.
- 

**Attention****Risk of damage!**

Other influences may damage or destroy the unit.

- If the unit is to be left unsupervised for a long period (e.g. during a holiday), or if a thunderstorm is forecast, disconnect the mains adapter from the socket. Otherwise, sudden overvoltage may cause a defect.
- Leaked batteries may damage the remote control.  
In case of prolonged absence, remove any batteries from the remote control.
- If the device is subjected to warm temperatures after being cold (e.g. after transport) condensation may occur inside of it.

In this case wait at least 2 hours before you connect and activate it.

---



## Explanation of symbols

		
Protection class II	Only use in indoor areas	Polarity on the circular connector: outside (-), inside (+)




## Product contents

### Check to be sure

- Check that all items have been delivered and that nothing is damaged:
  - ① 1 x iTeufel® Dock v3
  - ② 1 x AC adapter plug
  - ③ 1 x remote control including battery
- If the delivery is incomplete or exhibits transport damage, please contact our service department (page 3).
- Do not operate the unit in the event of transport damage!

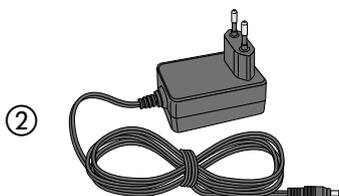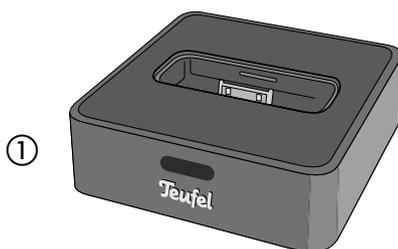

## Control elements

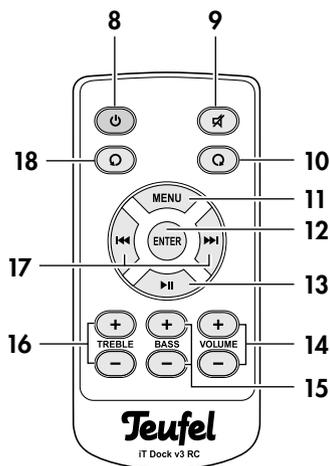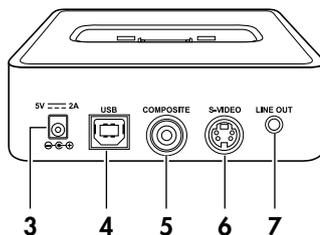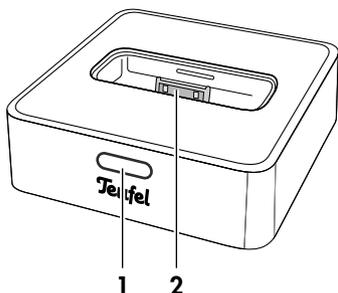

No.	Name	Meaning/function
1		Power LED
2		iPod/iPhone dock
3	5V 2A	Input jack for the AC adapter plug
4	USB	USB port type B
5	COMPOSITE	Video output jack
6	S-VIDEO	S-Video output jack
7	LINE OUT	Audio output jack
8	⏻	Activate/deactivate
9	🔇	Mute (turn sound on/off)
10	⏮	Navigate down in the list
11	MENU	Open menu/back to previous menu level
12	ENTER	Confirm selection
13	▶⏸	Play/Pause
14	VOLUME	Adjust the volume
15	BASS	Increase/decrease bass
16	TREBLE	Increase/decrease treble
17	⏮ ⏭	Next/previous title or jump to start of title
18	⏮	Navigate up in the list

## Remote control

### The battery

An insulating strip has been affixed between the battery and the contact in order to preserve the entire battery capacitance for delivery. Simply pull this strip out.

Thus, the remote control is ready for use.

### Changing the batteries

The battery should be replaced if the remote control stops functioning properly or no later than after 2 years. Battery type: CR 2025 LITHIUM BATTERY.

To change the batteries pull out the battery compartment from the remote control and change the batteries.


Make sure that the polarity is correct!

---


**Danger** **Danger of explosion!**

Lithium batteries can explode if handled improperly.

- Never attempt to charge the lithium battery.
  - Only insert a battery of the same or equivalent type.
  - Do not heat, short circuit or dispose of the battery in fire.  
Do not subject the batteries to direct sunlight.
- 

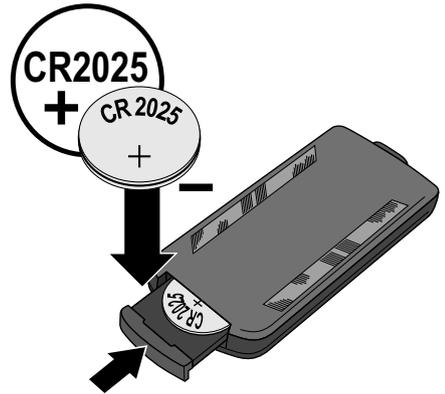

## Connecting

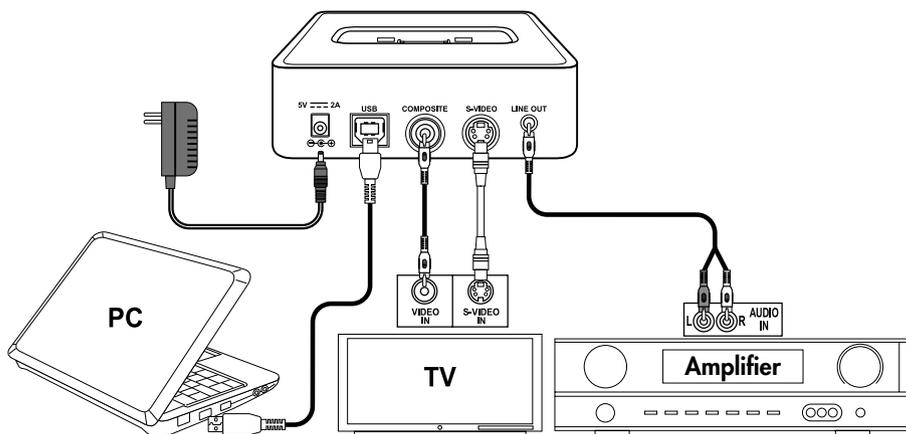

### Sound transmission

The jack **7 LINE OUT** serves as audio output of your iTeufel® Dock v3.

- Connect this jack with the audio input jack(s) of your amplifier or TV set (e.g. Audio In, Line In, AUX).
- A stereo cable with 2 jack plugs (3.5 mm) or with one jack plug (3.5 mm) and 2 RCA plugs is required for the connection.

### Image transmission

The output jacks **5 COMPOSITE** or **6 S-VIDEO** are available for playback of your videos and photos.

- Connect one of the two jacks with the corresponding input jack of your TV set. If your TV set features both jacks, you should preferably use the S-VIDEO connection which provides a slightly better image quality.
- A video RCA cable is required for the COMPOSITE connection. For the S-VIDEO connection you need an S-VIDEO cable.

- Please note that no sound is transferred via both video jacks. You need to transfer sound separately with the jack **7 LINE OUT** as described above.

### Selecting the signal source


- Set the connected jack as the signal source (source) on your amplifier or TV set.

### Connection with iTunes

- Connect the jack **4 USB** with a USB jack of your computer.
- A cable with a USB plug of type A and type B each is required for this.
- To synchronise your iPod/iPhone start iTunes on your computer as usual. Your iPod/iPhone is recognised automatically and can be synchronised now.

### Connection to a power supply

- Connect the small circular plug of the AC adapter plug with the jack **3** (5V --- 2A).
- Insert the AC adapter plug in an easily accessible mains socket.

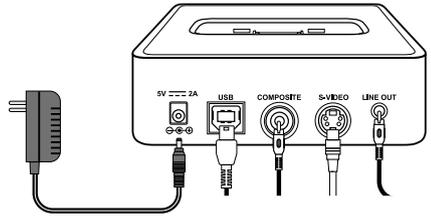

## Operation

You can find a current list of compatible iPod/iPhone models on our website.

### Connecting an iPod/iPhone


- Carefully place the iPod/iPhone on the plug-in contact in the dock. Thus, the dock is activated, the rechargeable battery is charged and the iPod/iPhone is ready for playback.



#### Important!

For the iPod Touch and iPhone you


must start the "iPod" app which is usually located in the Dock area of the Home screen.

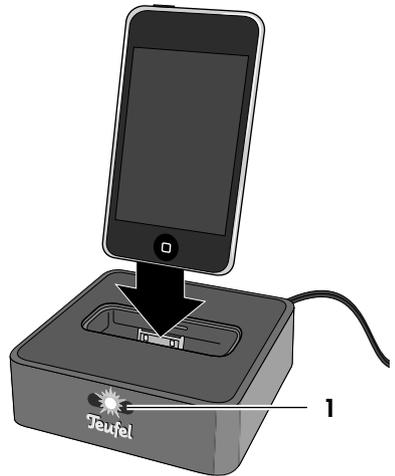


### iPod/iPhone playback

- If necessary, activate the dock using the button **8** .
- If necessary, adjust the volume using the buttons **14 VOLUME**.

Now you are able to directly control the basic functions of your iPod/iPhone with the remote control (see next page).

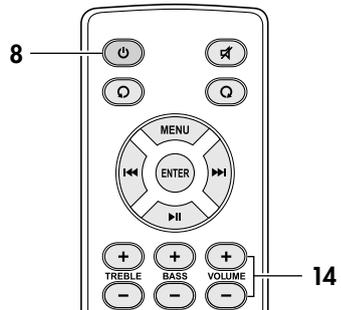

Remote control button		Corresponds to the iPod button
10		Turn the scroll wheel clockwise
11	<b>MENU</b>	MENU
12	<b>Enter</b>	Selection (Centre of the scroll wheel)
13		
17		
18		Turn the scroll wheel counterclockwise

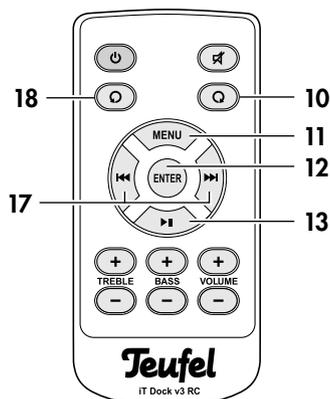


## Adjusting the volume

- The volume is adjusted with the buttons **14 VOLUME**.
- With the button **9** , you can turn the sound off and on again.
- The volume, which was previously set, is saved (even after removing the AC adapter plug).

## Adjusting the sound

- The buttons **15 BASS** and **16 TREBLE** are used to adjust the bass and treble.
- The bass and treble settings are saved in standby mode. Removing the AC adapter plug resets them to +/- 0 dB.

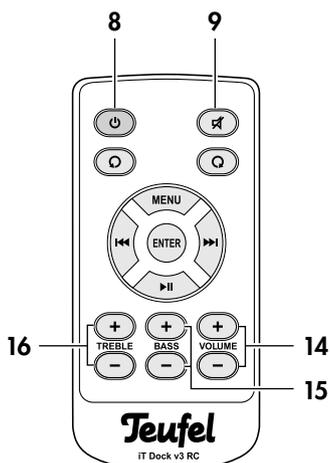

## Removing the iPod/iPhone

- If necessary, eject the device in iTunes using the eject icon .
- Turn off the dock using the button **8** .
- Carefully remove the iPod/iPhone from the dock.

## Care and cleaning

---

Clean the device regularly with a soft, damp microfibre cloth. Please be absolutely sure to observe the following notes in the process:

---

**Danger Risk of electric shock!**



In contact with live parts, water can lead to electric shock

or short circuit.

- Make sure that no liquid penetrates the mains adapter or the device.
  - Pull the plug mains adapter out of the socket before cleaning.
- 

---

**Attention Risk of damage!**



The wrong cleaner could damage the sensitive case surface.

- If possible, only use plain water without any additives. A mild soapy solution is suitable for removing stubborn stains.
  - Do not in any case use aggressive cleaning agents, spirit, thinner, petrol or the like for cleaning.
-

## Troubleshooting

The following advice should help you to solve problems. If this doesn't work, the extensive FAQs on our website will surely provide you with support. Otherwise, please contact our hotline (see page 3). Take note of the warranty instructions.

Problem	Possible cause	Solution
No playback.	No power supply.	Check that the AC adapter plug is properly seated. Check the function of the socket with another device.
	Dock is turned off.	Activate the dock using the button <b>8</b>  .
	Volume is set too low.	Increase the volume using the buttons <b>14 VOLUME</b> . If necessary, increase the volume on the AV amplifier/TV set.
	An incorrect source was selected on the AV amplifier/TV set.	Select the input jack which is connected to the dock (see page 9).
	iPod/iPhone not compatible.	You can find a current list of compatible iPod/iPhone models on our website.
	iPod app not started.	For the iPod Touch and iPhone the "iPod" has to be started.
Video is played back without sound.	Cable for sound transmission is not connected.	No sound is transmitted via the video jacks "COMPOSITE" and "S-VIDEO". Connect an audio cable in addition (see page 9).
Remote control doesn't work.	Battery is isolated.	Remove the insulating strip from the battery compartment.
	Battery is used up.	Change the battery (see page 8).

## Protecting the environment

### Batteries and rechargeable batteries



**Batteries and rechargeable batteries must not be disposed of with household waste!**

Every consumer is required by law to bring all batteries and rechargeable batteries, whether they contain harmful substances\*) or not, to a collection point run by the communal authority or borough or run commercially, so that they can be disposed of in an environmentally friendly manner.

Please only hand in fully discharged batteries and rechargeable batteries!

\*) labelled with: Cd = Cadmium, Hg = Mercury, Pb = Lead

### Disposal of the unit



**Used units must not be disposed of with household waste.**

If the unit is no longer operational, every consumer is required by law to dispose of used devices separately from household waste, e.g. at a collection point run by the communal authority borough. In this way it is ensured, that used devices are properly recycled and that negative consequences on the environment are avoided.

 
For this reason, electrical equipment is labelled with the symbol shown here.

## Technical data

---

Operating voltage:	100–240 V~ / 50/60 Hz
AC adapter plug:	5 V DC/2 A
Dimensions (W x H x D):	100 x 32 x 100 mm
Net weight:	250 g

Technical changes reserved!



# Teufel

For questions, suggestions or criticism please contact our customer service department:

Lautsprecher Teufel GmbH  
Gewerbehof Buelowbogen - Ausgang D1  
Buelowstrasse 66  
10783 Berlin (Germany)

Phone 00800 - 200 300 40 (free of charge)

Fax: +49 (0)30 / 300 930 930

E-mail: [service@teufelaudio.com](mailto:service@teufelaudio.com)

[www.teufelaudio.com](http://www.teufelaudio.com)

No responsibility is assumed for the correctness of this information.  
Technical changes, typographical errors and other errors reserved.