


User Manual

Teufel Move

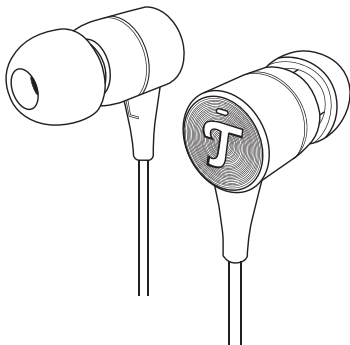

Teufel

Table of contents

General Notes and Information	3	8. Certification	21
About the User Manual	3	9. Declaration Of Conformity	22
Right of Return	3		
Complaints	4		
Contact	4		
For Your Safety	5		
Proper Use	5		
Safety notes	6		
Explanation of terms	6		
Disposal	10		
1. Introduction	11		
2. Packaging	12		
3. Product overview	13		
4. Getting started	14		
5. Using the in-ear headphone	16		
5.1 Listening to music	17		
5.2 Making phone calls	17		
5.3 Activating voice services	18		
5.4 Volume	18		
6. Care and maintenance	19		
7. Troubleshooting	20		

General Notes and Information

About the User Manual

The information in this document is subject to change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopying or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH

Right of Return

If you wish to exercise your eight-week right of return, we ask that you make sure that you hold onto the original packaging. We can only accept the return of in-ear headphones WITH THE ORIGINAL PACKAGING. In-ear headphones returned without the original packaging will not be accepted.

Complaints

In the event of a complaint, the invoice number is required in order for your complaint to be processed. The invoice number can be found on the sales slip (enclosed with the product) or on the order confirmation PDF document.

Contact

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH

BIKINI BerlinBudapester Straße 44

10787 Berlin (Germany)

Telephone: 00800 200 300 40 (toll-free)

Fax: +49 (0) 30 / 300 930 930

Online support: www.teufelaudio.com/service

Contact form: www.teufelaudio.com/contact

Thank you for your support!

For Your Safety

Proper Use

The “Teufel Move” In-ear headphone is designed for the playback of audio that can be controlled via the in-line button. Please only use the in-ear headphone as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage to property or even persons. The manufacturer accepts no liability for damage caused by improper use. The in-ear headphone is intended for private use only.



Before operating the in-ear headphone, please first read the safety notes and user manual carefully. This is the only way to use all functions safely and reliably. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

Safety notes

This chapter contains general safety notices. You should always observe these notices to protect both yourself and third parties. You should also observe the warning notices in each chapter of this user manual.

Explanation of terms

You can find the following signal terms in this user manual:



This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.



This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.



This signal term warns you of potential damage.



This symbol advises of useful additional information.

**WARNING****Danger of suffocation! Children can become trapped in the packaging film when playing and suffocate.**

- *The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age.*
- *Make sure that children do not play with the packaging, and that they do not pull off small parts of the in-ear headphones and put them in their mouth.*

Risk in road traffic and at work! Your in-ear headphones significantly dampen external noise so that you are not entirely aware of your surroundings.

- *Do not in any case wear your in-ear headphones while performing activities where you are required to pay attention to your surroundings. This particularly applies to when you are operating machinery or driving on the road. You should also observe the legal guidelines and provisions of the country which you are in when using the in-ear headphones.*

In Case of Skin Irritation

Earphones may lead to ear infections if not properly cleaned. Clean the earbuds frequently with an antiseptic, such as isopropyl alcohol. If a skin problem develops, discontinue use. If the problem persists, consult a physician.

Avoid Electrostatic Shock

When using headphones in areas where the air is very dry, it is easy to build up static electricity and possible for your ear to receive a small electrostatic shock from the headphones. To minimize the risk of electrostatic discharge from the headphones, avoid using the headphones in extremely dry environments, or touch a grounded unpainted metal object before inserting the headphones.



CAUTION



Extended listening at high volumes may lead to hearing loss!

- *To avoid damage to your health, avoid extended listening at high volumes.*
- *If the in-ear headphone is set to full volume, it may produce very high sound pressure. This might have psychological consequences and also cause physical injury. Children are especially at risk. Set the volume control of your player to low volume before you turn it on.*

-
- *If you experience ringing in your ears or muffled speech, stop listening and have your ears checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:*
- Limit the amount of time you use the earphones at high volume.
 - Avoid turning up the volume to block out noisy surroundings.
 - Turn down the volume if you can't hear people speaking near you.

NOTICE**Risk of damage! Improper handling of the in-ear headphones may result in damage.**

- *Ensure that the in-ear headphones do not get wet, and protect them from moisture, heat (e.g. during the summer in cars) and mechanical influences. (e.g. severe shocks, pressure and falling).*

Disposal

Old devices must not be disposed of with house-hold waste!



Electrical equipment contains harmful substances and valuable resources. Every consumer is required by law to bring all old electrical devices to an authorized collection or return point so that they can be disposed of in a manner that is environmentally friendly and which preserves resources. You can hand your old electrical devices over to the local reusable materials/recycling center.

Please contact your vendor directly for more information about this topic.

Batteries and rechargeable batteries do not belong in the household garbage!



Every consumer is required by law to bring all batteries and recharge-able batteries, regardless whether they contain harmful substances* or not, to a collection point run by local authority, borough, or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Please only turn in batteries and rechargeable batteries that are empty!

* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

1. Introduction

Thank you for purchasing the Teufel Move - our passive In-ear headphone, which is designed to deliver an extraordinary sound experience for your entertainment. We encourage you to take a few minutes to read through this manual, which describes the product and includes step-by-step instructions to get you started.

Designs and specifications are subject to change without notice. If you have any questions about the in-ear headphones or their operation, please contact your retailer or customer service representative, or visit our website: teufel.de; teufelaudio.com or teufel.cn.

Key Features

- Excellent passive sound.
- Excellent voice quality using integrated microphone.
- Playback control using in-line remote button.
- 3 different ear tip sizes.

2. Packaging

Unpack the box carefully and ensure that the following parts are included. If any part is damaged or missing, do not use it and contact your retailer or customer service representative.




In-ear headphone - Main Unit



Quick Start Guide


3. Product overview

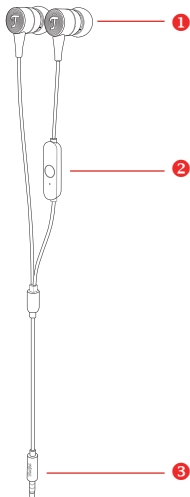

1. Ear tip
2. In-line Button
3. Jack plug


4. Getting started

How to wear

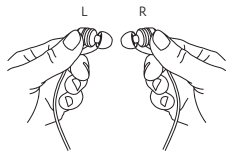


The in-ear earphones are marked with L (left ear) and R (right ear). Make sure the earphones have a tight fit and fill the ear well.

How to fit

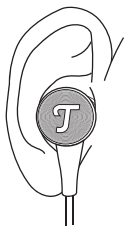

Additional ear pieces for different ear sizes are provided. Choose the ear tips which are perfect for you and attach them to the earphones.


How to connect

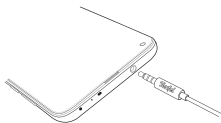

Insert the 3.5mm phone jack of the earphones into the headphone connection jack of your device.

How to use

Button	For iPhone	For Android
Press once	Play/pause the playback; Receive a call or hang up	Play/pause the playback; Receive a call or hang up
Press twice	Forward to next track	Forward to next track
Press three times	Backward to previous track	Forward to next track but one
Long press	Activate Siri; Reject a call	Google search; Reject a call

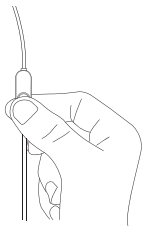

5. Using the in-ear headphone

Teufel Move features an in-line button, and you can accept/end/reject phone calls, listen to music or activate the voice assistant with it.



5.1 Listening to music

You can control the playback of compatible smartphones with the in-line button.

In-Line Button	For iPhone	For Android
Press once	Play/pause the playback	Play/pause the playback
Press twice	Forward to next track	Forward to next track
Press three times	Backward to previous track	Forward to next track but one

5.2 Making phone calls

The Teufel Move features a built-in microphone.

If the in-ear headphone plugs into your smartphone, it can be used to accept/end/reject phone calls.

Music playback will be interrupted in the event of an incoming call and continued once the call is over.

The following functions are available (while call is incoming):

In-Line Button	For iPhone	For Android
Press once	Accept/end a call	Accept/end a call
Long press	Reject a call	Reject a call

5.3 Activating voice services

The voice services from iOS (Siri) or Android (Google search) can be used on smart phones connected to the in-ear headphones. The services can be activated as follows:

In-Line Button	For iPhone	For Android
Long press	Activate Siri	Google search

5.4 Volume

Volume can be controlled by the connected playback device.

Audio volume is faded-in and faded-out when the audio playback is played or paused.

Note: Sound settings of your device may affect the sound quality of your in-ear headphones negatively. (E.G. Equalizer, Effects)

Make sure they are turned off first to get the best sound quality.

6. Care and maintenance

- Please keep the device and its accessories dry. Do not use external heating device such as microwave oven or hair dryer to dry the in-ear headphone.
- Do not place the device and its accessories in areas where the temperature is too high or too low, otherwise it may cause device failure, fire or even explosion.
- Before cleaning and maintenance, please stop using the device, close all applications, and disconnect all connections or cables from other devices.
- Do not use strong chemicals, cleaning agents, or strong detergents to clean the device or its accessories. Wipe the device or its accessories with a clean, dry and soft cloth.
- Do not contact the magnetic stripe card (such as bank card, telephone card, etc.) with the device for a long time, otherwise the magnetic stripe card may be damaged by the magnetic field.
- Do not disassemble or refit the device and accessories without permission, otherwise the device and accessories will not be covered by the company's warranty. Please contact Teufel customer service center in case of device failure.

7. Troubleshooting

Problem	Solution
No sound	<ol style="list-style-type: none"><li data-bbox="280 197 976 260">1. Press Play on your mobile device to make sure the audio track is playing.<li data-bbox="280 270 976 368">2. Make sure the in-ear headphone plugs into the audio jack perfectly. (Hint: If the jack is not fitting, remove the case of your smartphone.)<li data-bbox="280 379 976 410">3. Increase the volume on the mobile device.
Poor sound quality	<ol style="list-style-type: none"><li data-bbox="280 423 976 516">1. Make sure that both ear tips fit securely in your ear, and make sure that you wear the earphone in a correct way (See page 14).<li data-bbox="280 527 976 558">2. Use a different music source.<li data-bbox="280 568 976 667">3. Sound settings of your device, such as Equalizer, Effects, may affect the sound quality of your earphone negatively. Make sure they are turned off first to get the best sound quality.<li data-bbox="280 677 976 708">4. Clear any debris or wax from the ear tips and ear tip nozzles.

8. Certification

Regulatory and Compliance

This chapter lists all required regulatory standards and certifications. Further standards or regulations may apply.

Europe

- Low Voltage Directive 2014/35/EU
EN 62368-1
- RoHS Directive 2011/65/EU with all Amendments
- POPs Regulation (EU) 2019/1021 with all Amendments
- REACH (EC) 1907/2006 with all Amendments

China

All applicable test and certifications.

9. Declaration Of Conformity



Declaration of Conformity

Lautsprecher Teufel GmbH hereby declares that this product complies with the requirements of the directives 2014/30/EU, 2014/35/EU and 2014/53/EU to the extent they are installed and used in accordance with the instructions of the manufacturer. The full text of the EU declaration of conformity is available at the following Internet address:

www.teufelaudio.com/konformitaetserklaerungen.html

Please contact our customer service department with any questions, suggestions, or complaints:

Teufel

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Straße 44
10787 Berlin (Germany)

www.teufelaudio.com

www.teufel.de

www.teufelaudio.at

www.teufelaudio.nl

www.teufelaudio.fr

www.teufelaudio.pl

www.teufel.cn

Telephone: 00800 200 300 40 (toll-free)

Fax: +49(0)30 / 300 930 930

Online support:

www.teufelaudio.com/service

Contact form:

www.teufelaudio.com/contact