


# Technical Description and Operating Instructions

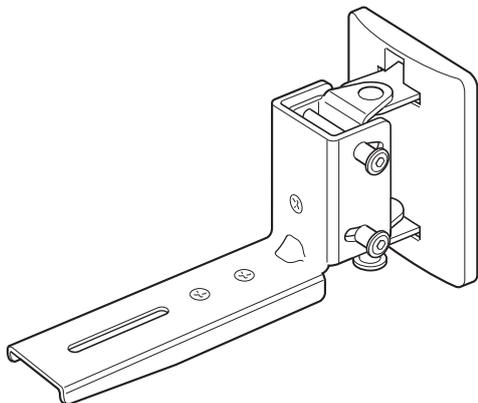

**Speaker  
wall mount  
AC 7500 SM**

**Teufel**

## General notes and information

---

### Proper use

Only use the wall mount as described in these operating instructions. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons. The manufacturer accepts no liability for damage caused by use not in accordance with the instructions. The product is intended for private use.



Before mounting the wall mount, please read the safety notes and operating instructions carefully. This is the only way to use the product safely and reliably. Keep the operating instructions safe and pass them on to anyone who may own the unit after you.

### Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH. No part of these instructions may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

### Original packaging

If you wish to exercise your right of return, we ask that you be absolutely sure to hold onto the packaging. We can only accept the return of the wall mount WITH THE ORIGINAL PACKAGING. Empty boxes are not available!

### Complaints

In case of a complaint we implicitly need your invoice number and the serial or lot number for processing. The serial number can be found on the back side of the device. Many thanks for your support!

### Contact

Please contact our customer service with any questions, suggestions or criticism:

**Lautsprecher Teufel GmbH**

**BIKINI Berlin**

**Budapester Str. 44**

**10787 Berlin (Germany)**

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

Service: [www.teufelaudio.com/service](http://www.teufelaudio.com/service)

Contact: [www.teufelaudio.com/contact](http://www.teufelaudio.com/contact)

# Safety notes

## Caution icons

You will find the following caution icons in these instructions:

 = **High risk! Failure to observe the warning may result in severe personal injury or death.**

 = **Moderate risk! Failure to observe the warning may result in property damage.**

 = **Minor risk! Points which should be observed when handling the unit.**

### Danger Danger to children!



Children can become trapped in the packing film when playing and suffocate.

- Do not allow children to play with the wall mount and the packaging film. Danger of suffocation.
- Make sure that children do not remove or pull off small parts from the packaging (e.g. screws). They could swallow the parts and choke.

### Danger Danger of injury/damage!



An inadequate installation location may result in damage.

- Mount the speakers such that they can not be hit accidentally and that the cables do not pose a tripping hazard. The speakers could break off, fall down and cause personal injury or be damaged.
- Do not mount the wall mounts near or directly above sources of heat (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).
- Avoid direct sunlight at the installation location.
- Verify the carrying capacity of the wall. Plasterboard walls or drywalls (Rigips etc.) may give way when exposed to excessive loads.
- Furthermore, please keep in mind that the vibrations which are generated by the speaker can be transferred to the wall by the wall mount. In case of wooden walls this may cause distortions.
- Also note the dimensions of the speaker.
- Make sure that the installation is performed in a workmanlike manner.
- Only use mounting material which is suitable for the composition of your walls. If you are unsure regarding the selection, consult an expert.
- Before drilling the holes, make sure that no pipes are located within the drilling area using a metal detector.

## Assembly

- ① 1 x base plate
- ② 1 x cover (put on base plate ①)
- ③ 1 x bracket
- ④ 1 x carriage bolt
- ⑤ 4 x half round head screw
- ⑥ 4 x masonry plug
- ⑦ 1 x nut
- ⑧ 1 x screw
- ⑨ 1 x washer
- ⑩ 1 x Allen key


If the delivery is incomplete or exhibits transport damages, please contact our service department (see page 1).

### Danger Mounting material




The enclosed mounting material (4 half round head screws ⑤ and 4 masonry plugs ⑥) is exclusively suitable for normal stone and concrete walls. Lautsprecher Teufel GmbH can in no case assume any guarantee or warranty for improper (self-)assembly or for the use of assembly materials not included in the scope of delivery by the purchaser. Make sure that the installation is performed in a workmanlike manner.

If your walls are made of a material other than stone and concrete, make sure to use mounting materials suitable for your specific walls. Always consult an expert. Adhere to the above-mentioned safety notes.

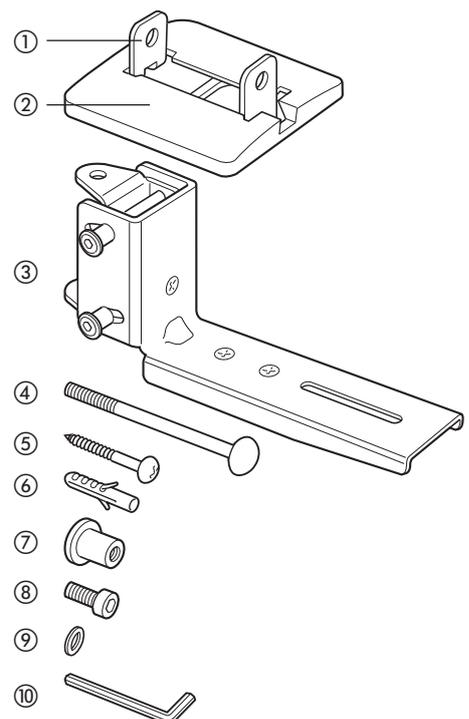


# Assembly

1. Remove the cover ② from the base plate ①.
2. Hold the base plate ① against the wall at the desired location and mark the four drill holes horizontally.
3. Drill holes with a diameter of 8 mm in the wall at the marked positions.
4. Insert four masonry plugs ⑥ in the drill holes.
5. Run the speaker cable through the holes in the base plate ① from below.

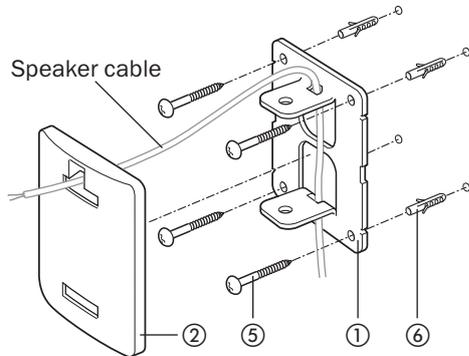


6. Screw the base plate ① on the wall using four half round head screws ⑤.
7. The cover ② is marked with "TOP" and "DOWN" inside. Run the upper end of the speaker cable through the upper hole in the cover ②.
8. Put the cover ② on the base plate ①. In the process, the speaker cable must be run through the notches on the front and bottom side.
9. Place the bracket ③ on the base plate ① and insert the carriage bolt ④ from above. Ensure that the square of the carriage bolt exactly fits into the square hole of the bracket ③.

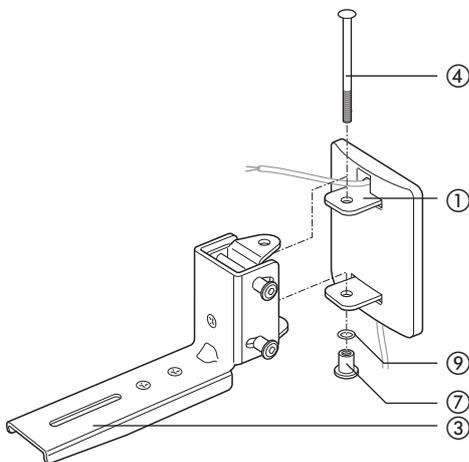


10. Tighten the carriage bolt ④ with the washer ⑨ and the nut ⑦.

11. If necessary, loosen the screws ⑪ and change the inclination of the bracket ③.  
To align the wall mount horizontally, loosen the nut ⑦, align the bracket ③ with the listening zone and tighten the nut ⑦ again.

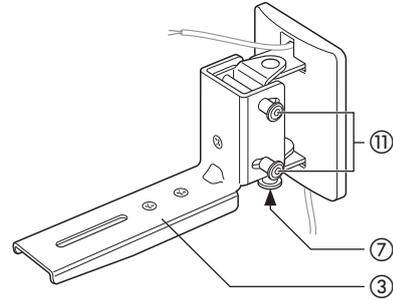

12. Screw tighten the speaker on the bracket ③ using the screw ⑧.

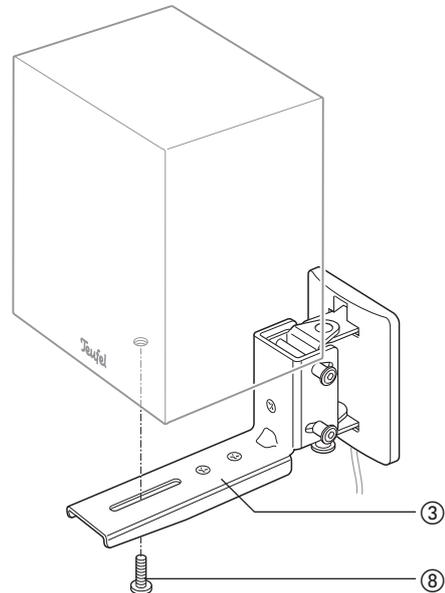

## Technical data

---

Max. carrying capacity:	25 kg
Dimensions (W x D x H):	84 x 113 x 248 mm
Net weight:	1060 g

Technical changes reserved!



Please contact our customer service department with any questions, suggestions, or complaints:

**Lautsprecher Teufel GmbH**  
BIKINI Berlin  
Budapester Str. 44  
10787 Berlin (Germany)  
[www.teufelaudio.com](http://www.teufelaudio.com)

Phone.: 00800 200 300 40 (toll-free)  
Fax: +49 (0)30 - 300 930 930  
Service: [www.teufelaudio.com/service](http://www.teufelaudio.com/service)  
Contact: [www.teufelaudio.com/contact](http://www.teufelaudio.com/contact)

No responsibility is assumed for the correctness of this information. Technical changes, typographical errors and other errors reserved.